

**TECHNICAL MANUAL**

**UNIT MAINTENANCE REPAIR PARTS  
AND SPECIAL TOOLS LIST**

**FOR**

**MULTIPLEXER**

**TD-660/G (NSN 5805-00-930-8079)  
TD-660A/G (NSN 5820-00-928-3382)  
TD-660B/G (NSN 5820-00-928-3382)  
AND TD-660C/G**

Distribution authorized to the Department of Defense and DOD contractors only for official use or for administration or operational purposes. This determination was made on 11 December 1989. Other requests for this document will be referred to Commander, US Army Communications-Electronics Command and Fort Monmouth, ATT: AMSEL-ME-LC-P, Fort Monmouth, NJ 07003-5000.

DESTRUCTION NOTICE—Destroy by any method that will prevent disclosure of contents or reconstruction of the document.

---

**HEADQUARTERS, DEPARTMENT OF THE ARMY**

**15 FEBRUARY 1990**



Technical Manual

HEADQUARTERS  
DEPARTMENT OF THE ARMY

No. 11-5805-382-20P

Washington, DC, 15 February 1990

UNIT MAINTENANCE REPAIR PARTS  
AND SPECIAL TOOLS LIST  
FOR

MULTIPLEXER TD-660/G (NSN 5805-00-930-8079)  
TD-660A/G (NSN 5820-00-928-3382)  
TD-660B/G (NSN 5820-00-928-3382)  
AND TD-660C/G  
Current as of 10 December 1989

REPORTING ERRORS AND RECOMMENDING IMPROVEMENTS

You can help improve this manual. If you find any mistakes or if you know of a way to improve the procedures, please let us know. Mail your letter, DA Form 2028 (Recommended Changes to Publications and Blank Forms), or DA Form 2028-2 located in back of this manual direct to: Commander, US Army Communications-Electronics Command and Fort Monmouth, ATTN: AMSEL-LC-ME-PS, Fort Monmouth, New Jersey 07703-5090.

In either case, a reply will be furnished direct to you.

Table of Contents

Section		Page	Illus Figure
I.	Introduction . . . . .		
II.	Repair Parts List . . . . .	1-1	
Group	00 Multiplexers TD-660/G, TD-660A/G, TD-660B/G, and TD-660C/G . . . . .	1-1	1
	01 Power Supply Monitor, 11A13 (Plain, A, A Dip, and B Models) (No parts authorized)		
	02 Filter Assembly, PCM in ALT PCM Out 11418 (A DIP and B Models) (No parts authorized)		
	03 Filter Assembly, Audio Signal 11A19 (A, A DIP, and B Models) (No parts authorized)		
	04 Panel Assembly, Transmit Timing, 11A23 (A DIP and B Models) (No parts authorized)		
	05 Panel Assembly, Modem Timing and Output, 11A34 (No parts authorized)		
	06 Panel Assembly, Coder, PAM Reshaper and Noise Generator, 11A25 (No parts authorized)		

\*This manual supersedes TM 11-5805-382-20P, 21 April 1978.

Table of contents-continued

		Page	Illus Figure
Group	07 Panel Assembly, Triple Modem, 11A26 (A DIP and B Models) (No parts authorized)		
	08 Panel Assembly, Decoder Receiver Input and Framing, 11A27 (A DIP and B Models (NO parts authorized)		
	09 Panel Assembly, Receiver Timing, 11A28 (A DIP and B Models) (No parts authorized)		
	10 Panel Assembly, Fault Locator and Alarm 11A29 (A DIP and B Model) (No parts authorized)		
	11 Filter Assembly, Transmit Timing Gen- erator 11A31 (A DIP and B Models) (No parts authorized)		
	1101 Filter Subassembly, 11A31A1 (No parts authorized)		
	1192 Filter Subassembly, 11A31A2 (No parts authorized)		
	12 Filter Assembly, Receive Timing Gen- erator, 11A32 (A DIP and B Model) (No parts authorized)		
	1201 Filter Subassembly, 11A32A1 (No parts authorized)		
	1201 Filter Subassembly, 11A32A2 (No parts authorized)		
	13 Power Supply 11A33 . . . . .	12-1	12
Section III.	Special Tools List (Not applicable)		
IV.	Cross-Reference Indexes		
	National Stock Number Index . . . . .	I-1	
	Part Number Index . . . . .	I-2	
	Figure and Item Number Index . . . . .	I-3	

SECTION I  
INTRODUCTION

---

1. Scope

This manual lists and authorizes spares and repair parts; special tools; special test, measurement, and diagnostic equipment (TMDE); and other special support equipment required for performance of unit maintenance of the TD-660/G, TD660A/G, TD660B/G and TD-660C/G. It authorizes the requisitioning, issue, and disposition of spares, repair parts, and special tools as indicated by the source, maintenance and recoverability (SMR) codes.

2. General

This Repair Parts and Special Tools List is divided into the following sections:

a. Section II. Repair Parts List. A list of spares and repair parts authorized by this RPSTL for use in the performance of maintenance. The list also includes parts which must be removed for replacement of the authorized parts. Parts lists are composed of functional groups in ascending numeric sequence, with the parts in each group listed in ascending item number sequence. Figure numbers are listed directly beneath the group header.


b. Section III. special Tools List. Not applicable.

c. Section IV. Cross-Reference Indexes. A list, in National item identification number (NIIN) sequence, of all National stock numbered items appearing in the listing, followed by a list in alphabetic sequence of all part numbers appearing in the listings. National stock numbers and part numbers are cross-referenced to each illustration figure and item number appearance. The figure number and item number index lists figure and item numbers in numeric sequence and cross-references National stock number, Federal Supply Code for Manufacturer and part numbers.

3. Explanation of Columns (Section II and III)

a. Item No. (Column (1)). Indicates the number used to identify items called out in the illustration.

b. SMR Code (Column (2)). The source, maintenance, and recoverability (SMR) code is a five-position code containing supply/requisitioning information, maintenance category authorization criteria, and disposition instructions, as shown in the following breakout:

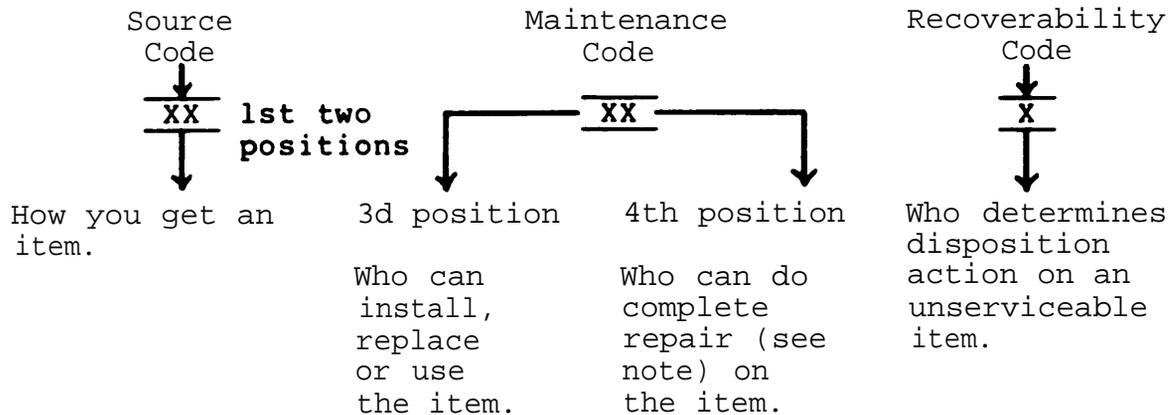

**NOTE**

Complete repair: Maintenance capacity, capability, and authority to perform all corrective maintenance tasks of the "repair" function in a use/user environment in order to restore serviceability to a failed item.

(1) Source code. The source code tells you how to get an item needed for maintenance, repair, or overhaul of an end item/equipment. Explanations of source codes follows:

<u>Code</u>	<u>Explanation</u>
PA PB PC PD PE PF PG	Stocked items: use the applicable NSN to request/requisition items with these source codes. They are authorized to the category indicated by the code entered in the third position of the SMR code.

**NOTE**

Items coded PC are subject to deterioration.

KD KF KB	Items with these codes are not to be requested/requisitioned individually. They are part of a kit which is authorized to the maintenance category indicated in the third position of the SMR code. The complete kit must be requested and applied.
----------------	--

<u>Code</u>	<u>Explanation</u>
MO - Made at org/AVUM category	Items with these codes are not to be requested/requisitioned individually. They must be made from bulk material which is identified by the part number in the description and usable on code (UOC) column and listed in the Bulk Material group of the repair parts list. If the item is authorized to you by the third position code of the SMR code, but the source code indicates it is made at a higher category, order the item from the higher category of maintenance.
MF - Made at DS/AVIM category	
MH - Made at GS category	
ML - Made at Specialized Repair Activity (SRA)	
MD - Made at Depot	

AO - Assembled by org/AVUM category	Items with these codes are not to be requested/requisitioned individually. The parts that make up the assembled item must be requisitioned or fabricated and assembled at the category of maintenance indicated by the source code. If the third position code of the SMR code authorizes you to replace the item, but the source code indicates the item is assembled at a higher category, order the item from the higher category of maintenance.
AF - Assembled by DS/AVIM category	
AH - Assembled by GS category	
AL - Assembled by SRA	
AD - Assembled by Depot	

<u>Code</u>	<u>Explanation</u>
XA - Do not requisition an "XA" coded item. Order its next higher assembly.	
XB - If an "XB" item is not available from salvage, order it using the FCSM and part number given.	
xc - Installation drawing, diagram, instruction sheet, field service drawing, that is identified by manufacturer's part number.	
XD - Item is not stocked. Order an "XD" coded item through normal supply channels using the FSCM and part number given, if no NSN is available.	

**NOTE**

Cannibalization or controlled exchange, when authorized, may be used as a source of supply for items with the above source codes, except for those source coded "XA" or those aircraft support items restricted by requirements of AR 750-1.

(2) Maintenance code. Maintenance codes tell you the category of maintenance authorized to USE and REPAIR support items. The maintenance codes are entered in the third and fourth positions of the SMR code as follows:

(a) The maintenance code entered in the third position tells you the lowest maintenance category authorized to remove, replace, and use an item. The maintenance code entered in the third position will indicate authorization to one of the following categories of maintenance.

<u>Code</u>	<u>Application/Explanation</u>
C -	Crew or operator maintenance done within organizational or aviation maintenance.
O -	Organizational or aviation unit category can remove, replace, and use the item.
F -	Direct support or aviation intermediate category can remove, replace, and use the item.
H -	General support category can remove, replace, and use the item.
L -	Specialized repair activity can remove, replace, and use the item.
D -	Depot category can remove, replace, and use the item.

(b) The maintenance code entered in the fourth position tells whether or not the item is to be repaired and identifies the lowest maintenance category with the capability to do complete repair (i.e., perform all authorized repair functions). This position will contain one of the following maintenance codes.

**NOTE**

Some limited repair may be done on the item at a lower category of maintenance, if authorized by the Maintenance Allocation Chart (MAC) and SMR codes.

<u>Code</u>	<u>Application/Explanation</u>
O -	Organizational or aviation unit is the lowest category that can do complete repair of the item.
F -	Direct support or aviation intermediate is the lowest category that can do complete repair of the item.
H -	General support is the lowest category that can do complete repair of the item.
L -	Specialized repair activity (designate the specialized repair activity) is the lowest category that can do complete repair of the item.
D -	Depot is the lowest category that can do complete repair of the item.

<u>Code</u>	<u>Application/Explanation</u>
-------------	--------------------------------

- |     |  |
|-----|--|
| Z - | Nonreparable. No repair is authorized.   |
| B - | No repair is authorized. (No parts or special tools are authorized for the maintenance of a "B" coded item.) However, the item may be reconditioned by adjusting, lubricating, etc., at the user category. |

(3) Recoverability code. Recoverability codes are assigned to items to indicate the disposition action on unserviceable items. The recoverability code is entered in the fifth position of the SMR Code as follows:

<u>Recoverability codes</u>	<u>Application/Explanation</u>
-----------------------------	--------------------------------

- |     |   |
|-----|---|
| Z - | Nonreparable item. When unserviceable, condemn and dispose of the item at the category of maintenance shown in the third position of SMR code.  |
| O - | Reparable item. When uneconomically repairable, condemn and dispose of the item at organizational or aviation unit category.  |
| F - | Reparable item. When uneconomically repairable, condemn and dispose of the item at direct support or aviation intermediate category.  |
| H - | Reparable item. When uneconomically repairable, condemn and dispose of the item at general support category.  |
| D - | Reparable item. When beyond lower category repair capability, return to depot. Condemnation and disposal of item not authorized below depot category.   |
| L - | Reparable item. Condemnation and disposal not authorized below specialized repair activity (SRA).   |
| A - | Item requires special handling or condemnation procedures because of specific reasons (e.g., precious metal content, high dollar value, critical material, or hazardous material). Refer to appropriate manuals\directives for specific instructions. |

c. FSCM (Column (3)). The Federal Supply Code for Manufacturer (FSCM) is a 5-digit numeric code which is used to identify the manufacturer, distributor, or Government agency, etc., that supplies the item.

d. Part Number (Column (4)). Indicates the primary number used by the manufacturer (individual, company, firm, corporation, or Government activity, which controls the design and characteristics of the item by means of its engineering drawings, specifications, standards, and inspection requirements to identify an item or range of items.

**NOTE**

When you use an NSN to requisition an item, the item you receive may have a different part number from the part ordered.

e. Description and Usable on Code (UOC) Column (5). This column includes the following information.

(1) The Federal item name and, when required, a minimum description to identify the item.

(2) Usable on code, when applicable (para 5).

(3) The statement "END OF FIGURE" appears just below the last item description in Column (5) for a given figure in both section II and section III.

f. Qty (Column (6)). Indicates the quantity of the item used in the breakout shown on the illustration figure, which is prepared for a functional group, subfunctional group, or an assembly. A "V" appearing in this column in lieu of a quantity indicates that the quantity is variable and the quantity may vary from application to application.

4. Explanation of Columns (Section IV)

a. National Stock Number (NSN) Index.

(1) Stock number column. This column lists the NSN by National item identification number (NIIN) sequence. The NIIN consists of the last nine digits of the NSN. When using this column to locate an item, ignore the first four digits of the NSN. When requisitioning items use the complete NSN (13 digits).

(2) Fig. column. This column lists the number of the figure where the item is identified/located. The illustrations are in numerical sequence in sections II and III.

(3) Item column. The item number identifies the item associated with the figure listed in the adjacent Fig. column. This item is also identified by the NSN listed on the same line.

b. Part Number Index. Part numbers in this index are listed by part number in ascending alphameric sequence.

(1) FSCM column. This column lists the Federal supply code for manufacturer (FSCM).

(2) Part number column. This column indicates the part number assigned to the item.

(3) Stock number column. This column lists the National stock number for the associated part number and manufacturer identified in the part number and FSCM columns to the left.

(4) Fig. column. This column lists the number of the figure where the item is identified/located in sections II and III.

(5) Item column. The item number is that number assigned to the item as it appears in the figure referenced in the adjacent figure number column.

c. Figure and Item Number Index.

(1) Fig. column. This column lists the number of the figure where the item is identified/located in sections II and III.

(2) Item column. The item number is that number assigned to the item as it appears in the figure referenced in the adjacent figure number column.

(3) Stock number column. This column lists the National stock number for the item.

(4) FSCM column. The Federal supply code for manufacturer (FSCM) is a 5-digit numeric code used to identify the manufacturer, distributor, or Government agency, etc., that supplies the item.

(5) Part number column. Indicates the primary number used by the manufacturer (individual, firm, corporation, or Government activity), which controls the design and characteristics of the item by means of its engineering drawings, specifications, standards, and inspection requirements to identify an item or range of item.

5. Special Information

a. Usable on Code. The usable on code appears in the lower left corner of the description column heading. Usable on codes are shown as "UOC" in the description column (justified left) on the first line applicable item description nomenclature. Uncoded items are applicable to all models. Identification of the usable on codes used in this RPSTL are:

<u>Code</u>	<u>Used on</u>
ATM	TD-660/G
AUY	TD-660A/G
DHF	TD-660B/G
HYY	TD-660C/G

b. Associated Publications. The publications listed below pertain to the TD-660( )s and their components

TM 11-5805-382-12, Multiplexer TD-660/G, TD-660A/G, TD-660B/G, and TD-660C/G

c. Illustrations - Listings. The illustrations in this RPSTL are identical to those published in TM 11-5805-382-34P. Only those parts coded "C" or "O" in the third position of the SMR code are listed in the tabular listing; therefore, there may be a break in the item number sequence, figure number and page number. Only illustrations containing organizational or aviation unit authorized items appear in this RPSTL.

d. National Stock Numbers. National stock Numbers (NSN's) that are missing from P source coded items have been applied for and will be added to this TM by future change/revision when they are entered in the Army Master Data File (AMDF). Until the NSN's are established and published, submit exception requisitions to: Commander, US Army Communications-Electronics Command and Fort Monmouth, ATTN: AMSEL-LC-MM, Fort Monmouth, NJ 07703-5000 for the part required to support your equipment.

## 6. How to Locate Repair Parts

### a. When National stock number or part number is not known.

(1) First. Using the table of contents, determine the assembly group or subassembly group to which the item belongs. This is necessary since figures are prepared for assembly groups and subassembly groups, and listings are divided into the same groups.

(2) Second. Find the figure covering the assembly group or subassembly group to which the item belongs.

(3) Third. Identify the item on the figure and note the item number.

(4) Fourth. Refer to the Repair Parts List for the figure to find the part number for the item number noted on the figure.

(5) Fifth. Refer to the Part Number Index to find the NSN, if assigned.

b. When National stock number or part number is known.


(1) First. Using the index of National stock numbers and part numbers, find the pertinent National stock number or part number. The NSN index is in National item identification number (NIIN) sequence (para 4 a (1)). The part numbers in the part number index are listed in ascending alphameric sequence (para 4 b ). Both indexes cross-reference you to the illustration figure and item number of the item you are looking for.

(2) Second. After finding the figure and item number, verify that the item is the one you're looking for, then locate the item number in the repair parts list for the figure.

7. Abbreviations


Not applicable.



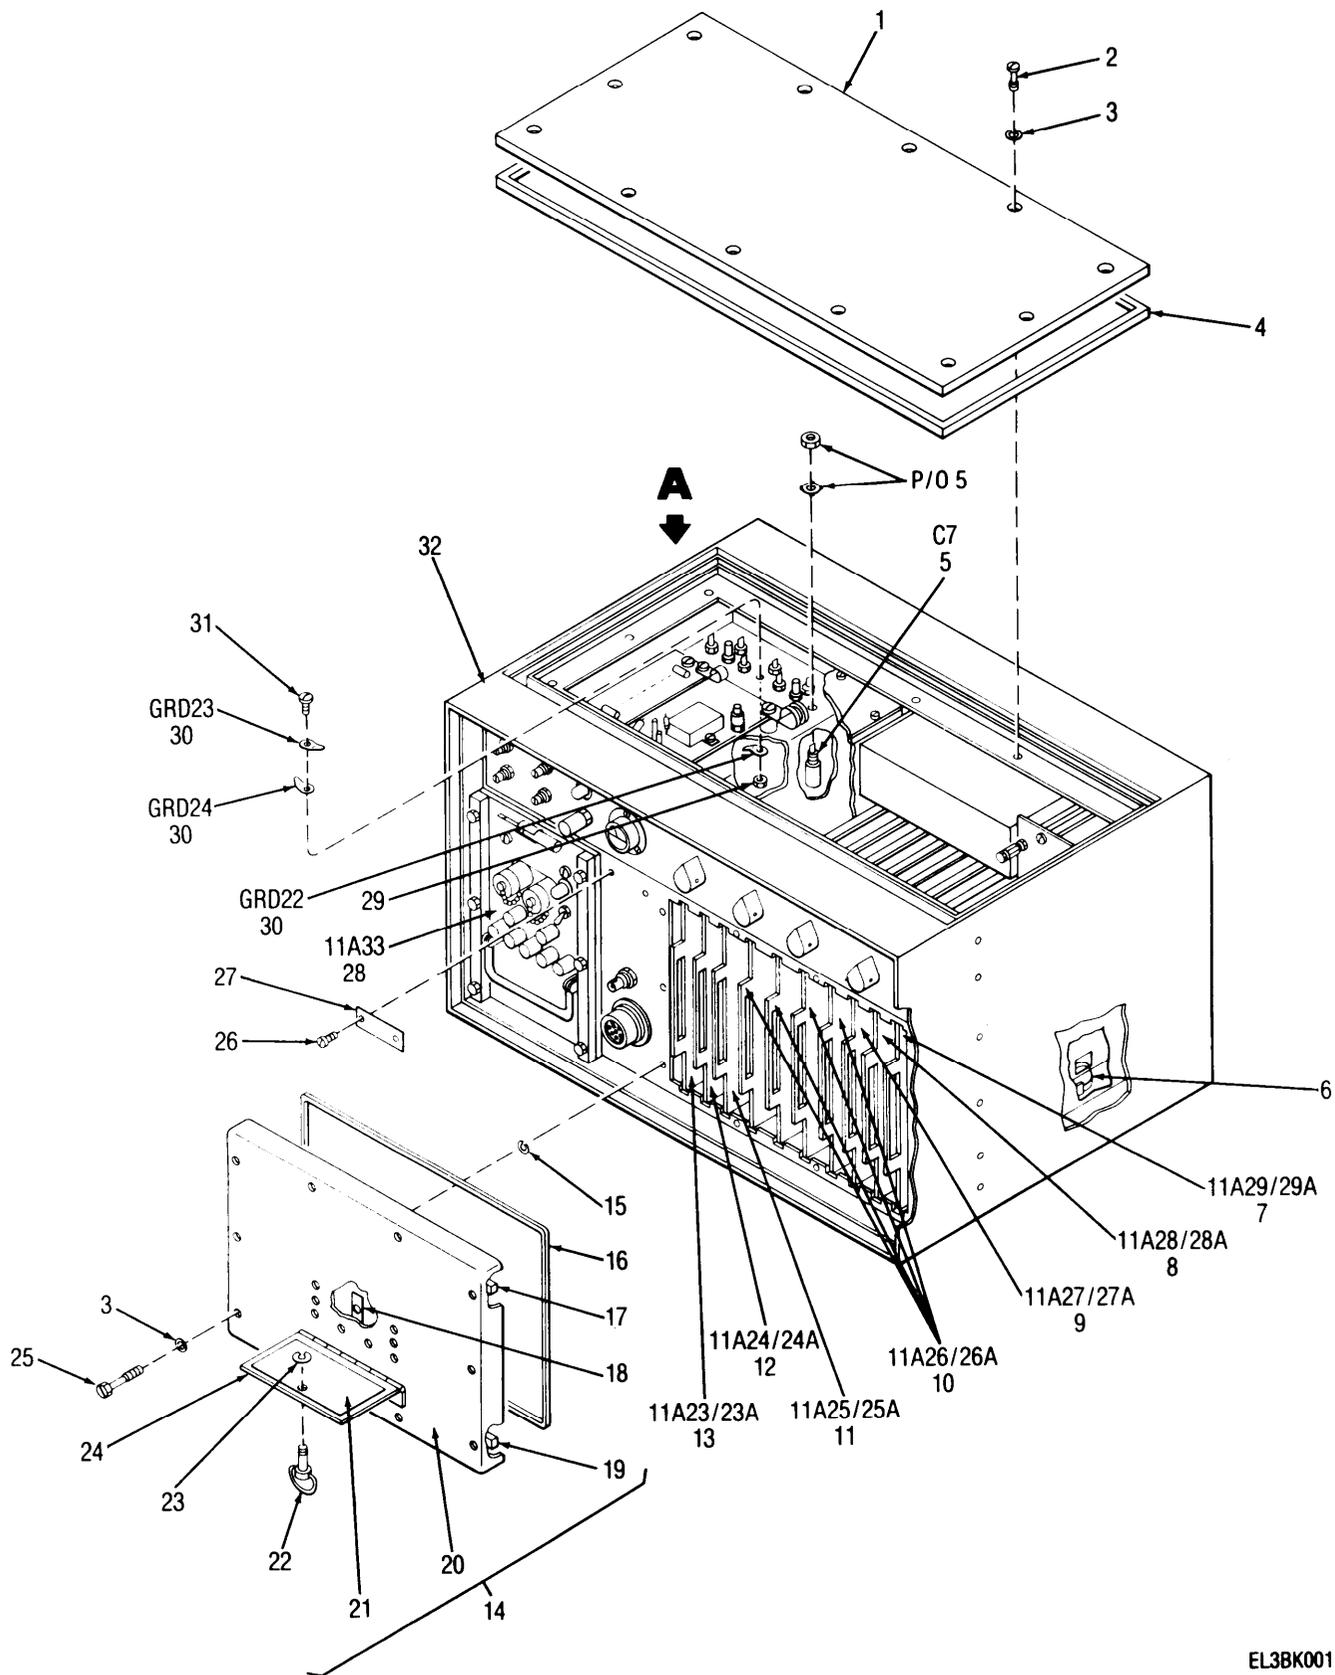

EL3BK001

Figure 1. Multiplexer TD-660/G, TD-660A1G, TD-660BfG, and TD-660C/G (Sheet 1 of 2).

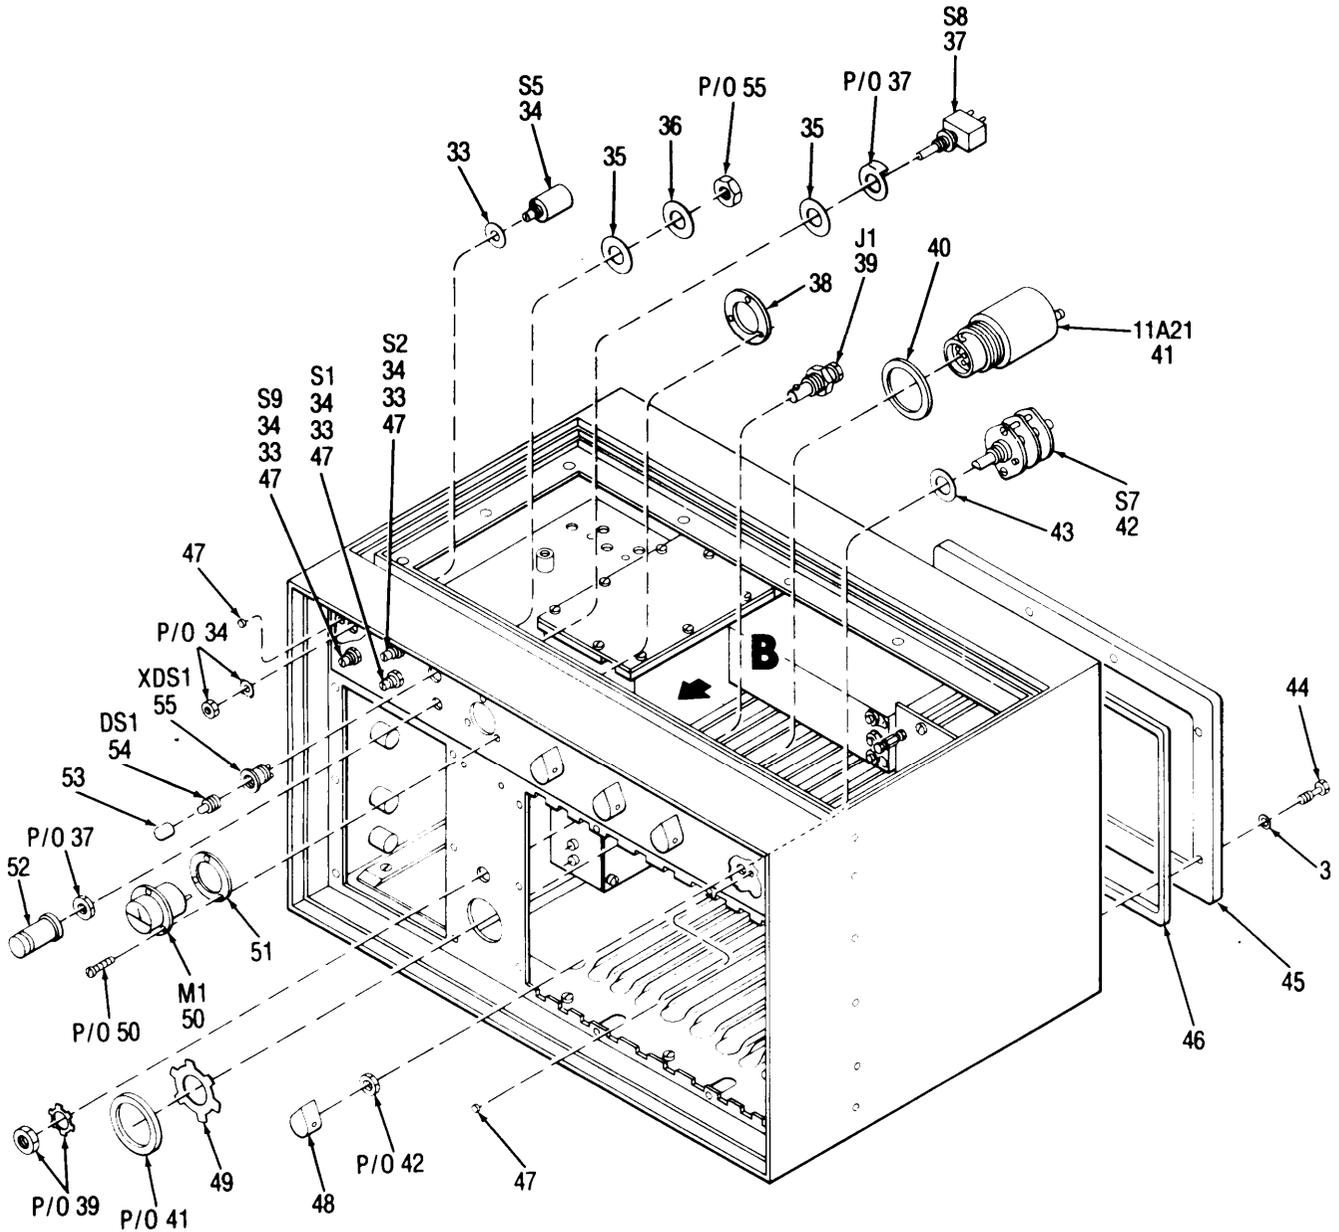

EL3BK002

Figure 1. Multiplexer TD-660/G, TD-660A/G, TD-660B/G, and TD-660C/G (Sheet 2 of 2).

(1) ITEM NO	(2) SMR CODE	(3) FSCM	(4) PART NUMBER	(5) DESCRIPTION AND USABLE ON CODE (UOC)	(6) QTY
GROUP 00 MULTIPLEXERS TD-660/G, TD-660A/G, TD660B/G & TD-660C/G					
FIGURE 1					
28	PAOHH	80063	SM-D-428361	POWER SUPPLY 11A33 (FOR PARTS BREAKDOWN SEE FIGURE 12)	1
48	PAOZZ	96906	MS91528-1K2B	KNOB	4
52	PAOZZ	80063	SM-B-525131	BOOT, DUST AND MOIST	1
53	PAOZZ	81349	LC27RT2	LENS, LIGHT	1
54	PAOZZ	96906	MS25237-327	LAMP, INCANDESCENT	1
END OF FIGURE					

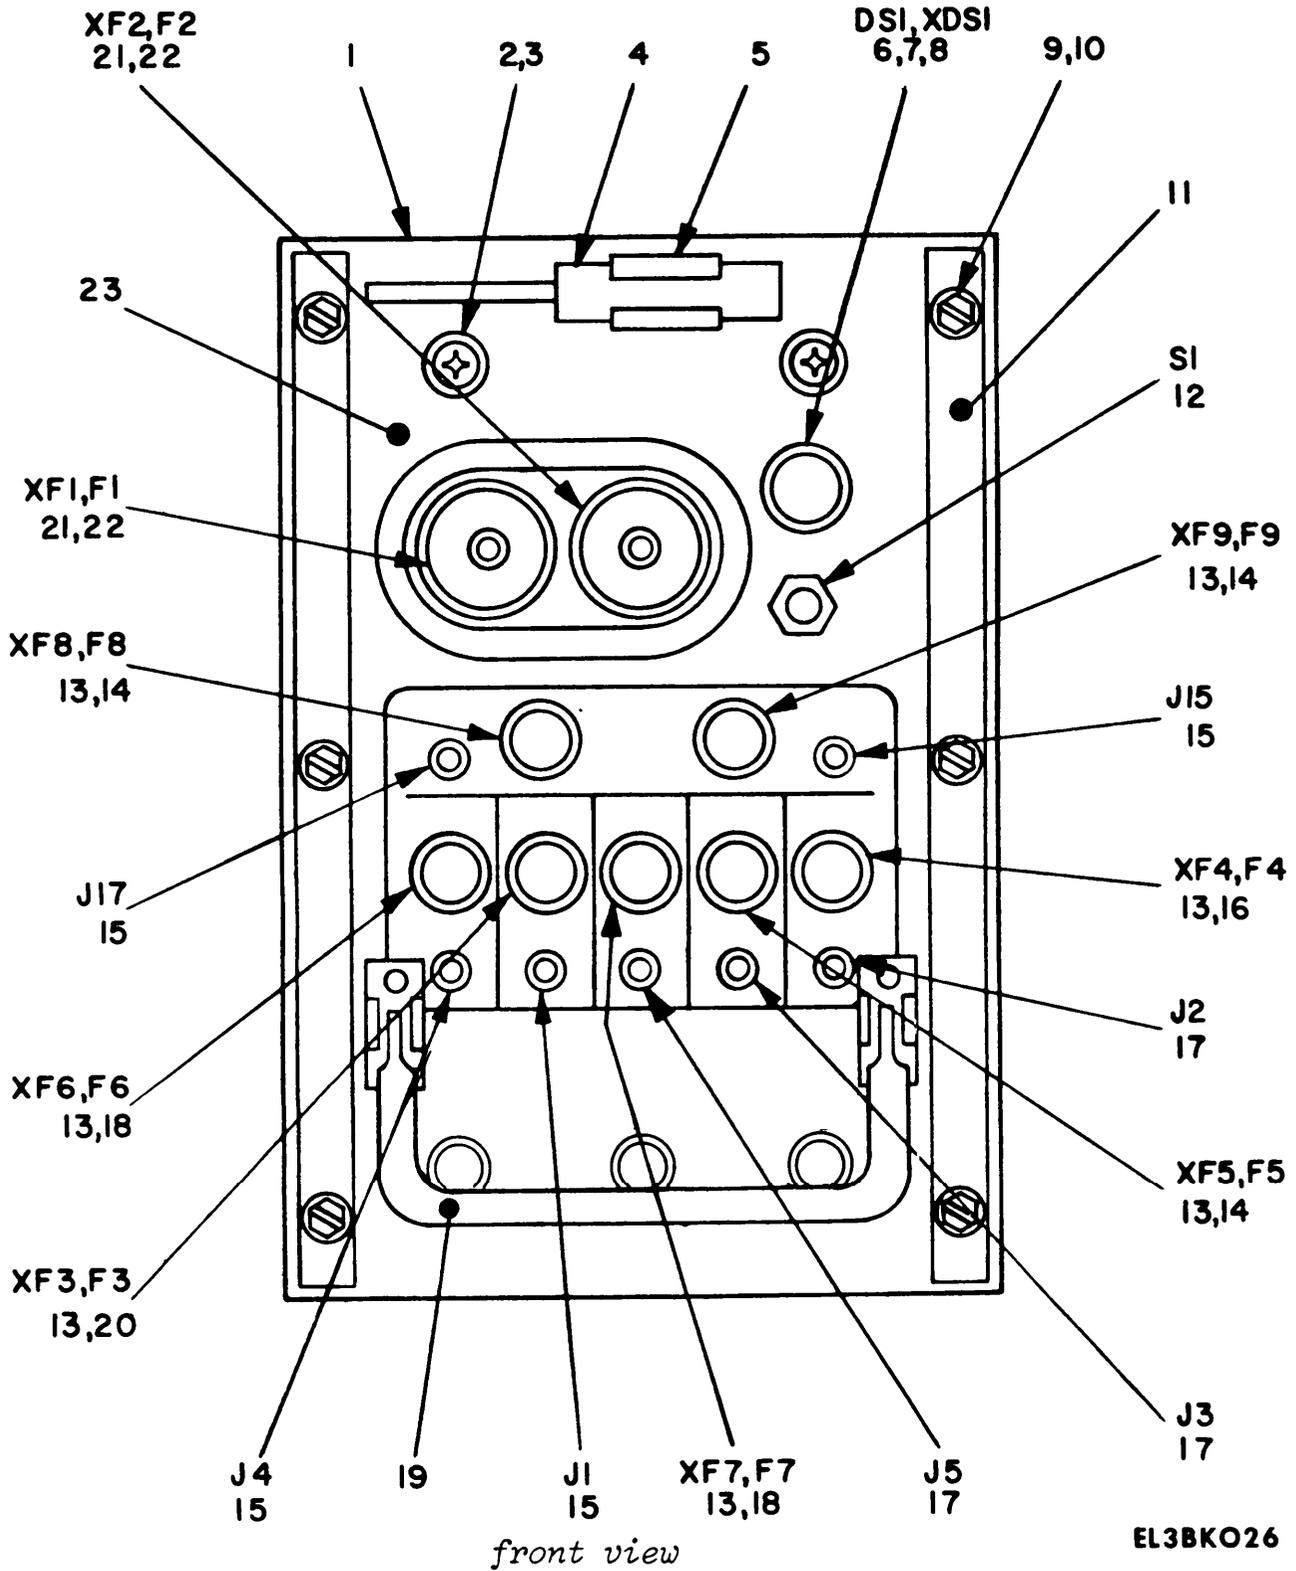


Figure 12. Power Supply

(1) ITEM NO	(2) SMR CODE	(3) FSCM	(4) PART NUMBER	(5) DESCRIPTION AND USABLE ON CODE (UOC)	(6) QTY
GROUP 13 POWER SUPPLY					
FIGURE 12					
4	PAOZZ	80063	SM-B-730031	ALIGNMENT TOOL,ELEC	4
6	PAOZZ	81349	M15098/11-001	LAMP,GLOW	1
8	PAOZZ	81349	LC28YN2	LENS,LIGHT	1
14	PAOZZ	81349	FM02A125V5/10A	FUSE,CARTRIDGE	3
16	PAOZZ	81349	FM02A125V 3/4A	FUSE,CARTRIDGE	1
18	PAOZZ	81349	FM02A125V1-1/2A	FUSE,CARTRIDGE	2
20	PAOZZ	81349	FM02125V 3A	FUSE,CARTRIDGE	1
22	PAOZZ	81349	F02A250V1A	FUSE,CARTRIDGE	2
END OF FIGURE					



## CROSS-REFERENCE INDEXES

## NATIONAL STOCK NUMBER INDEX

STOCK NUMBER	FIG.	ITEM	STOCK NUMBER	FIG.	ITEM
6240-00-155-7836	1	54			
5930-00-220-5705	1	52			
5920-00-280-8342	12	22			
6210-00-451-8323	12	8			
6210-00-482-6281	1	53			
5355-00-556-0145	1	48			
6240-00-892-4420	12	6			
5920-00-905-1831	12	16			
5920-00-926-7445	12	20			
5920-00-929-7899	12	18			
5920-00-936-3946	12	14			
5805-01-012-5444	1	28			

## CROSS-REFERENCE INDEXES

FSCM	PART NUMBER	PART NUMBER INDEX		FIG.	ITEM
		STOCK NUMBER			
81349	FM02A125V 3/4A	5920-00-905-1831		12	16
81349	FM02A125V1-1/2A	5920-00-929-7899		12	18
81349	FM02A125V5/10A	5920-00-936-3946		12	14
81349	FM02125V 3A	5920-00-926-7445		12	20
81349	F02A250V1A	5920-00-280-8342		12	22
81349	LC27RT2	6210-00-482-6281		1	53
81349	LC28YN2	6210-00-451-8323		12	8
96906	MS25237-327	6240-00-155-7836		1	54
96906	MS91528-1K2B	5355-00-556-0145		1	48
81349	M15098/11-001	6240-00-892-4420		12	6
80063	SM-B-525131	5930-00-220-5705		1	52
80063	SM-B-730031			12	4
80063	SM-D-428361	5805-01-012-5444		1	28

## CROSS-REFERENCE INDEXES

FIG.	ITEM	FIGURE AND ITEM NUMBER INDEX		
		STOCK NUMBER	FSCM	PART NUMBER
1	28	5805-01-012-5444	80063	SM-D-428361
1	48	5355-00-556-0145	96906	MS91528-1K2B
1	52	5930-00-220-5705	80063	SM-B-525131
1	53	6210-00-482-6281	81349	LC27RT2
1	54	6240-00-155-7836	96906	MS25237-327
12	4		80063	SM-B-730031
12	6	6240-00-892-4420	81349	M15098/11-001
12	8	6210-00-451-8323	81349	LC28YN2
12	14	5920-00-936-3946	81349	FM02A125V5/10A
12	16	5920-00-905-1831	81349	FM02A125V 3/4A
12	18	5920-00-929-7899	81349	FM02A125V1-1/2A
12	20	5920-00-926-7445	81349	FM02125V 3A
12	22	5920-00-280-8342	81349	F02A250V1A



RECOMMENDED CHANGES TO EQUIPMENT TECHNICAL PUBLICATIONS



THEN... JOT DOWN THE DOPE ABOUT IT ON THIS FORM, CAREFULLY TEAR IT OUT, FOLD IT AND DROP IT IN THE MAIL!

SOMETHING WRONG WITH THIS PUBLICATION?

FROM: (PRINT YOUR UNIT'S COMPLETE ADDRESS)  
 Commander  
 Stateside Army Depot  
 ATTN: AMSTA-US  
 Stateside, N.J. 07703-5007

DATE SENT 10 July 1975

PUBLICATION NUMBER TM 11-5840-340-20P	PUBLICATION DATE 23 Jan 78	PUBLICATION TITLE Radar Set AN/PRC-76
--	-------------------------------	--

BE EXACT PIN-POINT WHERE IT IS				IN THIS SPACE TELL WHAT IS WRONG AND WHAT SHOULD BE DONE ABOUT IT:
PAGE NO	PARA-GRAPH	FIGURE NO	TABLE NO	
33				For item 2, change the NSN to read: 5835-00-134-9186. <u>Reason:</u> Accuracy.
44		19		Identify the cover on the junction box (item no. 5). <u>Reason:</u> It is a separate item and is not called out on figure 19.
45				Add the cover of the junction box as an item in the listing for figure 19. <u>Reason:</u> Same as above

SAMPLE

TEAR ALONG PERFORATED LINE

PRINTED NAME, GRADE OR TITLE, AND TELEPHONE NUMBER  
 SSG I. M. DeSpirit of 999-1776

SIGN HERE

FILL IN YOUR  
UNIT'S ADDRESS

FOLD BACK

DEPARTMENT OF THE ARMY

\_\_\_\_\_  
\_\_\_\_\_

OFFICIAL BUSINESS



**SAMPLE**

Commander  
US Army Communications-Electronics Command  
and Fort Monmouth  
ATTN: AMSEL-LC-ME-PS  
Fort Monmouth, New Jersey 07703-5000

TEAR ALONG PERFORATED LINE



FILL IN YOUR  
UNIT'S ADDRESS

FOLD BACK

DEPARTMENT OF THE ARMY

\_\_\_\_\_  
\_\_\_\_\_

OFFICIAL BUSINESS


**BUSINESS REPLY MAIL**

FIRST CLASS MAIL PERMIT NO. 144 RED BANK, NJ

POSTAGE WILL BE PAID BY

Commander  
US Army Communications-Electronics Command  
and Fort Monmouth  
ATTN: AMSEL-LC-ME-PS  
Fort Monmouth, New Jersey 07703-9988

NO POSTAGE  
NECESSARY  
IF MAILED  
IN THE  
UNITED STATES

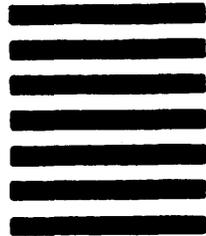

TEAR ALONG PERFORATED LINE



FOLD BACK



FILL IN YOUR  
UNIT'S ADDRESS

FOLD BACK


DEPARTMENT OF THE ARMY

\_\_\_\_\_  
\_\_\_\_\_

OFFICIAL BUSINESS



NO POSTAGE  
NECESSARY  
IF MAILED  
IN THE  
UNITED STATES

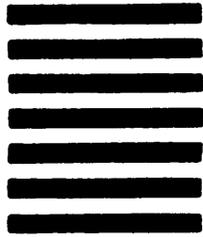

**BUSINESS REPLY MAIL**  
FIRST CLASS MAIL PERMIT NO. 144 RED BANK, NJ

POSTAGE WILL BE PAID BY

Commander  
US Army Communications-Electronics Command  
and Fort Monmouth  
ATTN: AMSEL-LC-ME-PS  
Fort Monmouth, New Jersey 07703-9988



FOLD BACK

TEAR ALONG PERFORATED LINE

RECOMMENDED CHANGES TO EQUIPMENT TECHNICAL PUBLICATIONS



THEN...JOT DOWN THE DOPE ABOUT IT ON THIS FORM. CAREFULLY TEAR IT OUT, FOLD IT AND DROP IT IN THE MAIL.

SOMETHING WRONG WITH THIS PUBLICATION?

FROM: (PRINT YOUR UNIT'S COMPLETE ADDRESS)

DATE SENT

PUBLICATION NUMBER

TM 11-5805-382-20P

PUBLICATION DATE

15 Feb 1990

PUBLICATION TITLE

Multiplexers TD-660/G, TD-660A/G, TD-660B/G and TD-660C/G

BE EXACT PIN-POINT WHERE IT IS

PAGE NO.	PARA-GRAPH	FIGURE NO.	TABLE NO.

IN THIS SPACE TELL WHAT IS WRONG AND WHAT SHOULD BE DONE ABOUT IT:

TEAR ALONG PERFORATED LINE

PRINTED NAME GRADE OR TITLE AND TELEPHONE NUMBER

SIGN HERE

DA FORM 2028-2  
1 JUL 79

PREVIOUS EDITIONS ARE OBSOLETE

P.S...IF YOUR OUTFIT WANTS TO KNOW ABOUT YOUR RECOMMENDATION MAKE A CARBON COPE OF THIS AND GIVE IT TO YOUR HEADQUARTERS.

FILL IN YOUR  
UNIT'S ADDRESS

FOLD BACK

DEPARTMENT OF THE ARMY

\_\_\_\_\_  
\_\_\_\_\_

OFFICIAL BUSINESS



NO POSTAGE  
NECESSARY  
IF MAILED  
IN THE  
UNITED STATES



**BUSINESS REPLY MAIL**  
FIRST CLASS MAIL PERMIT NO. 144 RED BANK, NJ

POSTAGE WILL BE PAID BY

Commander  
US Army Communications-Electronics Command  
and Fort Monmouth  
ATTN: AMSEL-LC-ME-PS  
Fort Monmouth, New Jersey 07703-9988

TEAR ALONG PERFORATED LINE



FOLD BACK

By Order of the Secretary of the Army:

CARL E. VUONO  
*General, United States Army*  
*Chief of Staff*

Official:

WILLIAM J. MEEHAN II  
*Brigadier General, United States Army*  
*The Adjutant General*

DISTRIBUTION:

To be distributed in accordance with DA Form 12-51 unit requirements  
for TD-660/G.





