

DEPARTMENT OF THE ARMY TECHNICAL MANUAL
DEPARTMENT OF THE AIR FORCE TECHNICAL ORDER

TM 11-5820-222-10
TO 31R2-2TRC68-1

OPERATOR'S MANUAL

RADIO SETS AN/VRC-24
AND AN/TRC-68

This copy is a reprint which changes in force
C4, C6, C9, C10 and C11.

DEPARTMENTS OF THE ARMY AND THE AIR FORCE
7 JUNE 1960

W A R N I N G

**D A N G E R O U S V O L T A G E S E X I S T A T A N T E N N A A N D
A C P O W E R C O N N E C T O R S**

Be careful when working around the antenna or the antenna connectors, as high radiofrequency voltages exist at these points. Be careful when working on the ac power connector to Receiver-Transmitter Case CY-2712/TRC-68. Serious injury or death may result from contact with these connectors.

Changes in force: C4, C6, C9, C10 and C11

TM 11-5820-222-10
31R2-2TRC68-1
C11

Change

No. 11

}

DEPARTMENT OF THE ARMY AND
AIR FORCE

Washington, DC, 1 July 1989

Operator's Manual

**RADIO SETS AN/VRC-24, AN/VRC-24A,
AN/TRC-68 AND AN/TRC-68A**

TM 11-5820-222-10/31R2-2TRC68-1, 7 June 1960, is changed as follows:

Page 27. Appendix II, Section II is superseded as follows:

Distribution authorized to the Department of Defense and DOD contractors only for official use or for administration or operational purposes. This determination was made on 5 July 1988. Other requests for this document will be referred to Commander, US Army Communications-Electronics Command and Fort Monmouth, ATTN: AMSEL-LC-ME-P, Fort Monmouth, NJ 07703-5000.

DESTRUCTION NOTICE - Destroy by any method that will prevent disclosure of contents or reconstruction of the document.

Section II. BASIC ISSUE ITEMS LIST

(1) Illustration		(2) Federal stock number	(3) Part number	(4) FSCM	(5) Description	Usable on code	(6) Unit of meas	(7) Qty furn with equip
(A) Fig. No.	(B) Item No.							
2,8		5820-999-2627	SC-DL-345283A	80063	CASE ACCESSORIES CY-2713/TRC-68	2,4	EA	1
		5820-999-2627			CASE, STANDARD COMPONENTS CY-4868/TRC-68A	4	EA	1
		5820-752-0107			COVER, RECEIVER TRANSMITTER CANVAS DUCK	2,4	EA	1
		5820-752-5982			COVER, RECEIVER, TRANSMITTER, CANVAS DUCK, (labeled RT-441/TRC-68)	2	EA	1
		5820-973-0510	D-434927	98738	COVER, RECEIVER TRANSMITTER	4	EA	1
5		5820-995-9430			CASE, RECEIVER TRANSMITTER, CY-2557/VRC-24, CY-2557A/VRC-24A	1,3	EA	1
6		5820-681-9916			CASE, RECEIVER TRANSMITTER CY-2712/TRC-58, CY-2712/TRC-68A	2,4	EA	1
		5820-973-2568	SM-B-355102A	80063	CONVERSION KIT ASSEMBLY	2,4	EA	1

By Order of the Secretaries of the Army and the Air Force:

CARL E. VUONO
General, United States Army
Chief of Staff

Official:

WILLIAM J. MEEHAN II
Brigadier General, United States Army
The Adjutant General

Official:

WILLIAM O. NATIONS
Colonel, USAF
Director of Information
Management and Administration

LARRY D. WELSH
General, USAF
Chief of Staff

DISTRIBUTION:

To be distributed in accordance with DA Form 12-51 Operator requirements for AN/VRC-24,A.

CHANGE

No. 10

}

HEADQUARTERS
DEPARTMENT OF THE ARMY
WASHINGTON, D.C., 3 December 1973

Operator's Manual

RADIO SETS AN/VRC-24, AN/VRC-24A, AN/TRC-68 AND AN/TRC-68A

TM 11-5820-222-10/TO 31R2-2TRC68-1, 7 June 1960, is changed as follows:

Page 3, paragraph 2. Delete paragraph 2 and substitute new paragraph 2.

1. Forms and Records

a. *Reports of Maintenance and Unsatisfactory Equipment.* Maintenance forms, records, and reports which are to be used by maintenance personnel at all maintenance levels are listed in and prescribed by TM 38-750.

b. *Report of Packaging and Handling Deficiencies.* Fill out and forward DD Form 6 (Report of Packaging and Handling Deficiencies) as prescribed in AR 700-58 (Army)/NAVSUP PUB 378 (Navy)/AFR 71-4 (Air Force)/and MCO 4030.29 (Marine Corps).

c. *Discrepancy in Shipment Report (DISREP) (SF 361).* Fill out and forward Discrepancy in Shipment Report (DISREP) (SF 361) as pre-

scribed in AR 55-38 (Army)/NAVSUP PUB 459 (Navy)/AFM 75-34 (Air Force)/and MCO P4610.19 (Marine Corps).

Add paragraph 2.1 after paragraph 2.

2.1. Reporting of Equipment Publication Improvements

The reporting of errors, omissions, and recommendations for improving this publication by the individual user is encouraged. Reports should be submitted on DA Form 2028 (Recommended Changes to Publications) and forwarded direct to Commander, US Army Electronics Command, ATTN: AMSEL-MA-C, Fort Monmouth, NJ 07703.

Page 7, paragraph 5. Change the title of paragraph 5 to "Components and Dimensions."

Delete subparagraph c.

After paragraph 5 add paragraph 5.1.

5.1. Items Comprising Operable Radio Sets AN/VRC-24 (FSN 5820-543-1977), AN/VRC-24 (FSN 5820-892-3722), AN/TRC-68 (FSN 5820-682-2718), and AN/TRC-68A (FSN 5820-892-3723)

FSN Qty Nomenclature, part No., and mfr code Usable on code

NOTE

The part number is followed by the applicable 5-digit Federal supply code for manufacturers (FSCM) identified in SB 708-42 and used to identify manufacturer, distributor, or Government agency, etc.

NOTE

Number 1 in the usable on code column refers to Radio Set AN/VRC-24; number 2 refers to Radio Set AN/TRC-68; number 3 refers to Radio Set AN/VRC-24A; and number 4 refers to Radio Set AN/TRC-68A.

5935-500-5977	1	Adapter, Connector, UG-565A/U	2,4
	1	Antenna, AT-197/GR	2,4
5820-543-1984	1	Antenna, AT-803/VR	1,3
5995-577-8414	1	Cable Assembly, Power, Electrical, CX-4629/U, 8 ft, SM-C-345250F, 80063	1,3
5995-682-3426	1	Cable Assembly, Power Electrical, CX-4881/U, 25 ft 5 in, SM-C-345266C, 80063	
5995-577-8415	1	Cable Assembly, Radiofrequency, CG-1650/U, 6 ft, SM-C-345252B, 80063	1,3
5995-682-3402	1	Cable Assembly, Special Purpose, Electrical CX-4882/U, 20 ft 6 in., SM-D-345263E, 80063	2,4
5995-682-3404	1	Cable Assembly, Special Purpose, Electrical CX-4883/U, 3 ft, SM-D-345268E, 80063	1,3
5995-682-3405	1	Cable Assembly, Special Purpose, Electrical CX-4884/U, 3 ft, SM-D-345254G, 80063	1,2,3,4
5820-644-4554	1	Control Group, AN-GRA-6	2,4
5620-543-1979	1	Control, Radio Set, C-1439/U	1,2,3,4
5995-264-7839	1	Headset Cord CX-1334/U	1,2,3,4
5965-504-6370	1	Headset, Electric, H-113/U	1,2,3,4
5965-243-6420	1	Loudspeaker, LS-166/U	1,2,3
5820-026-8849	1	Mast Assembly AB-282/GRC	2
5965-892-0722	1	Microphone, M-29B/U	1,2,3,4
5920-775-0386	1	Mounting, MT-2297/TRC-68	2,4
5820-752-0548	1	Receiver Transmitter Group AO-2648/VRC-24	1
5820-892-3720	1	Receiver Transmitter, OA-2648A/VRC-24A	3
5820-752-0549	1	Receiver Transmitter Group, OA-2649/TRC-68	2
5820-892-3721	1	Receiver Transmitter, OA-2649A/TRC-68A	:
6145-226-8812	1	Cable, Telephone, (WD-1), 1320 ft per signal reel, DR-8	2
6125-577-8417	1	Dynamotor, DY-151/U, SC-DL-344929, 80063	1,3
4140-805-0666	1	Fan, Centrifugal, HD-390/U, HD-390A/U	2,4
5820-679-3434	1	Mounting MT-1436/U, SC-DL-344948, 80063	1,3
5820-775-0386	1	Mounting MT-2297/TRC-68	2,4
5820-682-3399	1	Power Supply, PP-1494/U, SC-DL-345194A, 80063	2,4
5820-543-1978	1	Receiver Transmitter, TR-323/VRC-24	1
5820-892-3724	1	Receiver Transmitter, RT-323A/VRC-24, SC-DL-343840F, 80063	3
5820-681-9917	1	Receiver Transmitter, RT-441/TRC-68	2
5820-892-3725	1	Receiver Transmitter, RT-441A/TRC-68	

After paragraph 5.1 add paragraph 5.2.

5.2. Running Spares

<i>FSN</i>	<i>Qty</i>	<i>Item</i>	<i>Usable on code</i>
5920-043-2941	3	Fuse Cartridge: F02A250-1/4 A; 96906	1,2,3,4
5920-281-0224	4	Fuse Cartridge: F02A250V-1/2 A; 96906	1,2,3,4
	3	Fuse Cartridge: F02B125V3A; 96906	2,4
5920-755-3656	4	Fuse Cartridge: F03B32V30A; 96906	2,4
5920-280-5066	4	Fuse Cartridge: MDX-5; 71400	2
	2		4
5920-057-2986	4	Fuse Cartridge: MDL 15; 71400	1,3
5920-199-9502	4	Fuse Cartridge: ABC-15; 71400	1,3
5920-284-6796	1	Fuse Cartridge: F03G5R0B; 81349	1,2,3,4
5920-503-2203	2	Fuse Cartridge: F02B250V1/8A; 96906	2,4
5920-504-9633	1	Fuse Cartridge: F03A32V15A; 81349	2,4
5920-280-9328	2	Fuse Cartridge: F02B125V1 1/2A; 81349	2,4
5920-755-3235	2	Fuse Cartridge: F02B250V3/4A; 81349	2,4
5960-262-1957	1	Tube, Electron 5654/6AK5W; 81349	4
5960-188-6584	1	Tube, Electron 5670; 81349	4
5960-188-3915	1	Tube, Electron 5763; 81349	4
5960-995-9177	1	Tube, Electron 6F4WB; 81349	4
5960-617-3541	1	Tube, Electron 6442; 81349	4
5960-840-5465	1	Tube Electron 7554; 81349	4
5960-840-1055	1	Tube, Electronic 7609 (See note below); 81349	4

NOTE

On Order No. 19275-PC-60, serial numbers 41 and above; the AN/VRC-24A, and AN/VRC-68A, electron tube 7609 is included in place of electron tube 4X150D.

APPENDIX II BASIC ISSUE ITEMS LIST

Section I. INTRODUCTION

1. Scope

This appendix lists basic issue items required by the crew/operator for installation, operation, and maintenance of Radio Sets AN/VRC-24, AN/TRC-68, AN/VRC-24A, and AN/TRC-68A.

2. General

The basic issue items list, as a list, in alphabetical sequence, of items which are furnished with, and which must be turned in with the end item.

3. Explanation of Columns

The following provides an explanation of columns found in the tabular listings:

a. *Illustration*. This column is divided as follows:

(1) *Figure number*. Indicates the figure number of the illustration in which the item is shown.

(2) *Item number*. Not applicable.

b. *Federal Stock Number*. Indicates the Federal stock number assigned to the item and will be used for requisitioning purposes.

c. *Part Number*. Indicates the primary number used by the manufacturer (individual, company, firm, corporation, or Government activity), which controls the design and characteristics of the item by means of its engineering drawings, specifications standards, and inspection requirements, to identify an item or range of items.

d. *Federal Supply Code for Manufacturer (FSCM)*. The FSCM is a 5-digit numeric code used to identify the manufacturer, distributor, or Government agency, etc., and is identified in SB 708-42.

e. *Description*. Indicates the Federal item name and a minimum description required to identify the item.

f. *Unit of Measure (U/M)*. Indicates the standard of basic quantity of the listed item as used in performing the actual maintenance function. This measure is expressed by a two-character alphabetical abbreviation, (e.g., ea, in., pr, etc.). When the unit of measure differs from the unit of issue, the lowest unit of issue that will satisfy the required units of measure will be requisitioned.

g. *Quantity Furnished with Equipment (Basic Issue Items Only)*. Indicates the quantity of the basic issue item furnished with the equipment.

4. Special Information

Usable on codes are included in Column 5. Uncoded items are applicable to all models. Identification of the usable on codes are as follows:

Code	Used on
1.....	Radio Set AN/VRC-24
2.....	Radio Set AN/TRC-68
3.....	Radio Set AN/VRC-24A
4.....	Radio Set AN/TRC-68A

Section II. BASIC ISSUE ITEMS LIST

(1) Illustration		(2) Federal stock number	(3) Part number	(4) FSCM	(5) Description	Usable on rote	(6) Unit of meas	(7) Qty furn with equip
(A) Fig. No.	(B) Item No.							
2,8		5820-999-2627	SC-DL-345283A	80063	CASE ACCESSORIES CY-2713/TRC-68		EA	1
		5820-999-2627			CASE, STANDARD COMPONENTS CY-4868/TRC-68A	4	EA	1
		5820-752-0107			COVER, RECEIVER TRANSMITTER CANVAS DUCK	2,4	EA	1
		5820-752-5082			COVER, RECEIVER, TRANSMITTER, CANVAS DUCK, (labeled RT-441/TRC-68)	2	EA	1
		5820-973-0510	D-434927	98738	COVER, RECEIVER TRANSMITTER	4	EA	1
5		5820-995-9430			CASE, RECEIVER TRANSMITTER, CY-2557/VRC-24, CY-2557A/VRC-24A	1,3	EA	1
6		5820-681-9016			CASE, RECEIVER TRANSMITTER CY-2712/TRC-58, CY-2712/TRC-68A	2,4	EA	1
		5820-973-2568	SM-B-355102A	80063	CONVERSION KIT ASSEMBLY	2,4	EA	1

By Order of the Secretary of the Army

CREIGHTON W. ABRAMS
General, United States Army
Chief of Staff

Official:

VERNE L. BOWERS
Major General, United States Army
The Adjutant General

Distribution:

To be distributed in accordance with DA Form 12-51, Operator's Maintenance requirements for AN/TRC-68 and AN/VRC-24.

CHANGE }
No. 9 }

HEADQUARTERS
DEPARTMENT OF THE ARMY
WASHINGTON, D. C., 23 July 1968

Operator's Manual

RADIO SETS AN/VRC-24, AN/VRC-24A, AN/TRC-68, AND AN/TRC-68A

TM 11-5820-222-10, 7 June 1960, is changed as follows:

Note. The parenthetical reference to previous changes (example: page 1 of C 6) indicates that pertinent material was published in that change.

Page 3, paragraph 1-1 (page 1 of C 6). Make the following changes:

Delete paragraph 1.1 and substitute:

1.1 Indexes of Equipment Publications

a. *DA Pam 310-4.* Refer to the latest issue of DA Pam 310-4 to determine whether there are new editions, changes, or additional publications pertaining to the equipment.

b. *DA Pam 310-7.* Refer to the latest issue of DA Pam 310-7 to determine whether there are modification work orders (MWO's) pertaining to the equipment.

Paragraph 2 (as changed by C 7, 27 May 63, and C 8, 12 Nov 64). Delete paragraph 2 and substitute:

2. Forms and Records

a. *Reports of Maintenance and Unsatisfactory Equipment.* Use equipment forms and records in accordance with instructions given in TM 38-750.

b. *Report of Packaging and Handling De-*

ficiencies. Fill out and forward DD Form 6 (Report of Packaging and Handling Deficiencies) as prescribed in AR 700-58 (Army), NAVSUP Publication 378 (Navy), AFR 71-4 (Air Force), and MCO P4610-5 (Marine Corps).

c. *Discrepancy in Shipment Report (DISREP) (SF 361).* Fill out and forward Discrepancy in Shipment Report (DISREP) (SF 361) as prescribed in AR 55-38 (Army), NAVSUP Publication 459 (Navy), AFM 75-34 (Air Force) and MCO P4610.19 (Marine Corps).

d. *Report of Equipment Manual Improvements.* Report of errors, omissions, and recommendations for improving this manual by the individual user is encouraged. Reports should be submitted on DA Form 2028 (Recommended Changes to DA Publications) and forwarded direct to Commanding General, U. S. Army Electronics Command, ATTN: AMSEL-ME-NMP-AD, Fort Monmouth, N. J. 07703.

Paragraph 2.1 (as changed by C 7, 27 May 63). Delete paragraph 2.1.

Page 7, paragraph 5b. Add the following data to the table:

*This change supersedes C 7, 27 May 1963, and C 8, 12 November 1964.

Quantity	Item	Fig. No.	Height (in.)	Depth (in.)	Width (in.)	Unit weight (lb)
1	Centrifugal Fan HD-390A/U.	6	3 3/16	8 7/8	3 3/16	4
1	Case, Standard Component CY-4868/TRC-68A.	8.1	13 3/8	22 3/8	18 3/8	40

Page 8, paragraph 5c (as changed by C 8, 12 Nov 64). Insert the following note after the heading of subparagraph c.

Note: On order No. 32626-PC-63, electron tube 6J4 WA has been replaced by electron tube 6J4WB.

Make the following changes in paragraph 5c(2):

Line 8, Quantity column: Delete 3 and substitute: 4.

Line 9, Quantity column: Delete 3 and substitute: 1.

Line 10, Quantity column: Delete 5 and substitute: 3.

Last line, Quantity column: Delete 5 and substitute: 3.

Add the following to the chart:

Quantity column: 1; Item column: Cover, dust.

Page 11. Add figure 8.1 after figure 8:

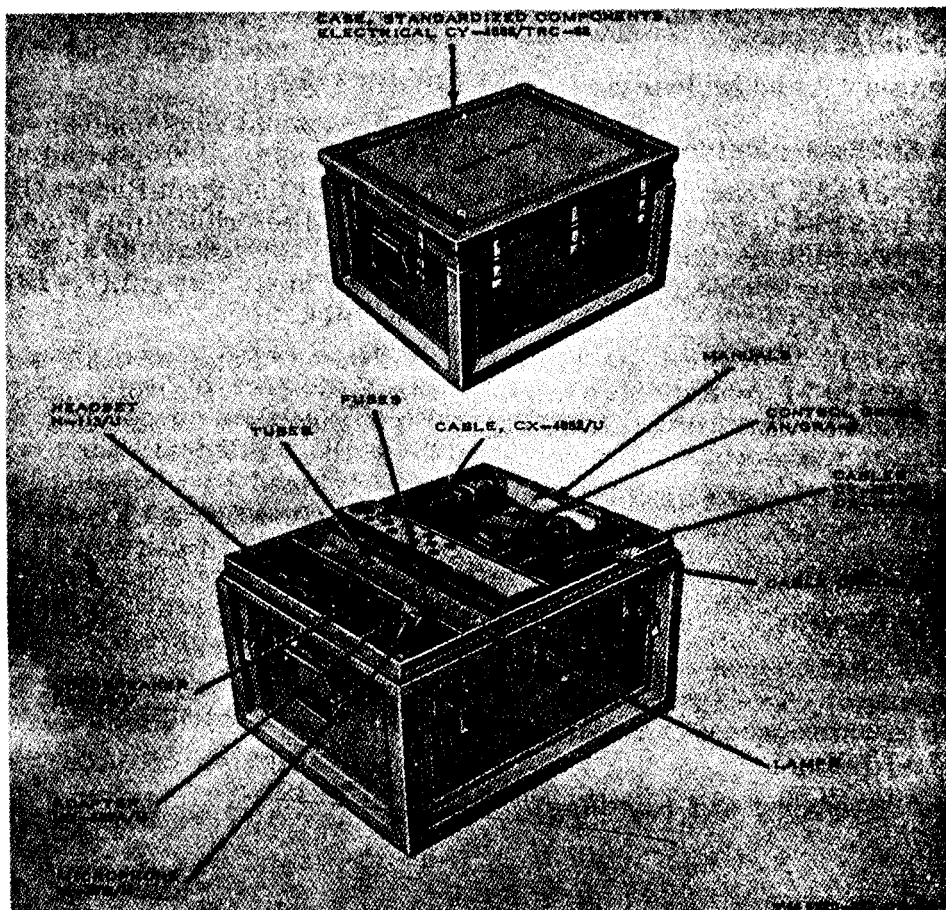


Figure 8.1 Case, Standard Components CY-4868/TRC-68A.

Page 13. Add paragraph 16.1 after paragraph 16.

16.1 Case, Standard Components CY-486-8/TRC-68A

Case, Standard Components CY-486-8/TRC-68A (fig. 8.1) contains separate stowage compartments for the following accessory equipment supplied with the AN/T-RC-68A:

- a. Cable Assembly CX-4881/U.
- b. Cable Assembly CX-4882/U.
- c. Cable Assembly CX-4883/U.
- d. Cable Assembly XC-4884/U.
- e. Connector Adapter UG-565A/U.

- f. Control Group AN/GRA-6.
- g. Loudspeaker, Dynamic LS-166/U.
- h. Headset H-113/U.
- i. Headset Cord CX-1334/U.
- j. Microphone M-29B/U.
- k. Technical manuals.
- i. Running spare items.

Page 15, paragraph 18.1 (page 1 of C 4). Delete paragraph 18.1 and substitute:

18.1 Differences in Models

The following chart shows differences in the radio sets listed below.

Item	Radio Set AN/VRC-24	Radio Set AN/VRC-24A	Radio Set AN/TRC-68	Radio Set AN/TRC-68A
Case, Standard Components CY-4868/TRC-68A.	X
Case, Accessories CY-2713/TRC-68.....	X	
Loudspeaker, Dynamic LS-166/U.....	X	X	X	(See footnote ^a)
Cable, Telephone (WD-1); 1,320 feet per Signal Reel DR-8.	X	
Fans, Centrifugal HD-390/U and HD-390A/U	X	X

^aPart of CY-4868/TRC-68A.

Page 17, section I (as changed by C 8, 12 Nov 64). Insert the following caution below the note:

CAUTION: When operating the CHANNEL selector switch, allow a minimum of 10 seconds between channel reselections.

TM 11-5965-222-15P Operator, Organizational, Field and Depot Maintenance Repair Parts and Special Tool Lists and Maintenance Allocation Chart: Dynamic Loudspeaker LS-166/U

TM 11-5965-231-15P Operator, Organizational, Field and Depot Maintenance Repair Parts and Special Tool Lists and Maintenance Allocation Chart: Headset, Electrical H-113/U

Page 27, appendix II (as changed by C 7, 27 May 63) delete and substitute:

APPENDIX II BASIC ISSUE ITEMS

Section I. INTRODUCTION

1. Scope

This appendix lists items comprising an operable equipment and those required for installation, operation, or operator's maintenance for Radio Sets AN/VRC-24, AN/TRC-68, AN/VRC-24A, and AN/TRC-68A.

2. Explanation of Columns

The following is a list of explanations of columns in section II.

- a. Source, Maintenance, and Recoverability Codes (SMR) Column.

(1) *Source code (S)*. The selection status and source for the listed item is the first code indicated in this column. The source codes used and their explanation are —

<i>Code</i>	<i>Explanation</i>
P—	Applies to repair parts that are stocked in or supplied from GSA/DSA, or Army supply system, and authorized for use at indicated maintenance categories.
A—	Applies to assemblies that are not procured or stocked as such but are made up of two or more units, each of which carries an individual stock number and description and is procured and stocked and can be assembled by units at indicated maintenance categories.

(2) *Maintenance code (M)*. The lowest category of maintenance authorized to install the item is indicated by the second code in the column. The maintenance category codes and their explanations are —

<i>Code</i>	<i>Explanation</i>
C	Operator/crew
O	Organizational Maintenance

(2) *Recoverability code (R)*. The recoverability code is the third code in the column. It indicates whether unserviceable items should be returned for recovery or salvage. Recoverability code and its explanation is as follows:

Note. When no code is indicated in the recoverability column, the part will be considered expendable.

<i>Code</i>	<i>Explanation</i>
R—	Applies to repair parts and assemblies that are economically repairable at DSU and GSU activities and are normally furnished by supply on an exchange basis.

b. Federal Stock Number Column. This column indicates the Federal stock number for the item.

c. Description Column This column includes the Federal item name and any ad-

ditional description of the item which may be required. A part number or other reference number is followed by the applicable five-digit Federal supply code for manufacturers. When required to indicate that the part is used on the models so identified, the numbers 1, 2, 3, and 4 are placed under the heading *Usable on Code*. An explanation of the codes used precedes the first item in section II of the basic issue items list.

d. Unit of Measure Column. The unit used as a basis of measure (e.g., ea, pr, ft, yd, etc.) is given in this column.

e. Quantity Incorporated in Unit Column. The total quantity of the item used in the equipment is given in this column.

f. Quantity Furnished With Equipment, Column. This column lists the quantity of the item supplied for initial operation of the equipment and/or the quantities authorized to be kept on hand by the operator for maintenance of the equipment.

g. Illustrations Column.

(1) *Figure number (a)*. The number of the illustration on which the item is shown is indicated in this column.

(2) *Item No. or reference designation (b)*. Not used.

3. Federal Supply Codes

This paragraph lists the Federal supply code with the associated manufacturer's name.

<i>Code</i>	<i>Manufacturer</i>
24455.....	General Electric Co., Lamp Division of Consumer Products Group
71400.....	Bussman Mfg., Division of McGraw-Edison Co.
80063.....	Army Electronics Command
81349.....	Military Specifications
96906.....	Military Standards
98738.....	Stewart-Warner, Electronics Division of Stewart-Warner Corp.

SECTION II BASIC ISSUE ITEMS

(1) SNR CODE	(2) FEDERAL STOCK NUMBER	(3) DESCRIPTION Reference Number & Mfr Code	(4) UNIT OF MEAS	(5) QTY INC IN UNIT	(6) QTY FURN WITH EQUIP	(7) ILLUSTRATIONS	
						(a) FIG. NO.	(b) ITEM NO. OR REFERENCE DESIGNATION
A-C-R	5820-543-1977	RADIO SET AN/VRC-24: (This item is nonexpensible)					1
A-C-R	5820-682-2718	RADIO SET AN/TRC-68: (This item is nonexpensible)	ea				2
A-C-R	5820-892-3722	RADIO SET AN/VRC-24A: (This item is nonexpensible)	ea				1
A-C-R	5820-892-3723	RADIO SET AN/TRC-68A: (This item is nonexpensible)	ea				2
		Notes: Usable on code 1 refers to Radio Set AN/VRC-24; 2 refers to Radio Set AN/TRC-68; 3 refers to Radio Set AN/VRC-24A; 4 refers to Radio Set AN/TRC-68A.					
		TECHNICAL MANUAL TM 11-5820-222-10: requisition through pinpoint account number if assigned; otherwise through nearest Adjutant General facility.	ea	2	2		11
		For technical manuals the quantity indicates the maximum number of copies authorized for packing (or issue) with the equipment. Where a number of these equipments are concentrated in a small area, the quantity on hand may be reduced to the minimum actual requirements as determined by the commanding officer of the unit					
P-C	5935-500-5977	ADAPTER, CONNECTOR, UG-565A/U:	2,4	ea	1	1	9
P-C-R		ANTENNA AT-197/CR	2,4	ea	1	1	2
P-C-R	5820-543-1984	ANTENNA AT-803/VR	1,3	ea	1	1	1
A-C-R	5995-577-8414	CABLE ASSEMBLY, POWER, ELECTRICAL CX-4629/U: (8 ft. 0 in.) EM-C-345250F; 80063	1,3	ea	1	1	1
A-C-R	5995-682-3426	CABLE ASSEMBLY, POWER, ELECTRICAL CX-4881/U: (25 ft. 5 in.) EM-C-345266C; 80063	2,4	ea	1	1	2
A-C-R	5995-577-8415	CABLE ASSEMBLY RADIOFREQUENCY CG-1650/U: (6 ft. 0 in.) EM-C-345252B; 80063	1,3	ea	1	1	1
A-C-R	5995-682-3402	CABLE ASSEMBLY, SPECIAL PURPOSE, ELECTRICAL CX-4882/U: (20 ft. 6 in.) EM-D-345263E; 80063	2,4	ea	1	1	2
A-C-R	5995-682-3404	CABLE ASSEMBLY, SPECIAL PURPOSE, ELECTRICAL CX-4883/U: (3 ft. 0 in.) EM-D-345263E; 80063	2,4	ea	1	1	2
A-C-R	5995-682-3405	CABLE ASSEMBLY, SPECIAL PURPOSE, ELECTRICAL CX-4884/U: (3 ft. 0 in.) EM-D-345264G; 80063	1,2,3,4	ea	1	1	1,2
A-C-R	5820-999-2627	CASE, ACCESSORIES CY-2713/TRC-68: SC-DL-345283A; 80063	2	ea	1	1	2,8
A-O-R	5820-999-2627	CASE, STANDARD COMPONENTS CY-4868/TRC-68A:	4	ea	1	1	
A-O-R	5820-644-4554	CONTROL GROUP AN/GRA-6	2,4	ea	1	1	12
A-C-R	5820-543-1979	CONTROL, RADIO SET C-1439/U	1,2,3,4	ea	1	1	1,2
P-C	5820-778-0107	COVER, RECEIVER TRANSMITTER, CANVAS DUCK	2,4	ea	1	1	
P-C	5820-752-5982	COVER, RECEIVER TRANSMITTER, CANVAS DUCK: (labeled RT-441/TRC-68)	2	ea	1	1	
P-C	5820-973-0510	COVER, RECEIVER TRANSMITTER: D-434927; 98738	4	ea	1	1	
P-C	5920-043-2641	FUSE CARTRIDGE: FO2A250-1/4A; 96906	1,2,3,4	ea	2	3	10
P-C	5920-281-0224	FUSE CARTRIDGE: FO2B250V-1/2A; 96906	1,2,3,4	ea	1	4	10
P-C		FUSE CARTRIDGE: FO2B125V3A; 96906	2,4	ea	2	3	10
P-C	5920-755-3656	FUSE CARTRIDGE: FO3B32V30A; 96906	2,4	ea	1	4	10
P-C	5920-280-5066	FUSE CARTRIDGE: MDX-5; 71400	2 4	ea ea	1 1	4 2	10
P-C	5920-057-2986	FUSE CARTRIDGE: MDL15; 71400	1,3	ea	1	4	10
P-C	5920-199-9502	FUSE CARTRIDGE: ABC-15; 71400	1,3	ea	1	4	10
P-C	5920-284-6796	FUSE CARTRIDGE: FO305ROB; 81349	1,3 2,4	ea ea	1 3	1 1	
P-C	5920-503-2203	FUSE CARTRIDGE: FO2B250V1/8A; 96906	2,4	ea	5	2	
P-C	5920-504-8633	FUSE CARTRIDGE: FO3A32V15A; 81349	2,4	ea	3	1	
P-C	5920-280-9328	FUSE CARTRIDGE: FO2B125V1/2A; 81349	2,4	ea	5	2	

SECTION II BASIC ISSUE ITEMS (CONTINUED)

(1) SMR CODE	(2) FEDERAL STOCK NUMBER	(3) DESCRIPTION Reference Number & Mfr Code	USABLE ON CODE	(4) UNIT OF MEAS	(5) QTY INC IN UNIT	(6) QTY FURN WITH EQUIP	(7) ILLUSTRATIONS	
							(a) FIG. NO.	(b) ITEM NO. OR REFERENCE DESIGNATION
P-C	5920-755-3235	FUSE CARTRIDGE: F02B250V3/4A; 81349	2,4	ea	5	2		
P-C	5995-264-7839	HEADSET CORD CX-1334/U:	1,2,3,4	ea	1	1	9	
A-C-R	5965-504-6370	HEADSET, ELECTRIC H-113/U	1,2,3,4	ea	1	1	4,9	
P-C	6240-155-7836	LAMP, INCANDESCENT: 327; 24455	1,2,3	ea	3	7	10	
P-C-R	5820-026-8849	MAST ASSEMBLY AB-282/CRC	2	ea	1	1		
A-C-R	5965-243-6420	LOUDSPEAKER LS-166/U	1,2,3	ea	1	1	11	
A-C-R	5965-892-0722	MICROPHONE M-29B/U	1,2,3,4	ea	1	1	11	
A-C-R	5820-775-0386	MOUNTING MT-2297/TRC-68	2,4	ea	1	1	2	
A-C-R	5820-752-0548	RECEIVER TRANSMITTER GROUP OA-2648/VRC-24	1	ea	1	1	1	
A-C-R	5820-892-3720	RECEIVER TRANSMITTER OA-2648A/VRC-24A	3	ea	1	1	1	
A-C-R	5820-752-0549	RECEIVER TRANSMITTER GROUP OA-2649/TRC-68	2	ea	1	1	2	
A-C-R	5820-892-3721	RECEIVER TRANSMITTER OA-2649A/TRC-68A	4	ea	1	1	2	
P-C	6145-226-8812	CABLE, TELEPHONE (WD-1); 1320 feet per signal reel IN-8	2	ea	1	1	4,9	
A-C-R	5820-995-9430	CASE, RECEIVER TRANSMITTER CY-2557/VRC-24, CY-2557A/VRC-24A	1,3	ea	1	1	5	
A-C-R	5820-681-9916	CASE, RECEIVER TRANSMITTER CY-2712/TRC-68, CY-2712/TRC-68A	2,4	ea	1	1	6	
A-C-R	5820-973-2568	CONVERSION KIT ASSEMBLY: SM-B-355102A; 80063	2,4	ea	1	1		
A-C-R	6125-577-8417	DYNAMOTOR DY-151/U: SC-DL-344929; 80063	1,3	ea	1	1	5	
A-C-R	4140-805-0666	FAN, CENTRIFUGAL HD-390/U; HD-390A/U	2,4	ea	1	1	6	
A-C-R	5820-679-3434	MOUNT MT-1436/U; MT-1436A/U: SC-DL-344948; 80063	1,3	ea	1	1	7	
A-C-R	5820-682-3399	POWER SUPPLY PP-1494/U: SC-DL-345194A; 80063	2,4	ea	1	1	6	
A-C-R	5820-543-1978	RECEIVER TRANSMITTER RT-323/VRC-24	1	ea	1	1	5	
A-C-R	5820-892-3724	RECEIVER TRANSMITTER RT-323A/VRC-24 SC-DL-343840F; 80063	3	ea	1	1	5	
A-C-R	5820-681-9917	RECEIVER TRANSMITTER RT-441/TRC-68	2	ea	1	1	6	
A-C-R	5820-892-3725	RECEIVER TRANSMITTER RT-441A/TRC-68	4	ea	1	1	6	
P-C	5960-262-1357	TUBE, ELECTRON 5654/6AK5W; 81349	4	ea	3	1		
P-C	5960-188-6584	TUBE, ELECTRON 5670; 81349	4	ea	2	1		
P-C	5960-188-3915	TUBE, ELECTRON 5763; 81349	4	ea	2	1		
P-C	5960-995-9177	TUBE, ELECTRON 6J4WB; 81349	4	ea	2	1		
P-C	5960-617-3541	TUBE, ELECTRON 6442; 81349	4	ea	1	1		
P-C	5960-840-5465	TUBE, ELECTRON 7554; 81349	4	ea	1	1		
P-C	5960-840-1055	TUBE, ELECTRON 7609; 81349	4	ea	1	1		
NO ACCESSORIES, TOOLS, OR TEST EQUIPMENT ARE TO BE ISSUED WITH THIS EQUIPMENT								
NO BASIC ISSUE ITEMS ARE MOUNTED IN OR ON THIS EQUIPMENT								

By Order of the Secretary of the Army:

W. C. WESTMORELAND,
General, United States Army,
Chief of Staff.

Official:

KENNETH G. WICKHAM,
Major General, United States Army,
The Adjutant General.

Distribution:

To be distributed in accordance with DA Form 12-51 requirements for operator maintenance literature for the AN/VRC-24 and AN/TRC-68 radio sets.

Operator's Manual

RADIO SETS AN/VRC-24, AN/VRC-24A, AN/TRC-68 AND AN/TRC-68A

TM 11-5820-222-10 }
TO 31R2-2TRC68-1 }
CHANGES No. 6 }

DEPARTMENTS OF THE ARMY
AND THE AIR FORCE
WASHINGTON 25, D.C., 12 April 1963

TM 11-5820-222-10/TO 31R2-2TRC68-1, 7 June 1960, is changed as follows:

Note. The parenthetical reference to previous changes (example: "page 1 of C 3") indicates that pertinent material was published in that changes.

Page 3. Make the following changes:
Add paragraph 1.1 after paragraph 1.

1.1. Index of Publications

Refer to the latest issue of DA Pam 310-4 to determine whether there are new editions, changes, or additional publications pertaining to your equipment. DA Pam 310-4 is an index of current technical manuals, technical bulletins, supply bulletins, lubrication orders, and modification work orders that are available through publications supply channels. The index lists the individual parts (-10, -20, -35P, etc.) and the latest changes to and revisions of each equipment publication.

Paragraph 2 (page 1 of C 2). Delete paragraph 2 and substitute:

2. Forms and Records

a. Reports of Maintenance and Unsatisfactory Equipment. Use equipment forms and records in accordance with instructions in TM 38-750.

b. Report of Damaged or Improper Shipment. Fill out and forward DD Form 6 (Report of Damaged or Improper Shipment) as prescribed in AR 700-58 (Army), NAVSANDA Publication 378 (Navy), and AFR 71-4 (Air Force).

c. Comments on Manual. Forward all comments on this publication direct to: Commanding Officer, U.S. Army Electronics Materiel Support Agency, ATTN: SELMS-MP, Fort Monmouth, N.J. DA Form 1598 (Record of

Comments on Publications), DA Form 2496 (Disposition Form), or letter may be used.

Paragraph 2.1 (page 1 of C 3). Delete paragraph 2.1.

Page 23. Make the following changes:
Delete paragraph 29 and substitute:

29. Preventive Maintenance

Preventive maintenance is the systematic care, servicing, and inspection of equipment to prevent the occurrence of trouble, to reduce downtime, and to assure that the equipment is serviceable.

a. Systematic Care. The procedures given in paragraphs 29.1 and 29.2 cover systematic care essential to proper upkeep and operation of the equipment. The cleaning operations (par. 29.3) should be performed once a day. If the equipment is not used daily, the cleaning operations must be performed before operation after any extended shutdown, or once a week while the equipment is kept in a *standby* condition. The other items must be checked before the equipment is placed in operation after a shutdown, during operation, or after it is turned off, as specified in the applicable paragraph.

b. Maintenance Service and Inspection. The maintenance and service inspection chart (par. 29.2) outlines inspections to be made at specific intervals. These inspections are made to determine combat serviceability; that is, to determine that the equipment is in good general (physical) condition and is in good operating condition. To assist operators in maintaining

combat serviceability, the chart indicates what to inspect, how to inspect, and what the normal conditions are; the "References" column lists the paragraph or figure that contains the additional information. If the defect cannot be remedied by the operator, higher maintenance or repair is required. Records of these inspections must be made in accordance with TM 38-750.

Add paragraphs 29.1 through 29.3 after paragraph 29.

29.1. Maintenance Service and Inspection Periods

Maintenance service and inspections of the AN/VRC-24 and AN/TRC-68 are required on a daily basis.

a. Paragraph 29.2 specifies services and inspections that must be accomplished daily and under special conditions listed below.

(1) Vehicular installations.

(a) Before the vehicle starts on a mission.

- (b) When the equipment is initially installed.
- (c) When the equipment is reinstalled after removal for any reason.
- (d) At least once a week if the equipment is maintained in a standby condition.

(2) Transportable and mobile installations.

- (a) When the equipment is initially installed.
- (b) When the equipment is reinstalled after removal for any reason.
- (c) At least once each week if the equipment is maintained in a standby condition.

b. Paragraph 29.3 specifies maintenance services that must be performed once each week. If the equipment is being maintained in a standby condition, the daily (par. 29.2) and the weekly (par. 29.3) services and inspections should be accomplished at the same time.

29.2. Daily Maintenance Service and Inspection Chart

Item No.	Procedure		References
	Item	Normal condition or result	
1	SET: Inspect the equipment for— a. Completeness ----- b. Proper installation ----- c. Cleanliness ----- d. Preservation -----	a. Equipment must be complete----- b. Equipment is properly installed----- c. Units must be clean and dry and free of grease, dirt, rust, corrosion, and fungus. d. Painted surfaces must be free of bare spots, rust, and corrosion.	a. App. II. b. None. c. Par. 29.4 d. None.
2	OPERATIONAL TEST: Perform the steps as given in the checklist.	Normal indications as given in this checklist must be obtained.	Par. 31c.
3	CONTROLS: Inspect controls for normal operation. Tap controls lightly for evidence of cutout from loose contacts.	All controls operate normally; there is no indication of cutout when they are tapped.	Fig. 13.

29.3. Cleaning

Inspect the exterior of the radio set. The exterior should be clean and free from dust, dirt, grease, and fungus.

Warning: Cleaning compound is flammable and its fumes are toxic. Provide adequate ventilation. Do not use near a flame.

a. Remove dirt and dust with a clean soft cloth. Dampen the cloth with Cleaning Compound (Federal stock No. 7930-395-9542), if necessary.

b. Remove grease, fungus, and ground-in dirt from the cases; use a cloth dampened (not wet) with cleaning compound.

c. Remove dust and dirt from plugs and jacks with a brush.

d. Remove dirt and dust from the meter face glass with a cloth dampened with cleaning compound.

Caution: Do not press hard on the meter glass; this could damage the meter.

e. Clean the panels and control knobs; use a soft clean cloth. If dirt is difficult to remove, dampen the cloth with water; mild soap may be used to make cleaning more effective.

Page 24. Delete figure 17.

Page 27, appendix I. Add the following:
TM 38-750. The Army Equipment Record System and Procedures.

By Order of the Secretaries of the Army and the Air Force:

Official:

J. C. LAMBERT,
Major General, United States Army,
The Adjutant General.

EARLE G. WHEELER,
General, United States Army,
Chief of Staff.

Official:

R. J. PUGH,
Colonel, United States Air Force,
Director of Administrative Services.

CURTIS E. LEMAY,
Chief of Staff, United States Air Force.

Distribution:

Active Army:

DASA (6)
USASA (2)
CNGB (1)
CofEngrs (1)
TSG (1)
CSigO (7)
CofT (1)
USA CD Agcy (1)
USCONARC (5)
USAMC (5)
USAECOM (5)
USAMICOM (4)
ARADCOM (2)
ARADCOM Rgn (2)
OS Maj Comd (3)
OS Base Comd (2)
LOGCOMD (2)
MDW (1)
Armies (2)
Corps (2)
USA Corps (3)
Instls (2) except
 Fort Monmouth (63)
USATC AD (2)
USATC Armor (2)
USATC Engr (2)
USATC Inf (2)
USASTC (2)
Svc Colleges (2)
Br Svc Sch (2)
GENDEP (OS) (2)
Sig Dep (OS) (12)
Army Dep (2) except
 Fort Worth Army Dep (8)
 Lexington Army Dep (12)

Sacramento Army Dep (28)
Tobyhanna Army Dep (12)
Sig Sec, GENDEP (OS) (5)
USA Elct RD Actv (Ft Huachuca) (2)
USA Elct RD Actv (White Sands) (13)
WRAMC (1)
Army Pictorial Cen (2)
USA MOB Spt Cen (1)
Trans Tml Comd (1)
Army Tml (1)
POE (1)
USAOSA (1)
AFIP (1)
AMS (1)
USA Elct Mat Agcy (25)
Chicago Proc Dist (1)
USASCC (4)
USARCARIB Sig Agcy (1)
Sig Fld Maint Shops (3)
JBUSMC (2)
Pine Bluff Arsenal (5)
USMA (5)
Units org under fol TOE:
 (2 copies each UNOINDC)
1-7
1-17
1-55
1-56
1-57
1-58
1-75
1-76
1-77
1-78
1-107

1-127	11-555
1-137	11-567
5-45	11-587
5-46	11-592
6-100	11-597
6-101	17
6-200	17-2
6-201	17-22
6-300	17-25
6-301	17-26
6-302	17-35
6-401	17-36
6-535	17-42
6-537	17-45
6-558	17-46
6-615	17-51
6-616	17-52
6-617	17-55
7	17-56
7-2	17-65
7-11	17-66
7-12	17-85
7-15	17-86
7-16	17-105
7-25	17-106
7-26	17-108
7-35	17-408
7-36	29-56
7-42	37
7-45	37-42
7-46	39-51
8-137	39-52
9-47	44-435
9-87	44-436
9-227	44-437
9-377	44-445
9-500 (AA-AC)	44-446
11-5	44-447
11-7	44-448
11-16	44-535
11-37	44-536
11-55	44-537
11-57	44-544
11-95	44-545
11-96	44-546
11-97	44-547
11-98	44-548
11-99	55-57
11-117	57
11-155	57-5
11-157	57-42
11-500 (AA-AC) (4)	

NG: State AG (3); units—same as Active Army except allowance is one copy for each unit.

USAR: None.

For explanation of abbreviations used, see AR 320-50.

Operator's Manual

RADIO SETS AN/VRC-24, AN/VRC-24A, AN/TRC-68, AN/TRC-68A

TM 11-5820-222-10 }
TO 31R2-2TRC68-1 }
CHANGES No. 4 }

DEPARTMENTS OF THE ARMY
AND THE AIR FORCE
WASHINGTON 25, D.C., 29 October 1962

TM 11-5820-222-10/TO 31R2-2TRC68-1, 7 June 1960, is changed as indicated so that the manual also applies to the following equipment:

Nomenclature	Order No.	Serial No.
Radio Set AN/VRC-24A	4295-PP-61	1 through 527
Radio Set AN/TRC-68A	4295-PP-61	1 through 129

The title is changed to read as shown above.

Page 3, chapter 1. Below the title add:

Nota. Radio Sets AN/VRC-24A and AN/TRC-68A are similar to Radio Sets AN/VRC-24 and AN/TRC-68. Information in this manual also applies to the A models unless otherwise specified.

Paragraph 1. Designate the present text as a and add the following:

b. Official nomenclature followed by (*) is used to indicate all models of the equipment covered in this manual. Thus, Radio Set AN/VRC-24(*) represents Radio Set AN/VRC-24 and AN/VRC-24A. Radio Set AN/TRC-68(*) represents Radio Set AN/TRC-68 and AN/VRC-68A. Receiver-Transmitter Group OA-2648(*)/VRC-24 represents Receiver-Transmitter Group OA-2648/VRC-24 and OA-2648A/VRC-24. Receiver-Transmitter Group OA-2649(*)/TRC-68 represents Receiver-Transmitter Group OA-2649/TRC-68 and OA-2649A/TRC-68. Receiver-Transmitter RT-323(*)/VRC-24 represents Receiver-Transmitter RT-323/VRC-24 and RT-323A/VRC-24. Receiver-Transmitter RT-441(*)/TRC-68 represents Receiver-Transmitter RT-441/TRC-68 and RT-441A/TRC-68.

Page 8, paragraph 5c. Make the following changes:

Subparagraph (1), chart, "Item" column, line 5. Change "4X150D" to 4X150D^a.

Add the following footnote beneath the chart:

^a On Order No. 19275-PC-60, serial numbers 41 and above and on the AN/VRC-24A, electron tube 7609 is included in place of electron tube 4X150D.

Subparagraph (2), chart, "Item" column, line 5. Change "4X150D" to 4X150D^a.

Add the following footnote beneath the chart:

^a On Order No. 19275-PC-60, serial numbers 41 and above and on the AN/TRC-68A, electron tube 7609 is included in place of electron tube 4X150D.

Page 9, paragraph 9. After the last sentence add: Two air valves are mounted on the rear of the case for relief of internal pressure during air transportation.

Page 13, figure 10. Add the following note to figure 10:

Nota. On order No. 19275-PC-60, serial numbers 41 and above and on the A models, electron tube 7609 is included in place of the 4X150D.

Page 15, after paragraph 18, add:

18.1. Differences in Models

Radio Sets AN/VRC-24A and AN/TRC-68A differ from earlier models in the following details:

a. The BROAD BAND receptacle is a 10-pin connector.

b. A dummy connector, with internal jumper, is attached by a chain near the BROAD BAND receptacle; it must be connected thereto for normal operation when security equipment is not connected to the receptacle.

Page 18, section II. Change the word "Note" to Notes.

Number the existing note "1" and add the following:

2. Be sure that the chained connector at the BROAD BAND receptacle is connected to the receptacle for normal operation when security equipment is not connected to the receptacle.

Page 91, figure 14. Add the following note to figure 14:

By Order of the Secretaries of the Army and the Air Force:

Official:

J. C. LAMBERT,
Major General, United States Army,
The Adjutant General.

Official:

R. J. PUGH,
Colonel, United States Air Force,
Director of Administrative Services.

Distribution:

Active Army:

DASA (5)
USASA (2)
CNGB (1)
CSigO (3)
CofEngrs (1)
TSG (1)
CofT (1)
AMC (5)
USA CD Comd (2)
USA CD Agcy (1)
USCONARC (5)
ARADCOM (2)
ARADCOM Rgn (2)
OS Maj Comd (3)
OS Base Comd (2)
LOGCOMD (2)
MDW (1)
USA Elet Comd (5)
Armies (2)
Corps (2)
USA Tng Cen (2)
USA Msl Comd (3)
USMA (5)
Pine Bluff Cml Arsenal (5)
Svc Colleges (2)
Br Svc Sch (2)
Gen Dep (OS) (2)
Sig Sec, Gen Dep (OS) (5)
A Dep (2) except Lexington (12)
Tobyhanna (12) Sacramento (17)
WRAMC (1)

Note. The broad band receptacle is capped with a dummy connector on the A models.

Page 23, paragraph 30a(2). Add the following after subparagraph (2):

(3) Dummy connector loose or disconnected from BROAD BAND receptacle on A models .

EARLE G. WHEELER,
General, United States Army,
Chief of Staff.

CURTIS E. LEMAY,
Chief of Staff, United States Air Force.

USA Trans Tml Comd (1)
Army Tml (1)
POE (1)
OSA (1)
USAEPG (2)
AFIP (1)
AMS (1)
Army Pictorial Cen (2)
USA Mobility Spt Cen (1)
Yuma Test Station (2)
USASSA (25)
USASSAMRO (1)
USA Carib Sig Agcy (1)
USA Sig Msl Spt Agcy (13)
Sig Fld Maint Shops (3)
USA Corps (3)
JBUSMC (2)
USA Strat Comm Comd (4)
Units org under fol TOE:
(2 each UNOINDC)
1-7
1-17
1-55
1-56
1-57
1-58
1-58
1-75
1-76
1-77
1-78
1-107

1-123	11-555
1-137	11-557
5-45	11-587
5-46	11-592
6-100	11-597
6-101	17
6-200	17-2
6-201	17-22
6-300	17-25
6-301	17-26
6-302	17-35
6-401	17-36
6-535	17-42
6-537	17-45
6-558	17-46
6-615	17-51
6-616	17-52
6-617	17-55
7	17-56
7-2	17-65
7-11	17-66
7-12	17-85
7-15	17-86
7-16	17-105
7-25	17-106
7-26	17-108
7-35	17-408
7-36	29-56
7-42	37
7-45	37-42
7-46	39-51
8-137	39-52
9-47	44-435
9-87	44-436
9-227	44-437
9-377	44-445
9-500 AA-AC	44-446
11-5	44-447
11-7	44-448
11-16	44-535
11-37	44-536
11-55	44-537
11-57	44-544
11-95	44-545
11-96	44-546
11-97	44-547
11-98	44-548
11-99	55-57
11-117	57
11-155	57-5
11-157	57-42
11-500 AA-AE (4)	

NG: State AG (3)—units same as active Army except allowance is one copy to each unit.

USAR: None.

For explanation of abbreviations used, see AR 320-50.

TECHNICAL MANUAL
 No. 11-5820-222-10
 TECHNICAL ORDER
 No. 31R2-2TRC68-1

DEPARTMENTS OF THE ARMY
 AND THE AIR FORCE

WASHINGTON 25, D.C., 7 June 1960

RADIO SETS AN/VRC-24 AND AN/TRC-68

		Paragraph	Page
CHAPTER 1 .	INTRODUCTION		
Section I.	General		
	Scope	1	3
	Forms and records	2	3
II.	Description and data		
	Purpose and use	3	3
	Technical characteristics	4	3
	Components	5	7
	Nomenclature and common names	6	8
	Description of Radio Set AN/VRC-24	7	8
	Description of Radio Set AN/TRC-68	8	8
	Description of Receiver-Transmitter Group OA-2648/VRC-24	9	8
	Description of Receiver-Transmitter Group OA-2649/TRC-68	10	9
	Radio set control C-1439/U	11	10
	Mounting MT-1436/U	12	13
	Antennas	13	13
	Cables for Radio Set AN/VRC-24	14	13
	Cables for Radio Set AN/TRC-68	15	13
	Accessory Case CY-2713/TRC-68	16	13
	Miscellaneous components	17	14
	Additional equipment required	18	16
CHAPTER 2 .	OPERATING INSTRUCTIONS		
Section I.	Controls and indicators		
	Radio Set Control C-1439/U	19	17
	Controls and indicators, RT-323/VRC-24 and RT-441/TRC-68	20	17
	Power supply indicator	21	18
II.	Operation		
	Presetting channels	22	18
	Starting procedure	23	19
	Radiotelephone reception	24	22
	Radiotelephone transmission	25	22
	Interphone operation at radio set control	26	22
	Stopping procedure	27	22
CHAPTER 3 .	MAINTENANCE INSTRUCTIONS		
	Scope of operator's maintenance	28	23
	Preventive maintenance	29	23
	Visual inspection	30	23
	Operational checklist	31	23
CHAPTER 4 .	DEMOLITION OF MATERIEL TO PREVENT ENEMY USE		
	Authority for demolition	32	26
	Methods of destruction	33	26
APPENDIX I .	REFERENCES		27

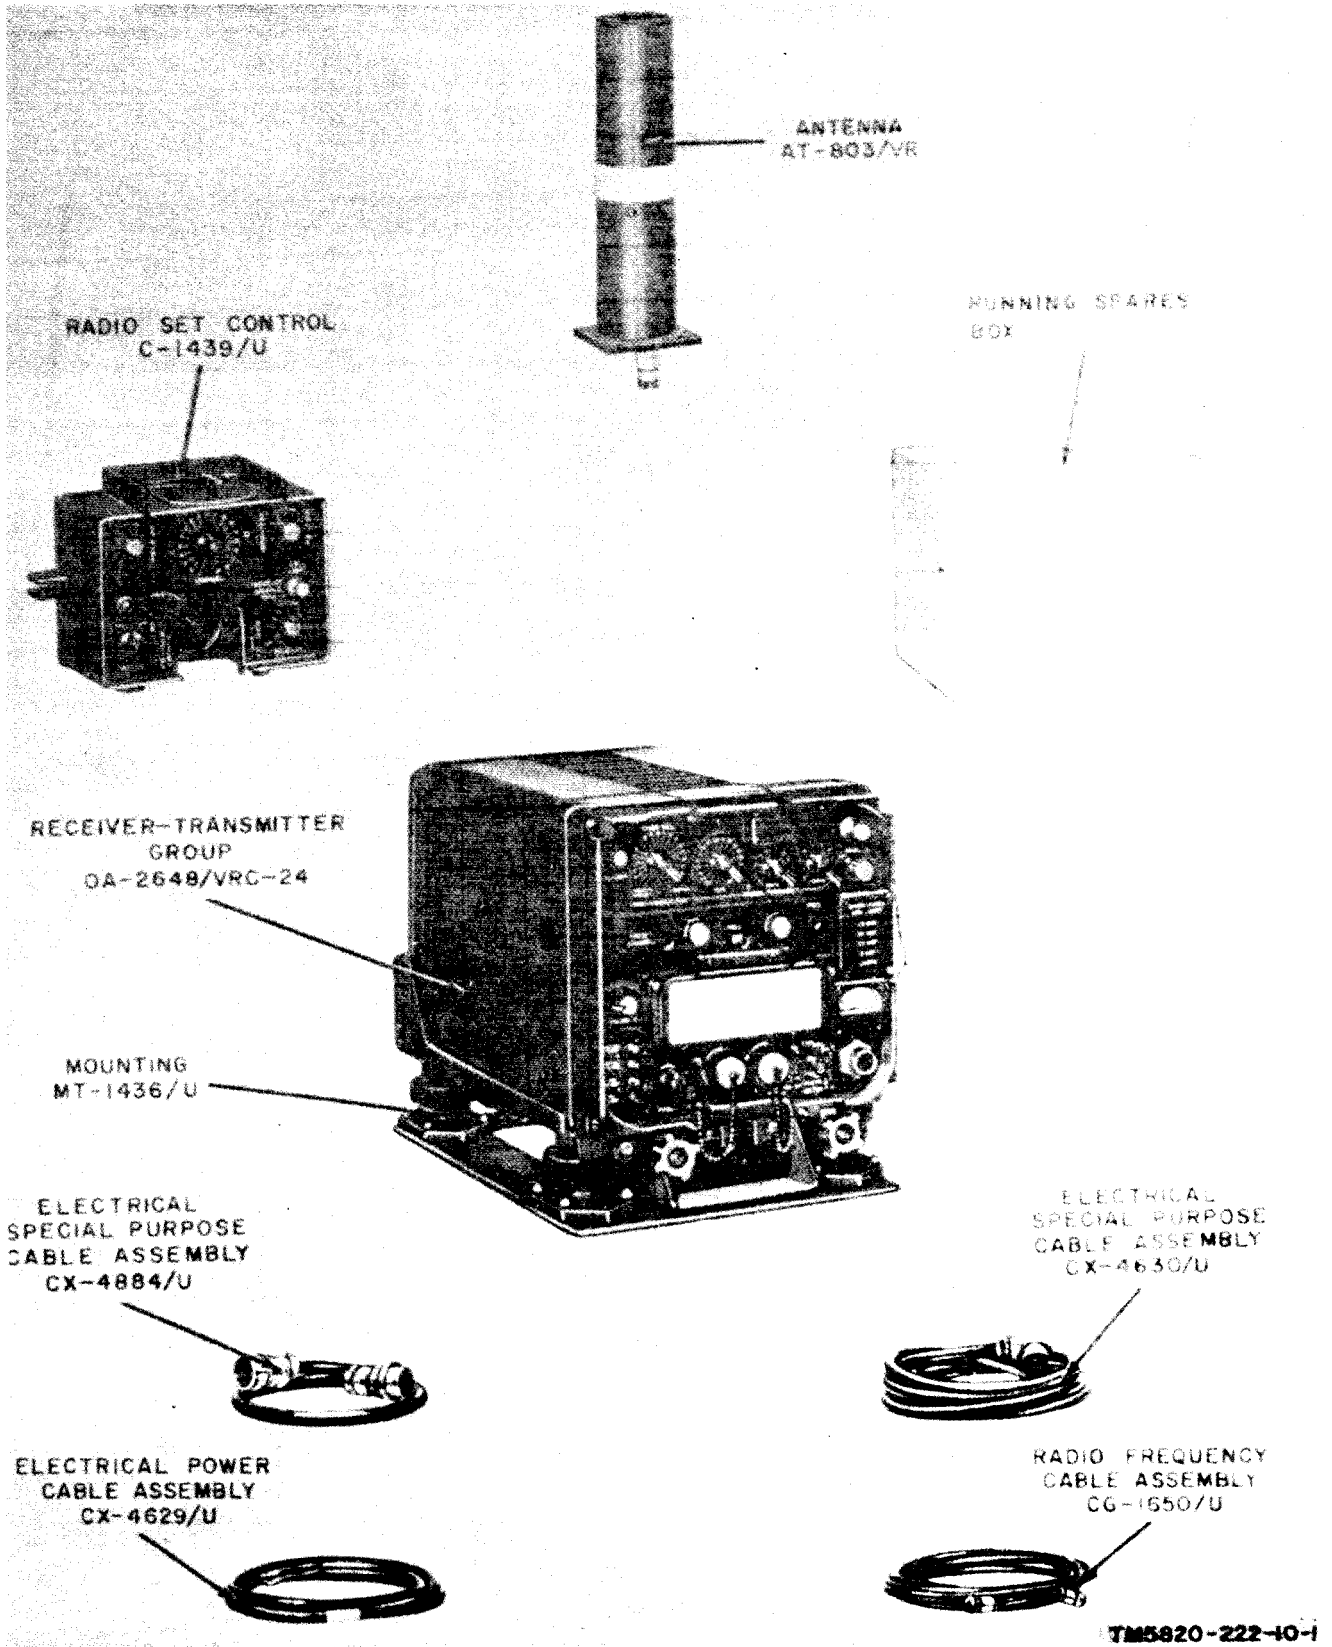


Figure 1. Radio Set AN/VRC-24, major components.

CHAPTER 1

INTRODUCTION

Section I. GENERAL

1. Scope

This manual describes Radio Sets AN/VRC-24 (fig. 1) and AN/TRC-68 (fig. 2) and covers the operation and operator's maintenance of the radio sets. It includes operation, first echelon maintenance, and replacement of parts available to first echelon. Appendix I contains a list of references.

2. Forms and Records

a. *Unsatisfactory Equipment Reports.*

- (1) Fill out and forward DA Form 468 (Unsatisfactory Equipment Report) to the Commanding Officer, U.S. Army Signal Equipment Support Agency, Fort Monmouth, N.J., as prescribed in AR 700-38.
- (2) Fill out and forward AF TO Form 29 (Unsatisfactory Report) to the Commander, Air Materiel Command, Wright-Patterson Air Force Base, Ohio, as prescribed in AF TO 00-35D-54.

b. *Report of Damaged or Improper Shipment.* Fill out and forward DD Form 6 (Report of Damaged or Improper Shipment) as prescribed in AR 700-58 (Army) and AFR 71-4 (Air Force).

c. *Preventive Maintenance Forms.* Prepare DA Form 11-238 (fig. 17) (Maintenance Check List for Signal Equipment (Sound Equipment, Radio, Direction Finding, Radar, Carrier, Radiosonde and Television)), in accordance with instructions on the form.

d. *Parts List Form.* Forward DA Form 2028 (Recommended Changes to DA Technical Manual Parts Lists or Supply Manuals 7,8, and 9) directly to the Commanding Officer, U. S. Army Signal Equipment Support Agency, Fort Monmouth, N.J., with comments on parts listings.

e. *Comments on Manual.* Forward all other comments on this publication direct to the Commanding Officer, U.S. Army Signal Publications Agency, Fort Monmouth, N.J.

Section II. DESCRIPTION AND DATA

3. Purpose and Use

a. Radio Sets AN/VRC-24 and AN/TRC-68 operate on 1,750 crystal-controlled channels within the frequency range of 225.0 to 399.9 megacycles (mc). The sets provide for the transmission and reception of amplitude-modulated (am) radiotelephone signals-for ground-to-air liaison. The sets may also be used to transmit and receive encoded voice signals.

b. The AN/VRC-24 is used for vehicular ground-to-air communications. It may also be used as a retransmission device for Radio Sets AN/GRC-3 through -8- (TM11-284) when connected as shown in figure 3. Audio output from the AN/VRC-24 receiver, frequency-modulates the transmitter of one of the AN/GRC-3 through -8 series for retransmis-

sion. Audio output from the AN/GRC-3 through -8 receiver amplitude-modulates the transmitter of the AN/VRC-24.

c. The AN/TRC-68 is used for ground-to-air radio communications from a stationary location. It can be vehicular mounted if a suitable 115-volt or 230-volt alternating current (ac) power source is available. Control Group AN/GRA-6 (TM 11-5038) is provided to control and operate the AN/TRC-68 from a remote position (fig. 4).

4. Technical Characteristics

Frequency range225.0 mc to 399.9 mc.
Type of modulation Am.
Type of transmission Voice.
Number of channels1,750.

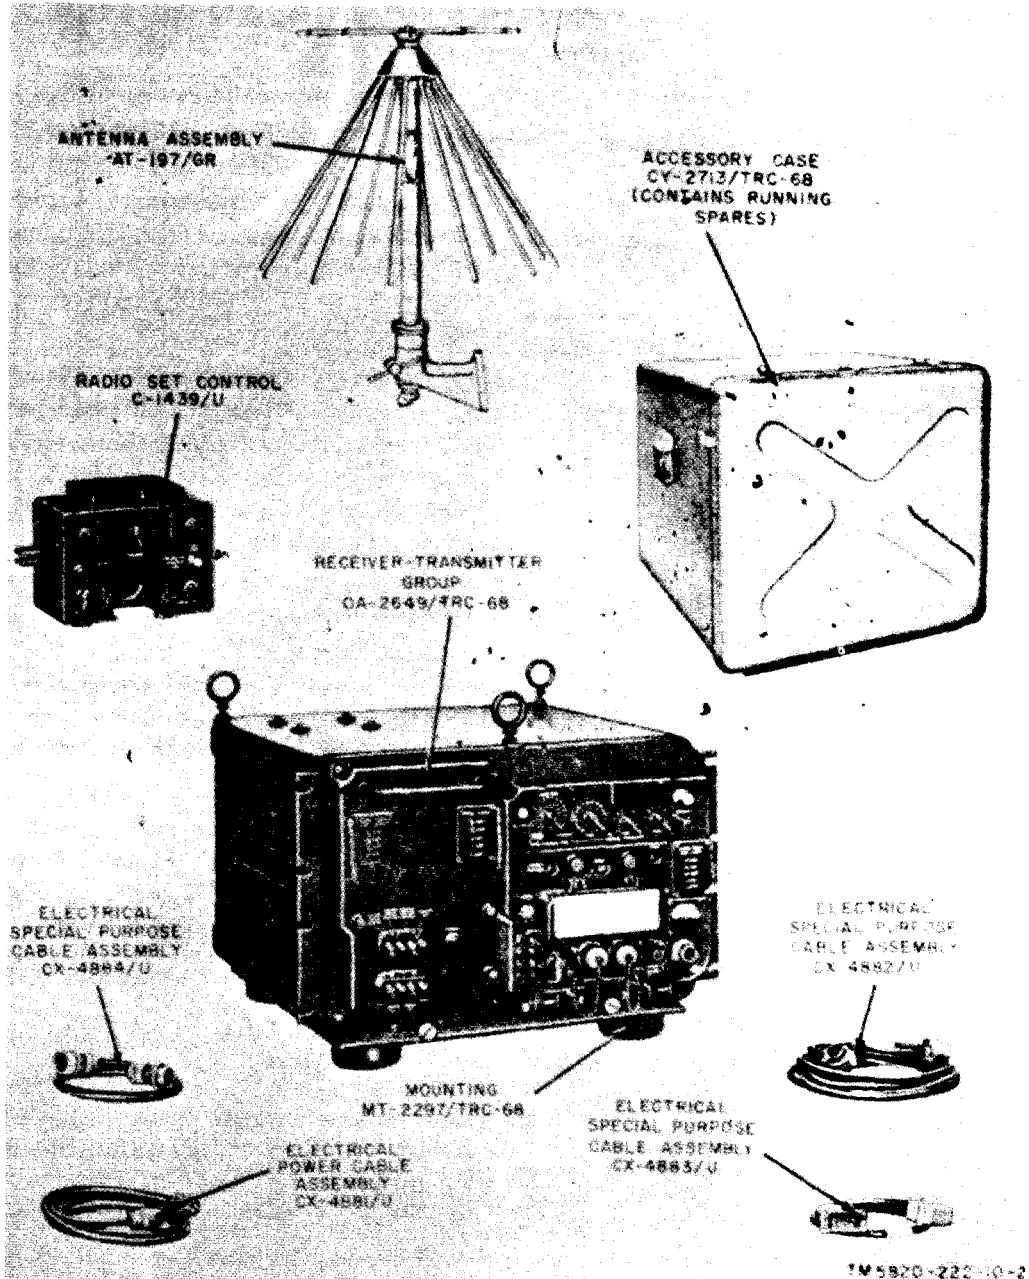


Figure 2. Radio Set AN/TRC-68, major components.

Number of preset channels19.
 Channel spacing100 kc between channels.
 Time required to preset channel Approximately 10 sec.
 Channel selection time.....5 sec maximum.
 Number of tubes29.
 Number of crystals35.

Power requirements250 watts receiving, 300 watts transmitting, unmodulated.
 Power sourceAN/VRC-24; 24-volt hicular battery.
 AN/TRC-68; 115- or 230-volt, 50/60-cps single-phase.

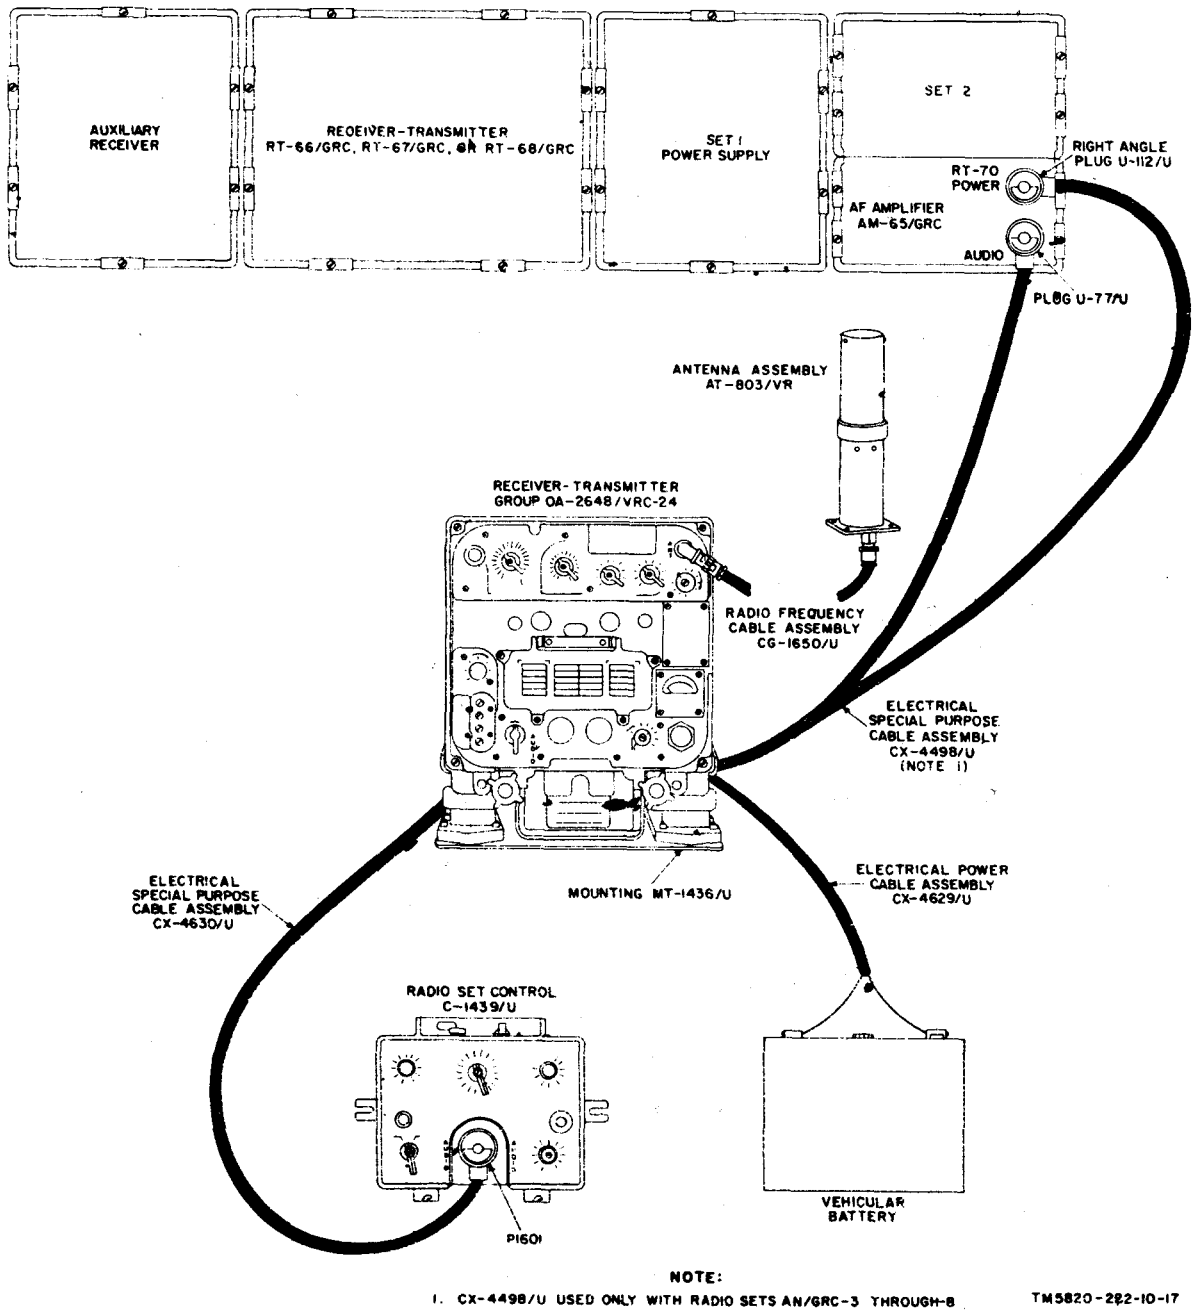


Figure 3. Radio Set AN/VRC-24 as used with Radio Sets AN/GRC-3 through -8, cording diagram.

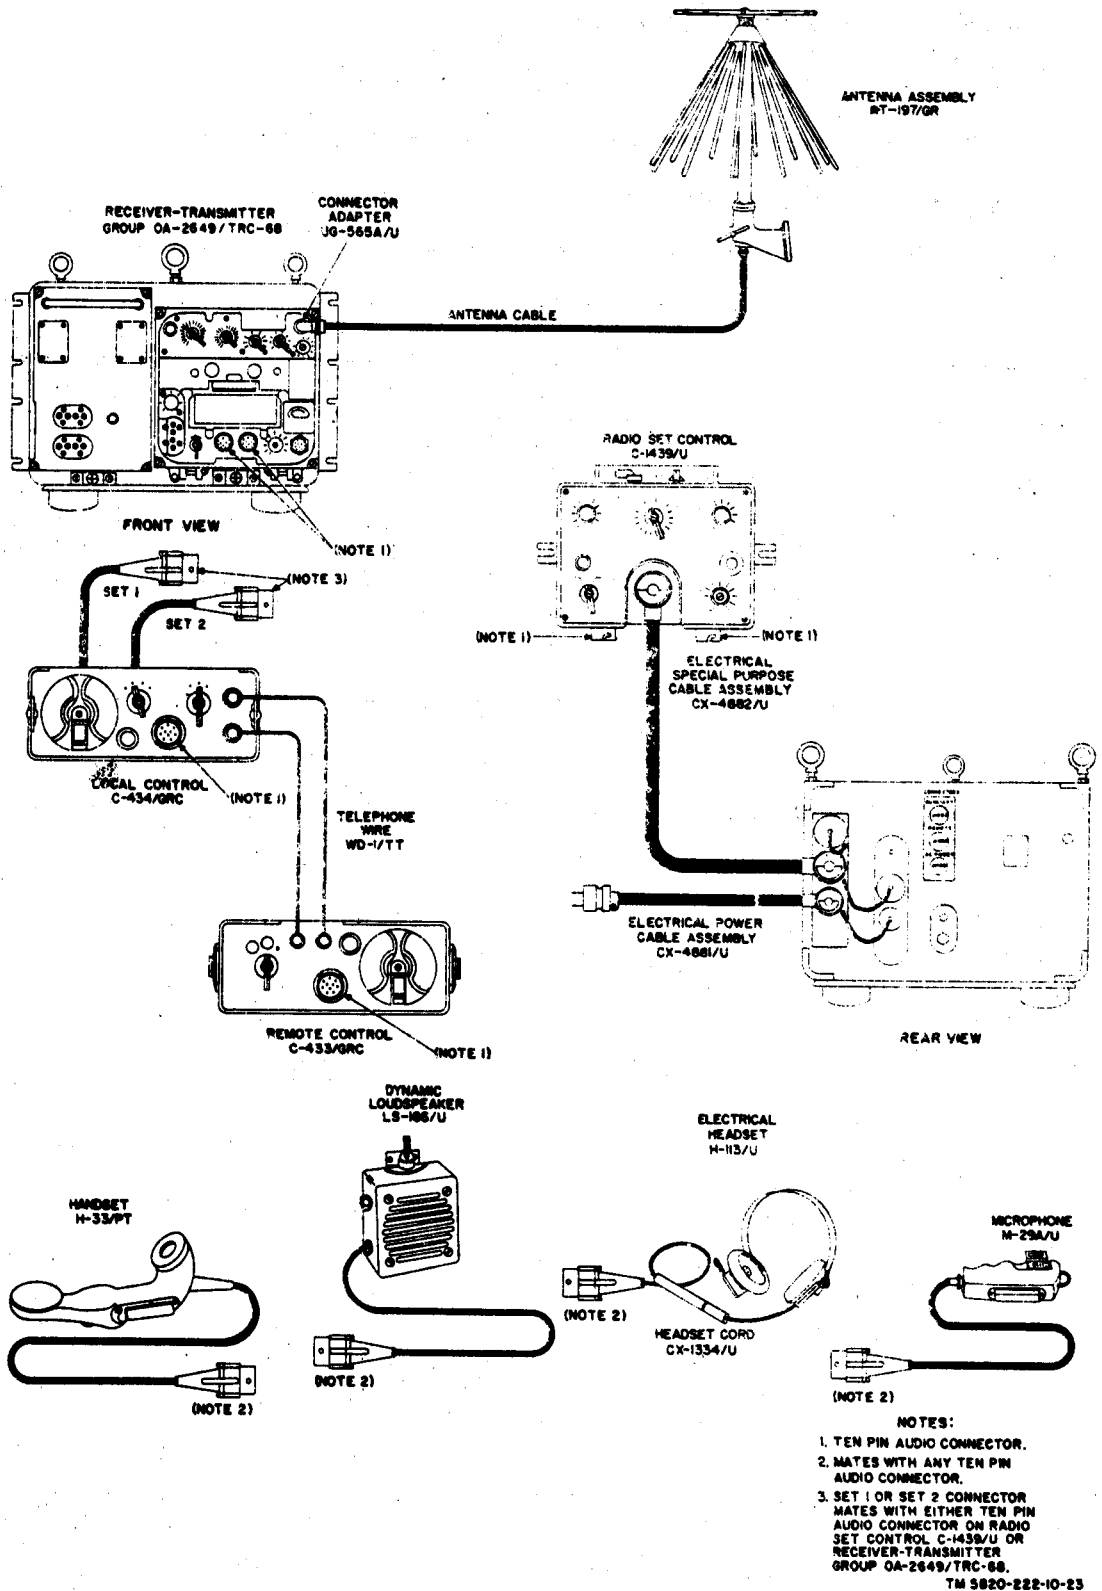


Figure 4. Radio Set AN/TRC-68, cording diagram.

5. Components

a. Radio Set AN/VRC-24.

Quantity	Item	Fig. No.	Height (in.)	Depth (in.)	Width (in.)	Unit weight (lb)
1	Receiver-Transmitter Group OA-2648/VC-24 including	1	12	15	10	62
1	Receiver-Transmitter RT-323/VRC-24	5	10	15 1/2	9 1/2	48
1	Dynamotor DY-151	5	3 1/2	10	3 1/2	6.5
1	Receiver-Transmitter Case CY-2557/VRC-24	5	12	16 1/2	10 5/8	8
1	Mounting MT-1436/	1	5 3/4	18	10 1/2	20
1	Radio Set Control C-1439/U	1	6 1/2	2 7/8	6 1/2	5
1	Antenna AT-803/VR	1	11	3	2 3/4	
1	Radio Frequency Cable Assembly CG-1650/U	1	6 ft (lg)			
1	Electrical Power Cable Assembly CX-4629/U	1	8 ft (lg)			
1	Electrical Special Purpose Cable Assembly CX-4630/	1	10 ft (lg)			
1	Electrical Special Purpose Cable Assembly CX-4884/U	1	3 ft (lg)			
1	Dynamic Loudspeaker LS-166/U	11	5		3 1/2	1
1	Microphone M-29A/U	11				
1 set	Running spares (c)	10				
2	TM 11-5820-222-10	11	10 1/2		8	
2	TM 11-5820-222-20	11	10 1/2		8	

b. Radio Set AN/TRC-68.

Quantity	Item	Fig. No.	Height (in.)	Depth (in.)	Width (in.)	Unit weight (lb)
1	Receiver-Transmitter Group OA-2649/TRC-68 including	2	12	20	18 1/4	155.6
1	Receiver-Transmitter RT-441/TRC-68	6	10	15 1/2	9 1/2	48.8
1	Centrifugal Fan HD-390/U	6	3 1/2	9 1/2	3 1/2	6
1	Receiver-Transmitter Case CY-2712/TRC-68	6	12 1/2	20	19 1/4	55.3
1	Power Supply PP-1494/U	6	12	18 3/4	7 1/8	57.5
1	Mounting MT-2297	6				
1	Radio Set Control C-1439/U	2	6 1/2		6 1/2	5
1	Accessory Case CY-2713/TRC-68	2	23		26 1/2	93.5
1	Electrical Power Cable Assembly CX-4881/U	2	25 ft (lg)			2.3
1	Electrical Special Purpose Cable Assembly CX-4882/U	2	20 1/2 ft (lg)			
1	Electrical Special Purpose Cable Assembly CX-4883/U	2	3 ft (lg)			
1	Electrical Special Purpose Cable Assembly CX-4884/U	2	3 ft (lg)			
1	Connector Adapter UG-565A/U	9				
1	Antenna Assembly AT-197/GR	2				
1	Control Group AN/ including:	12				
1	Remote Control C-433/GRC	12	3 1/2	7 3/3	8 1/4	7
1	Local Control C-434 /GRC	12	3 1/2	10 1/8	8 9/16	10 1/2
1	Handset H-33/PT	12				
1	Bad CW-189/GR	12				
1	Electrical Headset H-113/U	9				
1	Headset Cord CX-1334/U	9				
1	Dynamic Loudspeaker LS-166/U	11	5	5 1/2	3 1/2	1
1	Microphone M-29A /U	11				
1	Spool DR-8-A and Wire WD-1	9				
1 set	Running spares (c)	10				
2	TM 11-5820-222-10	11	10 1/2		8	
2	TM 11-5820-222-20	11	10 1/2		8	

c. *Running Spares* (fig. 10).

(1) *AN/VRC-24*.

Quantity	ITEM
2	Electron tube, 5763
3	Electron tube, 5654/6AK5W
2	Electron tube, 5670
2	Electron tube, 6J4WA
1	Electron tube, 4X150D
1	Electron tube, 6442
1	Electron tube, 7554
2	Lamp, LM-327
3	Fuse, 5-ampere, 32-vdc
3	Fuse, 30-ampere, 32-vdc
5	Fuse, $\frac{1}{4}$ -ampere, 250-vdc
5	Fuse, $\frac{1}{2}$ -ampere, 250-vdc

(2) *AN/TRC-68*.

Quantity	ITEM
2	Electron tube, 5763
3	Electron tube, 5654/6AK5W
2	Electron tube, 5670
2	Electron tube, 6J4WA
1	Electron tube, 4X150D
1	Electron tube, 6442
1	Electron tube, 7554
3	Lamp, LM-327
3	Fuse, 30-ampere, 32-vdc
5	Fuse, 15-ampere, 250-vdc
3	Fuse, 5-ampere, 32-vdc
5	Fuse, 3-ampere, 125-vdc
5	Fuse, 1.5-ampere, 125-vdc
5	Fuse, $\frac{3}{4}$ -ampere, 250-vdc
5	Fuse, $\frac{1}{2}$ -ampere, 250-vdc
5	Fuse, $\frac{1}{4}$ -ampere, 250-vdc
5	Fuse, $\frac{1}{8}$ -ampere, 250-vdc
5	Fuse, 5-ampere, 125-vdc

6. Nomenclature and Common Names

A list of components of Radio Sets AN/VRC-24 and AN/TRC-68 to which common names have been assigned is given below.

Nomenclature	Common Names
Receiver-Transmitter Case CY-2557/VRC-24	RT-323/VRC-24 case
Dynamotor DY-151/U	Dynamotor
Radio Set Control C-1439/U	Radio set control
Receiver-Transmitter Case CY-2712/TRC-68	AN/TRC-68 case
Power Supply PP-1494/U	Power supply
Centrifugal Fan HD-390/U	RT blower
Accessory Case CY-2713/TRC-68	Accessory case
Electrical Headset H-113/U	Headset
Dynamic Loudspeaker LS-166/U	Loudspeaker

7. Description of Radio Set AN/VRC-24

The AN/VRC-24 includes a receiver-transmitter group, a mounting, a radio set control, an antenna, a loudspeaker, a microphone, and interconnecting cable assemblies. The receiver-transmitter group (fig. 1) is secured to the mounting which is normally bolted to a vehicular mounting surface. The cable assemblies interconnect components of the radio set and connect the radio set to the vehicular battery (fig. 3). The actual location of the components in a vehicle depends upon the vehicle and is limited by the lengths of the cable assemblies.

8. Description of Radio Set AN/TRC-68
(fig. 2)

a. The AN/TRC-68 includes a receiver-transmitter group, an antenna, a mounting, a radio set control, and an accessory case containing the interconnecting cable assemblies and the remaining components of the radio set.

b. The receiver-transmitter group is secured to the mounting which may be bolted to a mounting surface. Connections to the power source and radio set control are made at the rear of the receiver-transmitter group case. The interconnecting cable from the antenna is connected to the ANT connector on the front panel of the receiver-transmitter. When the AN/GRA-6 is used, Local Control C-434/GRC is connected directly to the radio set control and through a telephone wire to Remote Control C-433/GRC. The C-434/GRC and the C-433/GRC are components of the AN/GRA-6.

9. Description of Receiver-Transmitter Group OA-2648/VRC-24
(fig. 5)

The OA-2648/VRC-24 consists of a receiver-transmitter, a dynamotor (mounted on the receiver-transmitter) and a case. All operating controls, meter, indicator lamps, and fuses are located on the front panel of the receiver-transmitter. An access plate covers the spare fuse and lamp compartment. An access door covers the memory drum and provides a space for recording the frequencies of the preset channels. Receptacles are provided on the front panel for connection to a microphone, loudspeaker or headset, antenna, and to security equipment. All other connections are made at

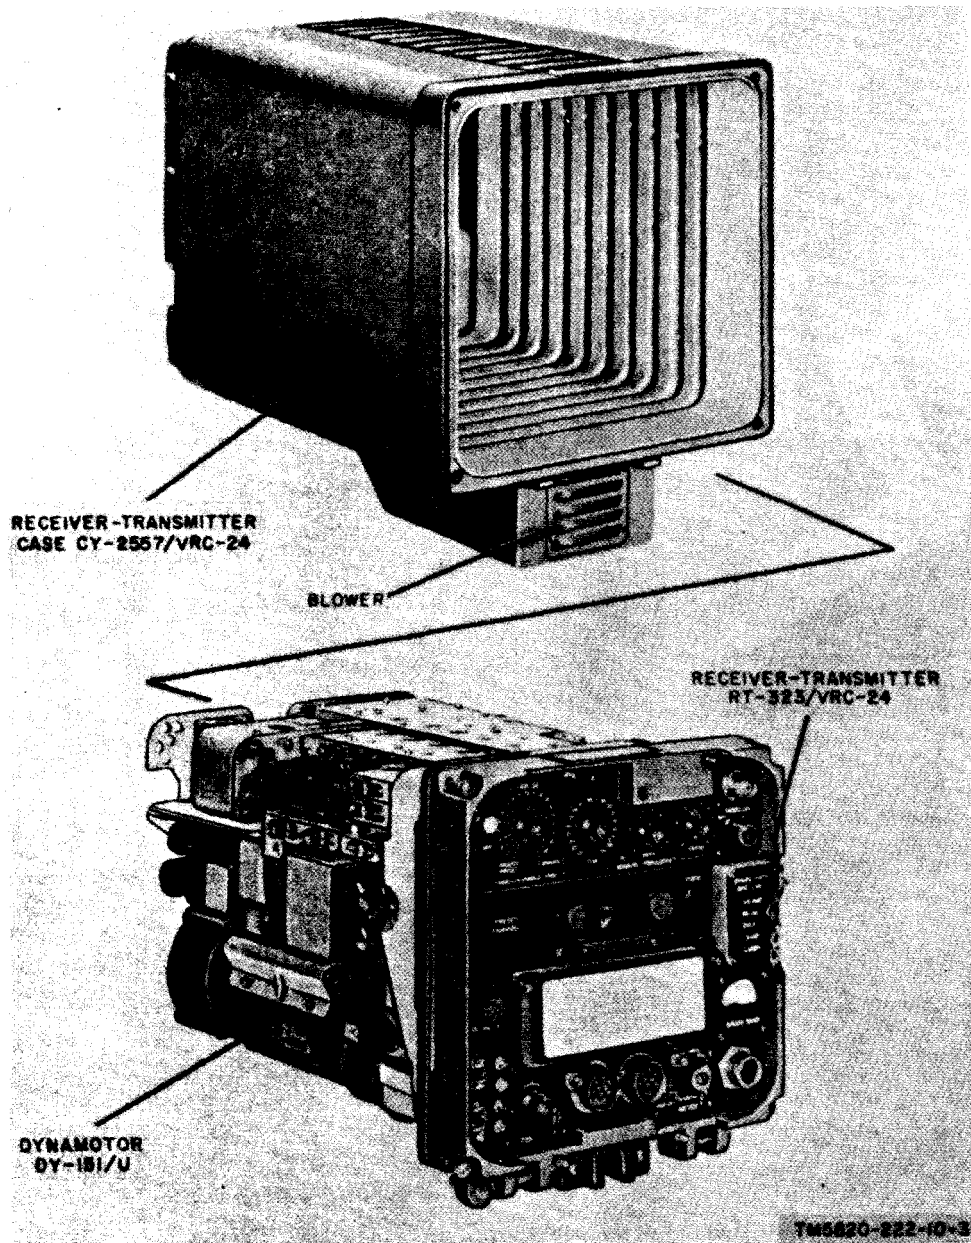


Figure 5. Receiver-Transmitter Group OA-2648/VRC-24.

the rear of the receiver-transmitter. A blower is fastened to the underside of the case. The dynamotor is connected to the vehicular battery and generates the necessary operating voltages for the receiver-transmitter.

10. Description of Receiver-Transmitter

Group OA-2649/TRC-68

(fig. 6)

The OA-2649/TRC-68 consists of a receiver-

transmitter, a power supply, and a case. The receiver-transmitter is the same as the receiver-transmitter of the AN/VRC-24 (par. 9) except that a blower is mounted in place of the dynamotor and the number of fuses on the front panel is different. The power supply operates from either a 115-volt or 230-volt ac source and contains the remaining fuses for the radio set. The case is divided into two compartments, one for the power supply, the

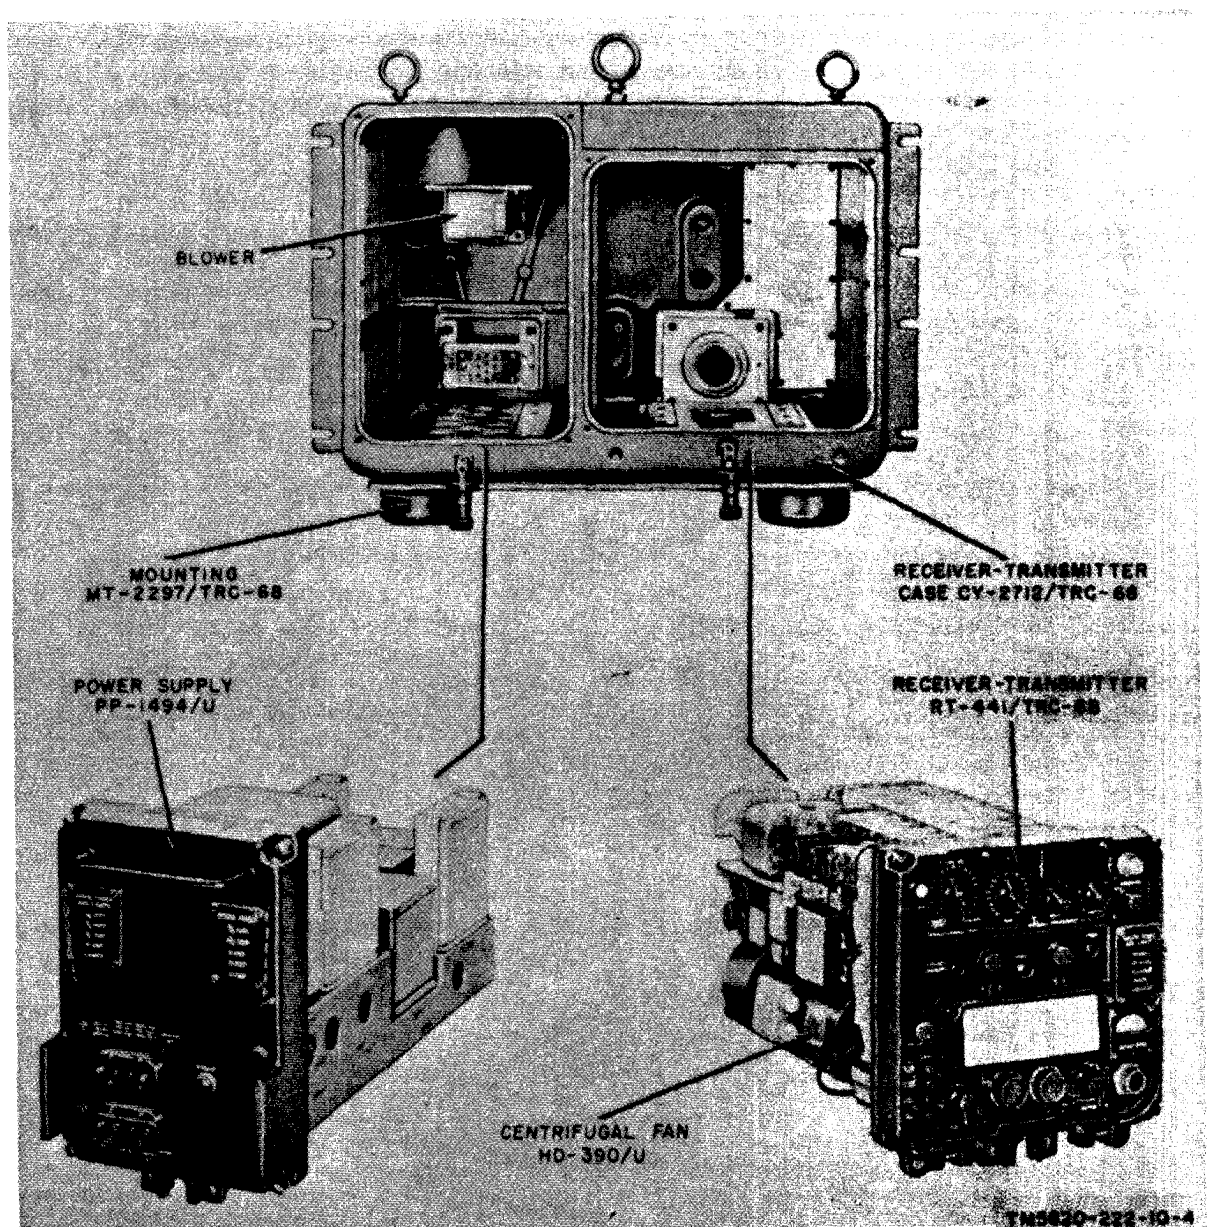


Figure 6. Receiver-Transmitter Group OA-2649/TRC-68 and Mounting MT-2297/TRC-68.

other for the receiver-transmitter. A blower is mounted at the rear of the power supply compartment. The louvered sides of the case are covered with plates to make the unit immersion proof. The plates are removed when operating.

11. Radio Set Control C-1439/U
(fig. 1 and 13)

The radio set control contains controls which

permit operation of the radio set from a position at a short distance away from the receiver-transmitter. The radio set control may be used for radio, interphone, or simultaneous radio and interphone operation. Receptacles at the bottom of the radio set control provide connections for a microphone and either a loudspeaker or headset. In the AN/TRC-68, these receptacles also provide connections to Local Control C-434/GRC of the AN/GRA-6.

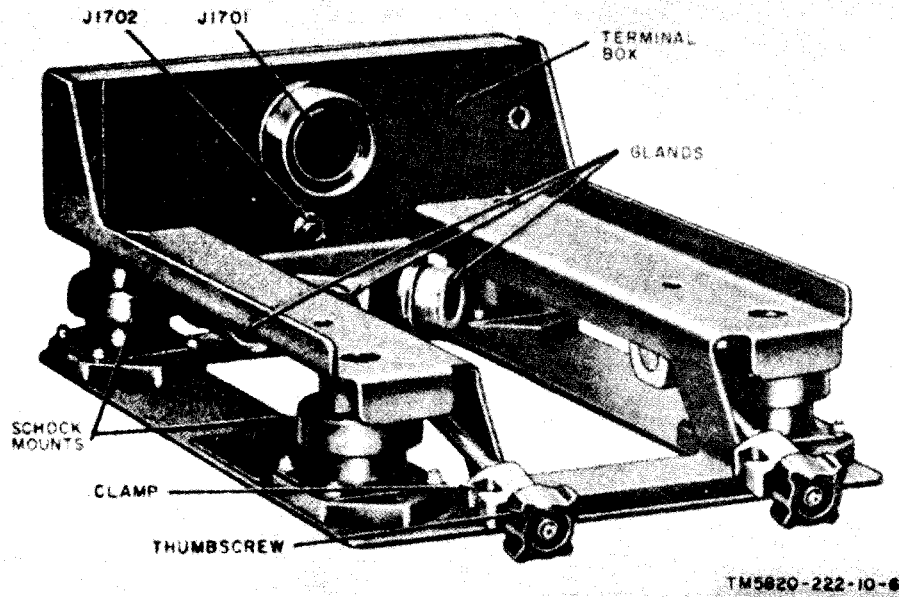


Figure 7. Mounting MT-1436/U.

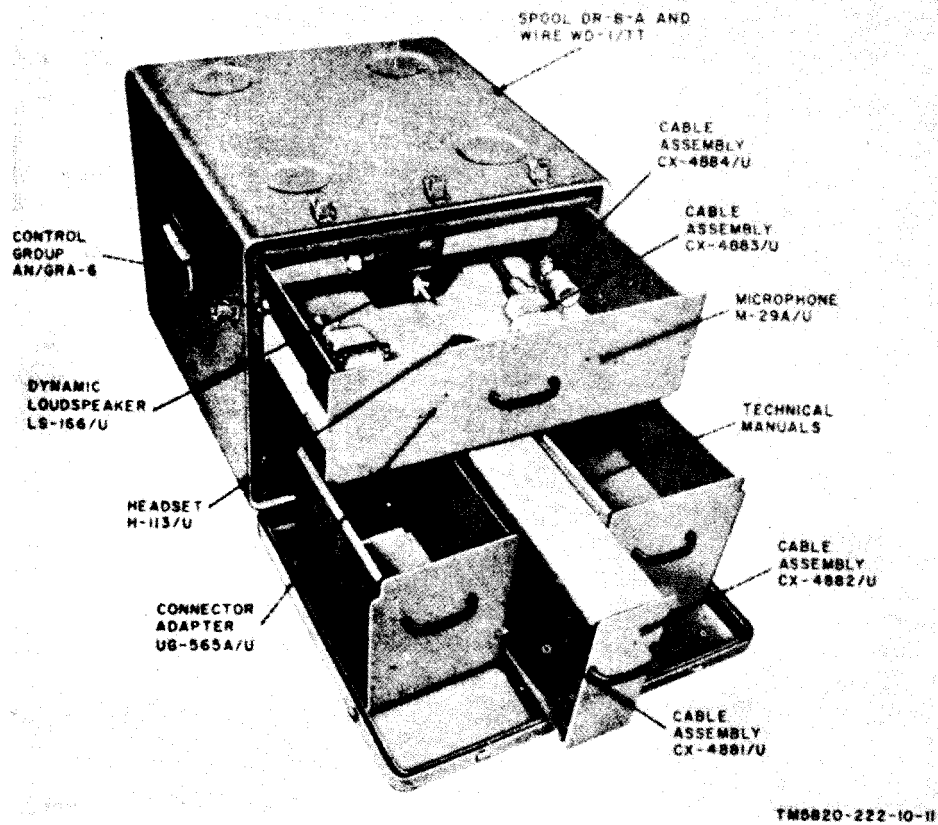


Figure 8. Accessory case.

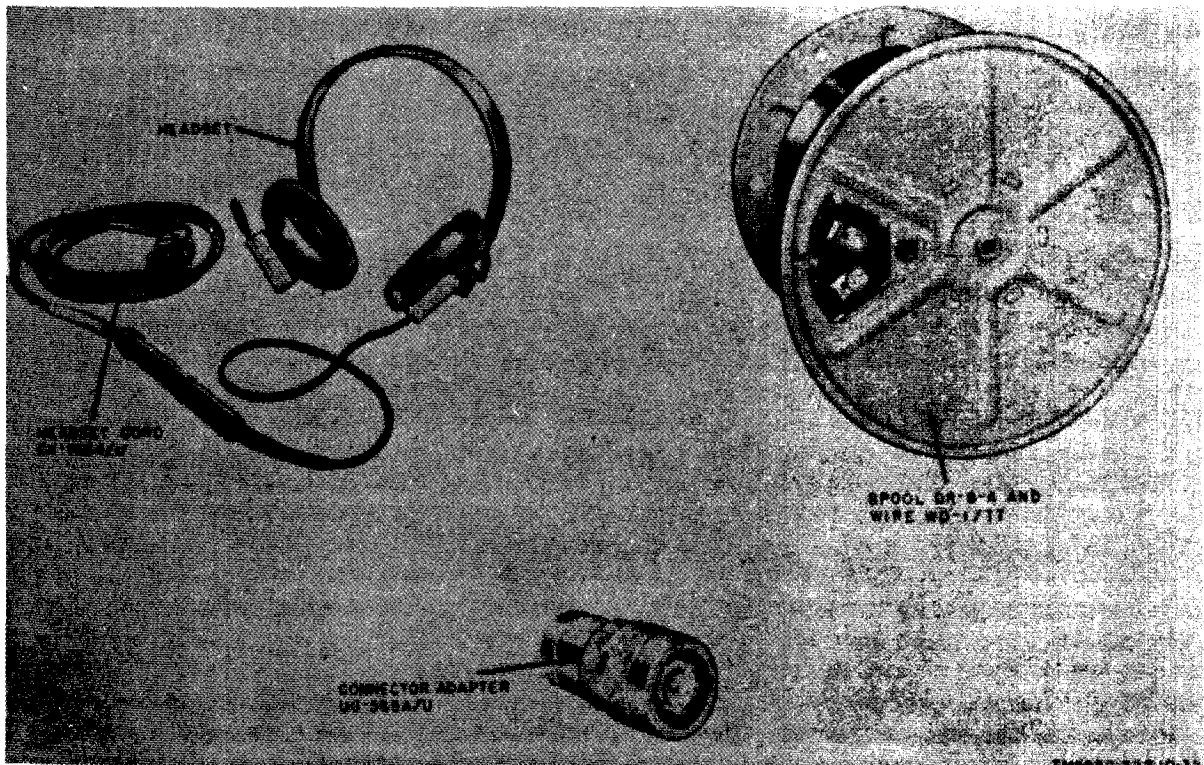


Figure 9. Spool DR-8-A with wire, Connector Adapter UG-565A/U, and headset with cord.

12. Mounting MT-1436/U

(fig. 7)

The mounting consists of two steel platforms separated by four shock mounts. The lower platform is drilled to accommodate bolts for fastening the mounting rigidly to a vehicle. A waterproof terminal box with a removable cover is fastened to the rear of the upper platform. The terminal box contains the receptacles which receive the rear plugs of Receiver-Transmitter Group 0A-2648/VRC-24. Two terminal boards in the terminal box are used for connecting the receptacles to the power and interconnecting cables. Three glands provide waterproof entrances for the cables. Clamps at the front of the mounting engage pins in the lower edge of the RT-323/VRC-24 front panel. The thumbscrews which secure the clamps also serve as injector-ejector mechanisms.

13. Antennas

a. *Antenna AT-803/VR.* Antenna AT-803/VR (fig. 1) is designed for mobile opera-

tion. It is used with Receiver-Transmitter Group OA-2648/VRC-24. It is approximately 10 inches long and has a UG-484/U connector at its base for attaching the CG-1650/U.

b. *Antenna Assembly AT-197/GR.* Antenna Assembly AT-197/GR (fig. 2) is used with Receiver-Transmitter Group OA-2649/TRC-68. It is a disk-cone antenna with two radiator assemblies; the upper part forms a disk, and the lower part forms a cone.

14. Cables for Radio Set AN/VRC-24

(fig. 1)

a. *Radio Frequency Cable Assembly CG-1650/U.* This is a 6-foot coaxial radiofrequency (rf) cable which connects Antenna AT-803/VR to the ANT connector on the RT-323/VRC-24.

b. *Electrical Power Cable Assembly CX-4629/U.* This cable is a two-wire 8-foot power cable. Connections on one end are made at the vehicular battery terminals and connections at the other end are made at Mounting MT-1436/U.

c. *Electrical Special Purpose Cable Assem-*

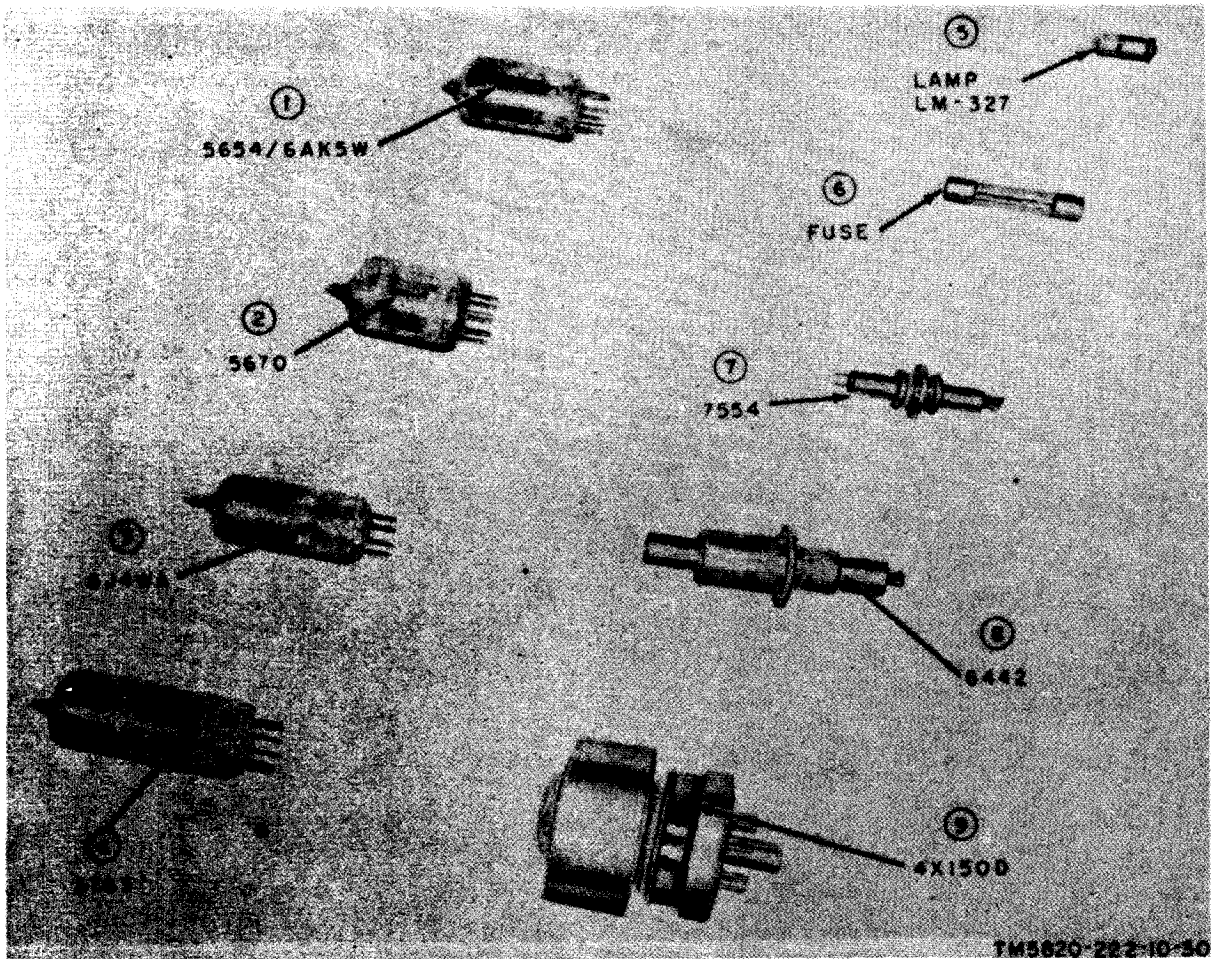


Figure 10. Running spares.

bly CX-4630/U. This is a 10-foot control cable. A 30-contact plug at one end of the cable connects to the radio set control and 22 wires at the other end are soldered to terminal boards in Mounting MT-1436/U.

d. *Electrical Special Purpose Cable Assembly CX-4884/U.* This is a 3-foot extension cable that permits operation of the RT-323/VRC-24 when removed from its case for maintenance.

15. Cables for Radio Set AN/TRC-68

(fig. 2)

a. *Electrical Power Cable Assembly CX-4881/U.* This is a 25-foot, 2-conductor power cable. One end plugs into an ac outlet and the other end connects to the AC POWER receptacle at the rear of the AN/TRC-68 case.

b. *Electrical Special Purpose Cable Assembly CX-4882/U.* This is a 20 $\frac{1}{2}$ -foot control

cable. It connects the radio set control to the receiver-transmitter group.

c. *Electrical Special Purpose Cable Assembly CX-4883/U.* This is a 3-foot extension cable that permits operation of the power supply when removed from the AN/TRC-68 case for maintenance.

d. *Electrical Special Purpose Cable Assembly CX-4884/U.* This is a 3-foot extension cable that permits operation of the RT-441/TRC-68 when removed from the AN/TRC-68 case for maintenance.

16. Accessory Case CY-2713/TRC-68

(fig. 8)

The accessory case contains four drawers for storing the accessory equipment described in paragraph 18, Spool DR-8-A and Wire WD-1/TT (fig. 9), the interconnecting cables, spare tubes (fig. 10), and technical manuals supplied as part of the AN/TRC-68.

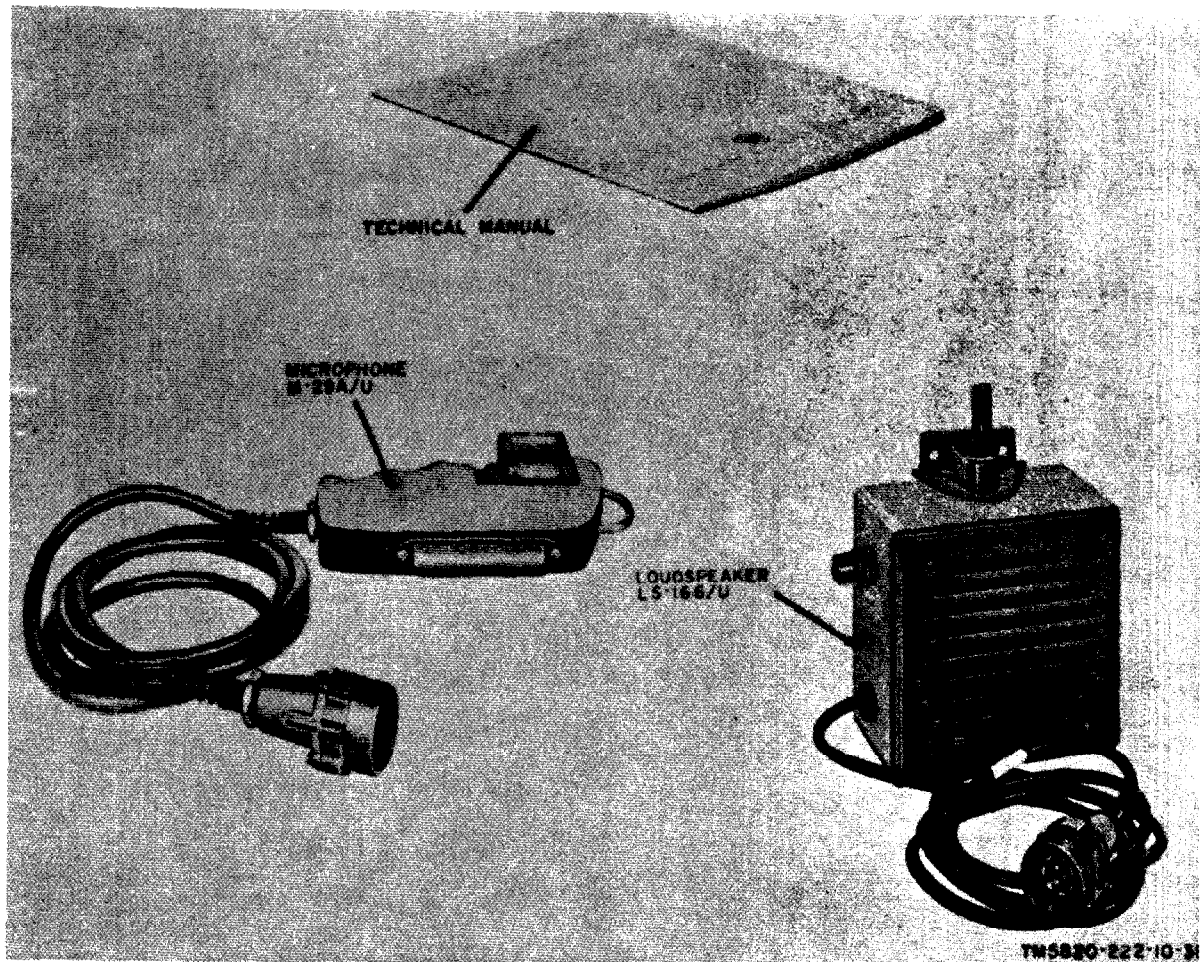


Figure 11. Microphone, technical manual, and loudspeaker.

17. Miscellaneous Components

a. *Control Group AN/GRA-6 (fig. 12).* The AN/GRA-6 (TM 11-5038) consists of a local and a remote control, a handset, and a carrying bar. The AN/GRA-6 provides push-to-talk control of the AN/TRC-68 from a position up to 2 miles away.

b. *Headset and Headset Cord (fig. 9).* The headset consists of two series-connected earphones. A 14-inch cord, terminated at the earphones, connects the headset to Headset Cord CX-1334/U. The CX-1334/U is a 5-foot cord which is used to connect the headset to an AUDIO receptacle on the RT-323/VRC-24, RT-441/TRC-68, or radio set control.

c. *Loudspeaker (fig. 11).* The loudspeaker is a 4-inch unit. A 5-foot cord that terminates in a 10-pin plug is used to connect the loudspeaker to an AUDIO receptacle on the RT-

323/VRC-24, RT-441/TRC-68, or radio set control. A universal-type clamp is provided on the speaker case for mounting purposes.

d. *Microphone M-29A/U (fig. 11).* The microphone element is housed in a plastic case. A push-to-talk switch is located on the side of the case. A connecting cord terminated in a 10-pin plug is used to connect the microphone to an AUDIO receptacle on the RT-323/VRC-24, RT-441/TRC-68, or radio set control.

e. *Connector Adapter UG-565A/U (fig. 9).* The adapter mates a series C female plug with a series N male plug. It is used to adapt the ANT connector on the RT-441/TRC-68 to the cable from Antenna Assembly AT-197/GR.

f. *Mounting MT-2297/TRC-68 (fig. 6).* The mounting consists of a single plate upon which the AN/TRC-68 case is mounted and four feet which can be fastened to a mounting surface.



18. Additional Equipment Required

Electrical Special Purpose Cable Assembly CX-4498/U (fig. 3) is not supplied with the AN/VRC-24, but is required when the AN/VRC-24 is to be used as a retransmission device with Radio Sets AN/GRC-3 through -8.

Wires at the single end of the cable are wired to terminal boards in the mounting, and the branched ends of the cable connect to the RT-70 POWER and AUDIO receptacles of AF Amplifier AM-65/GRC, part of Radio Sets AN/GRC-3 through -8.



Figure 12. Control Group AN/GRA-6.

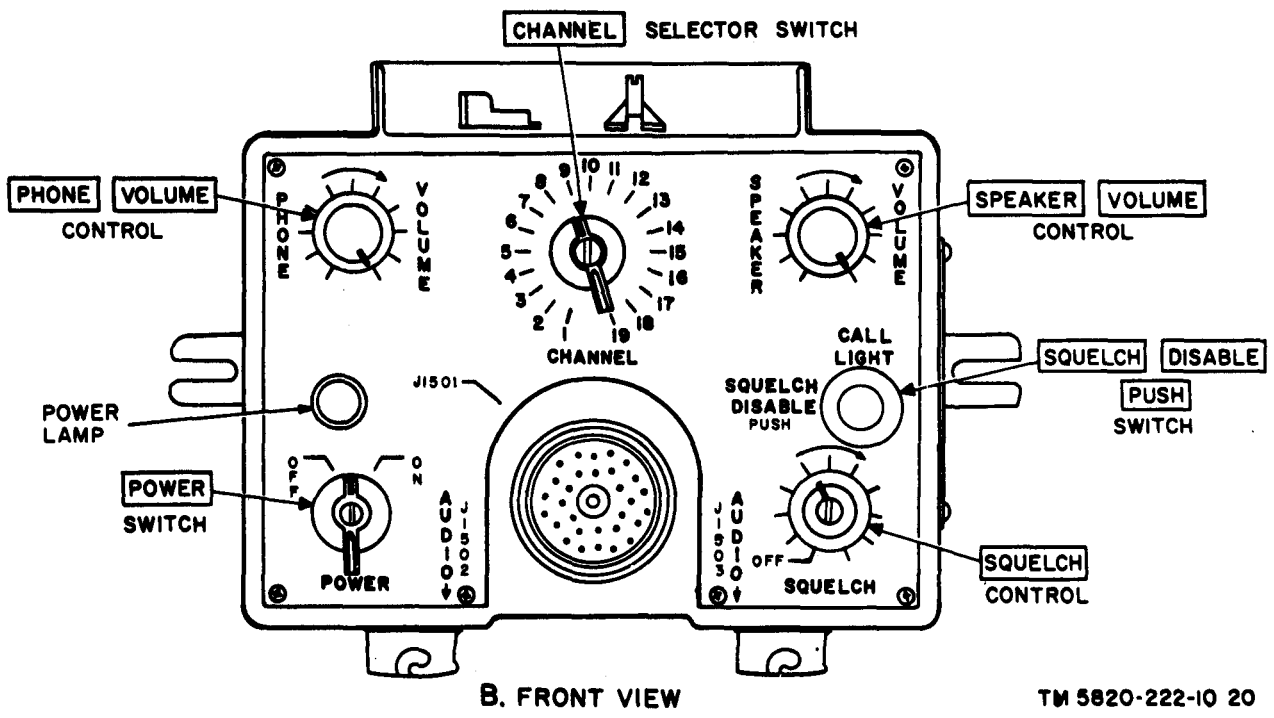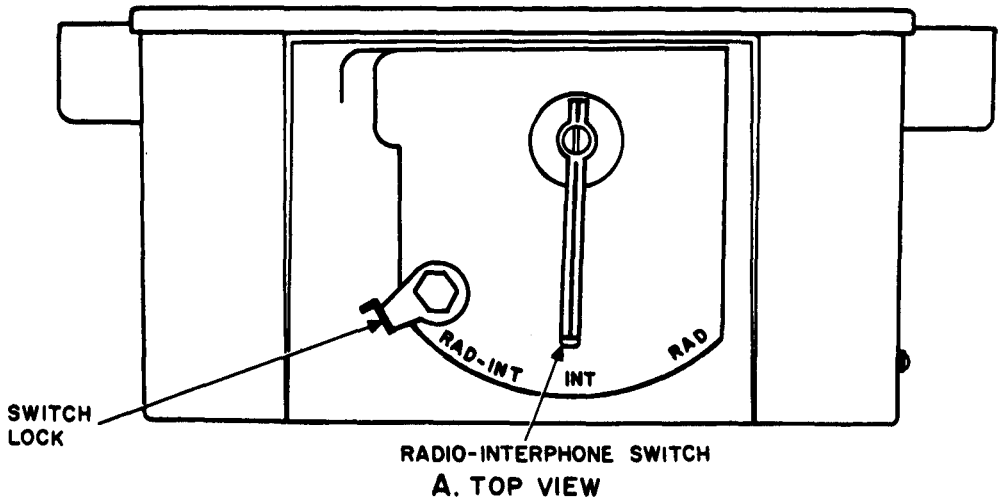

TM 5820-222-10 20

Figure 13. Radio Set Control C-1439/U, controls and indicators.

CHAPTER 2

OPERATING INSTRUCTIONS

Section I. CONTROLS AND INDICATORS

Note. Controls of the AN/GRA-6 supplied with the AN/TRC-68 are covered in TM 11-5038.

19. Radio Set Control C-1439/U (fig. 13)

Control or Indicator	Function
POWER switch	Turns the equipment on or off. Switch is spring-loaded to neutral position.
Power lamp	Lights when power is on.
SPEAKER VOLUME control	Controls loudspeaker audio output level.
PHONE VOLUME control	Controls headset audio output level.
CHANNEL selector switch	Selects one of 19 preset channels when the CHAN SEL switch on the receiver-transmitter is in the REMOTE PRESET position.
SQUELCH DISABLE-PUSH switch and CALL LIGHT lamp	<i>Switch</i> When pushed, disables the squelch circuit. <i>Lamp</i> Lights when the SQUELCH control is OFF, when the SQUELCH DISABLE PUSH switch is pushed, or when the signal received is strong enough to deactivate the squelch.
SQUELCH control	Squelch circuit quiets receiver when there is no incoming signal above level determined by SQUELCH control setting. Squelch circuit is inoperative with the control in the OFF position.
Radio-interphone switch (RAD, INT, RAD-INT).	RAD position - Allows the operator to operate (transmit or receive) RT-323/VRC-24 or RT-441/TRC-68 from the radio set control. INT position - Allows operator to communicate over interphone with personnel at interphone positions connected to retransmission equipment. RAD-INT position - Combines the operation of the above two positions. This position is spring-loaded and must be locked in position.

20. Controls and Indicators, RT-323/VRC-24 and RT-441/TRC-68 (fig. 14)

Control or indicator	Function
POWER switch	Turns the equipment on or off. Switch is spring-loaded to neutral position.
CHAN SEL switch	A 21-position switch with functions as follows: <i>Position</i> <i>Function</i> REMOTE PRESET Transfers control of channel selection and squelch operation to radio set control. Positions 1 through 19 Selects preset channels 1 through 19. MANUAL Transfers frequency selection control to the MANUAL FREQUENCY switches; TENS, UNITS, TENTHS.
MANUAL FREQUENCY switches:	
TENS	Selects first two digits of frequency in mc.
UNITS	Selects third digit of frequency in mc.
TENTHS	Selects fourth digit of frequency in tenths of an mc. Example: To select 325.6 mc, set TENS switch to 32, UNITS switch to 5, and TENTHS switch to .6.
SQUELCH control	Squelch circuit quiets receiver when there is no incoming signal above level determined by SQUELCH control setting. Squelch circuit is inoperative with the control at OFF.

20. Controls and Indicators-Continued.

Controls or Indicators	Function										
SQUELCH DISABLE-PUSH switch and CALL LIGHT lamp	<i>Switch</i> When pushed, disables the squelch circuit.										
VOLUME control	<i>Lamp</i> Lights when the SQUELCH control is at OFF, when the SQUELCH DISABLE-PUSH switch is pushed, or when the signal received is strong enough to deactivate the squelch.										
METER and switch	Adjusts the loudspeaker or local headset audio output level. The meter monitors any one of 10 circuits selected by the METER switch. Indicates whether or not monitored circuit is NORMAL.										
	<table border="1"> <thead> <tr> <th>Position</th> <th>Functions</th> </tr> </thead> <tbody> <tr> <td>S-METER</td> <td>Indicates relative strength of received signal.</td> </tr> <tr> <td>HIGH B+</td> <td>Checks 300-volt supply.</td> </tr> <tr> <td>LOW B+</td> <td>Checks 125-volt supply.</td> </tr> <tr> <td>LINE V</td> <td>Checks 26.4-volt supply.</td> </tr> </tbody> </table>	Position	Functions	S-METER	Indicates relative strength of received signal.	HIGH B+	Checks 300-volt supply.	LOW B+	Checks 125-volt supply.	LINE V	Checks 26.4-volt supply.
Position	Functions										
S-METER	Indicates relative strength of received signal.										
HIGH B+	Checks 300-volt supply.										
LOW B+	Checks 125-volt supply.										
LINE V	Checks 26.4-volt supply.										

Control or Indicator	Function														
	<table border="1"> <thead> <tr> <th>Position</th> <th>Functions</th> </tr> </thead> <tbody> <tr> <td>% MOD</td> <td>Checks modulator output.</td> </tr> <tr> <td>DVR I_b</td> <td>Checks plate current of driver stage.</td> </tr> <tr> <td>PA I_g</td> <td>Checks grid current of power amplifier stage.</td> </tr> <tr> <td>PA I_b</td> <td>Checks plate current of power amplifier stage.</td> </tr> <tr> <td>PWR</td> <td>Checks power output.</td> </tr> <tr> <td>SWR</td> <td>Checks reflected power on transmission line.</td> </tr> </tbody> </table>	Position	Functions	% MOD	Checks modulator output.	DVR I _b	Checks plate current of driver stage.	PA I _g	Checks grid current of power amplifier stage.	PA I _b	Checks plate current of power amplifier stage.	PWR	Checks power output.	SWR	Checks reflected power on transmission line.
Position	Functions														
% MOD	Checks modulator output.														
DVR I _b	Checks plate current of driver stage.														
PA I _g	Checks grid current of power amplifier stage.														
PA I _b	Checks plate current of power amplifier stage.														
PWR	Checks power output.														
SWR	Checks reflected power on transmission line.														
AUDIO receptacles	Provide connections for af output (loudspeaker or headset), microphone input, and radio control line connections.														
PRESET CHANNEL indicator	Indicates channel on which the set is operating. When CHAN SEL switch is set at MANUAL, M appears in the window.														
FREQ indicators	Indicate frequency to which the set is tuned. Numerals in center window indicate tens and units of megacycles and numeral in right window indicates tenths of a megacycle.														

21. Power Supply Indicator (fig. 15)

The only indicator on the power supply panel

is the POWER lamp. When lighted, it indicates that power supply voltages are available to the RT-441/TRC-68.

Section II. OPERATION

Note. Before the radio set can be operated (by SQUELCH control and CHANNEL selector switch) from the radio set control, the CHAN SEL switch on the RT-323/VRC-24 or RT-441/TRC-68 unit must be set to REMOTE PRESET.

22. Presetting Channels (fig. 16)

Perform the following procedures to preset channels to a desired frequency.

a. Operate the POWER switch momentarily to ON and release.

b. Loosen the four slotted-head screws in the memory drum access door and open the door.

c. In the SET CHAN row, find the number of the channel to be preset.

d. Set the CHAN SEL switch to the number in the SEL PRESET row directly below the number in the SET CHAN row. For example: To preset channel 12, set the CHAN SEL switch to 8; to preset channel 17, set the CHAN SEL switch to 13. In figure 16, the CHAN SEL switch is set to MANUAL to preset channel 4.

e. Slide the four pins on the memory drum in the slots for the channel being preset. Set each pin to a position above the number on

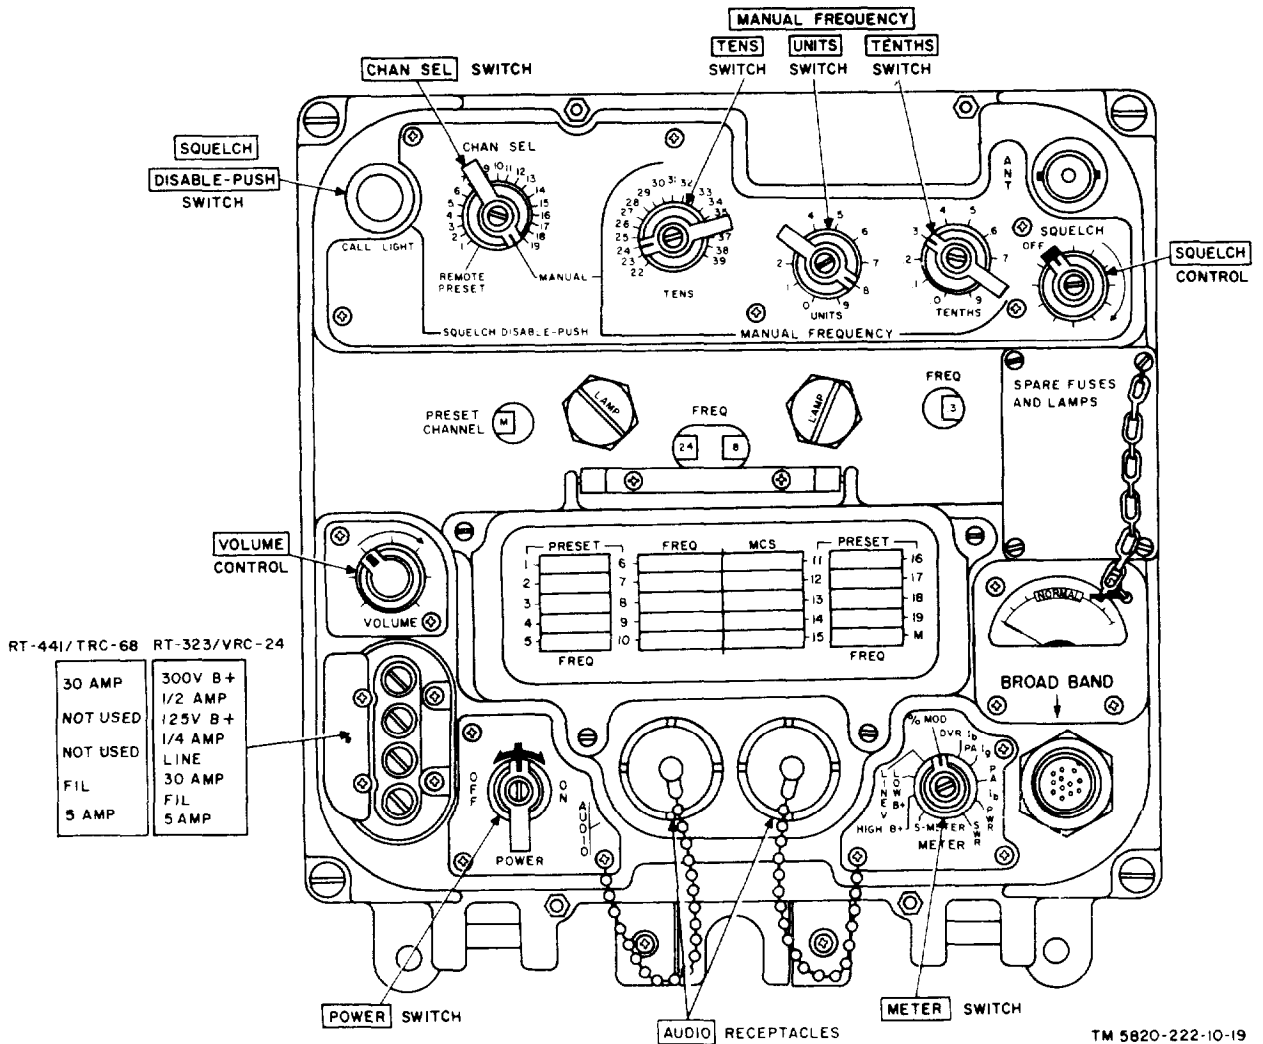


Figure 14. Receiver-Transmitters RT-323/VRC-24 or RT-441/TRC-68, controls, indicators, and receptacles.

the preset frequency selecting row corresponding to a digit of the desired frequency. Channel 4 in figure 16 is shown set for a frequency of 258.3 mc.

- (1) The left-hand pin in the channel 4 slot is set over the number 2.
- (2) The left-center pin is set over the number 5.
- (3) The right-center pin is set over the number 8.
- (4) The right-hand pin is set over the number 3.

f. Note the channel frequencies in the chart provided on the front of the memory drum access door.


23. Starting Procedure (fig. 13 and 14)

a. Operate the POWER switch of the receiver-transmitter or the radio set control momentarily to ON.

b. Operate the METER switch to the LINE V position. The meter needle should indicate in the NORMAL range.

c. For preset-channel operation at the receiver-transmitter:

- (1) Set the CHAN SEL switch to the desired channel.
- (2) When the tuning cycle is complete (approximately 5 seconds), the desired channel number and channel

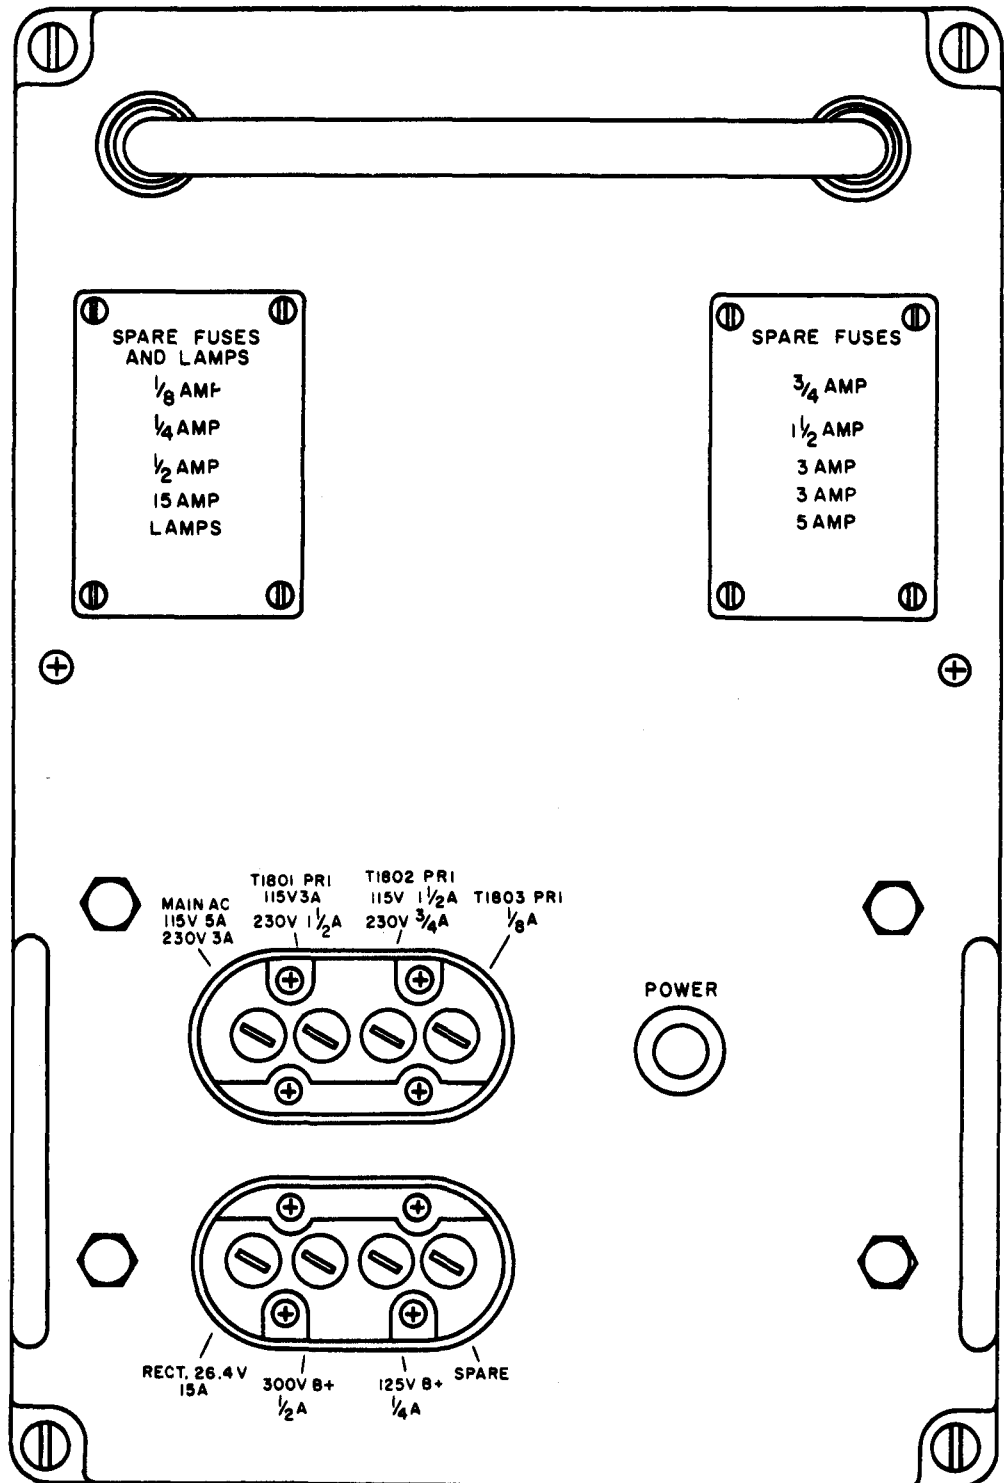

TM 5820-222-10-40

Figure 15. Power Supply PP-1494/U, front panel.

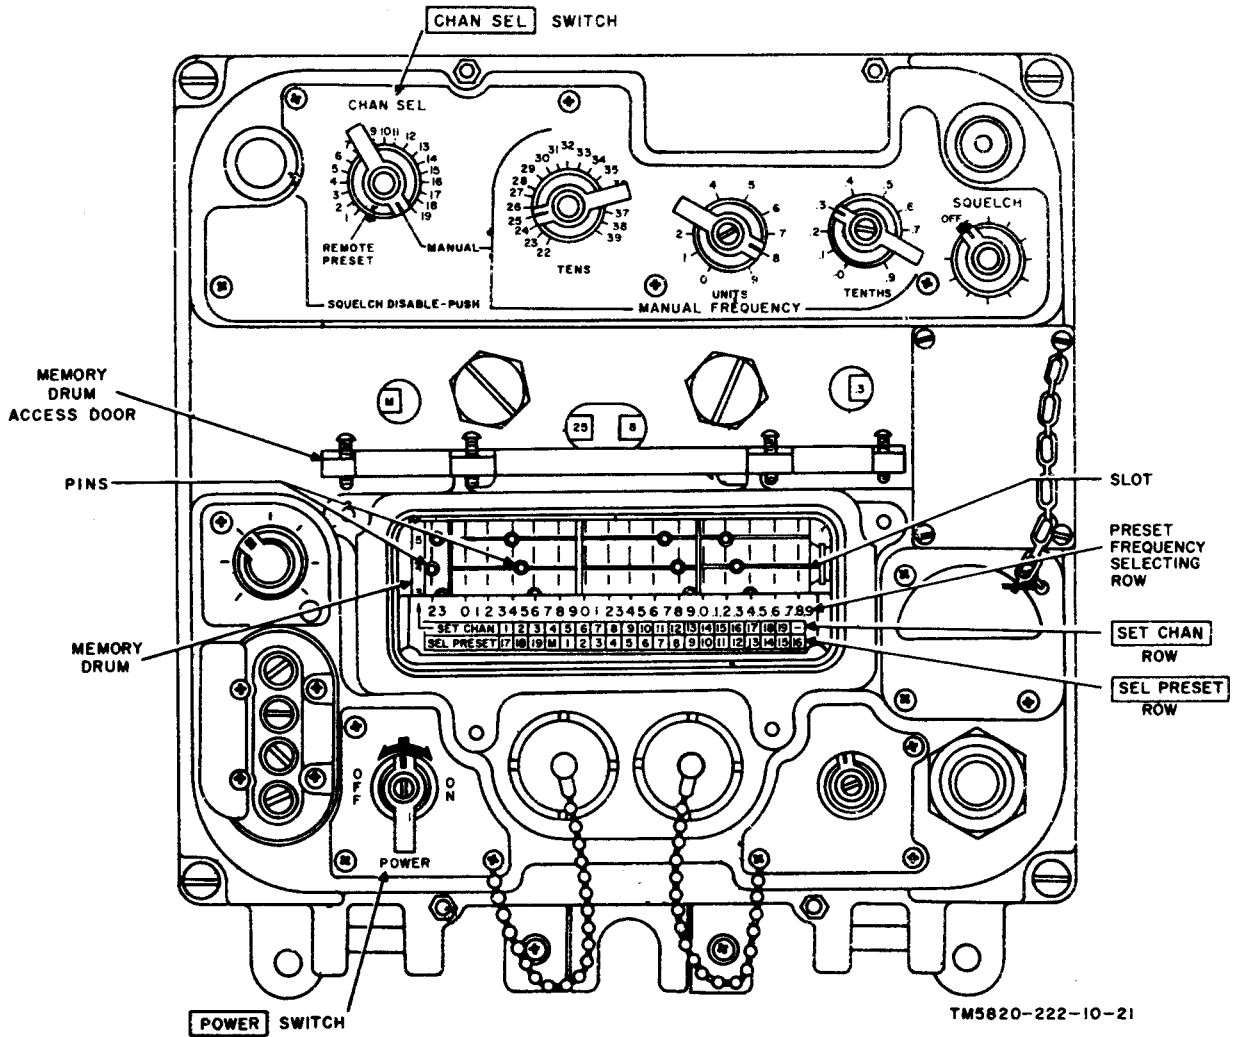


Figure 16. Receiver-Transmitter RT-323/VRC-24 or RT-441/TRC-68, memory drum access door open.

frequency are indicated in the PRE-SET CHANNEL and FREQ windows.

- (3) The indication in the FREQ windows should correspond to the frequency marked on the chart on the memory drum access door.

d. For manual frequency operation:

- (1) Set the CHAN SEL switch to MANUAL.
- (2) Set the MANUAL FREQUENCY switches to the desired frequency.
Example: To select 325.4 mc, set the TENS switch to 32, UNITS switch to 5, and TENTHS switch to 4.

- (3) When the tuning cycle is complete, the frequency is indicated in the FREQ

windows; the PRESET CHANNEL window indicates M.

e. For operation at the radio set control:

- (1) Set the CHAN SEL switch at the receiver-transmitter to REMOTE PRESET.
- (2) Set the CHANNEL selector switch at the radio set control to the desired channel.

f. After the desired preset channel or manual frequency is set, connect the microphone and the loudspeaker or headset to the AUDIO receptacles at the receiver-transmitter or the radio set control. The radio set is now ready for push-to-talk operation.

24. Radiotelephone Reception

a. *Squelch.*

- (1) For average or strong signal reception, turn the SQUELCH control clockwise, with no incoming signal, until the CALL LIGHT goes out and the noise in the loudspeaker or headset just disappears.
- (2) For weak signal reception, turn the SQUELCH control to OFF.
- (3) To momentarily disable squelch operation, press and hold down the SQUELCH DISABLE-PUSH switch.

b. *Volume.*

- (1) At the receiver-transmitter, use the VOLUME control to adjust the loudspeaker or headset output (fig. 14).
- (2) At the radio set control, use either the PHONE VOLUME or SPEAKER VOLUME control as appropriate (B, fig. 13).

25. Radiotelephone Transmission

a. *Operation at Receiver-Transmitter.*

- (1) Set the METER switch to % MOD.
- (2) Operate the microphone push-to-talk switch and speak into the microphone.
- (3) The meter should indicate in the NORMAL range while you speak.

b. *Operation at Radio Set Control.*

- (1) Set the radio-interphone switch (A, fig. 13) to either the RAD or lock it in the RAD-INT position. On RAD-

INT the transmitted speech is also heard over the interphone system.

- (2) Operate the microphone push-to-talk switch and speak into the microphone.

c. *Operation at the AN/GRA-6 (AN/TRC-68 only).*

- (1) Set the switches on the AN/GRA-6 for the desired operation as directed in TM 11-5038.
- (2) Set the radio-interphone switch on the radio set control for the desired operation (RAD or RAD-INT).
- (3) Operate the push-to-talk switch on the AN/GRA-6 handset and speak into the microphone portion of the handset.

26. Interphone Operation at Radio Set Control

a. Set the radio-interphone switch to INT.

b. Operate the microphone push-to-talk switch and speak into the microphone.

c. Communication is provided between the positions at the radio set control, the receiver-transmitter, and the interphone portion of Radio Sets AN/GRC-3 through -8.

d. In the RAD-INT position, the transmitted speech is also heard over the interphone system (para. 25b).

27. Stopping Procedure

To shut off the radio set, momentarily set the POWER switch on the radio set control or the receiver-transmitter to OFF.

CHAPTER 3

MAINTENANCE INSTRUCTIONS

28. Scope of Operator's Maintenance

a. The following is a list of maintenance duties normally performed by the operator of the AN/VRC-24 or AN/TRC-68. The operator requires no special tools or equipment.

b. Operators maintenance for the AN/VRC-24 and AN/TRC-68 consists of the following:

- (1) Preventive maintenance (para. 29).
- (2) Visual inspection (para. 30)
- (3) Operational checklist (para. 31).
- (4) Checking cable connections (fig. 3 and 4)

29. Preventive Maintenance

a. *DA Form 11-238.* DA Form 11-238 (fig. 17) is a preventive maintenance checklist to be used by the operator. Items 1 through 4 are checked daily, and items 5 through 11 are checked weekly by the operator. Items not applicable to the radio set are lined out. Follow the instructions on the form.

b. *Items.* The information shown in this subparagraph supplements DA Form 11-238. The item numbers correspond to the ITEM numbers on the form.

Item	Maintenance procedure
2.	Use lint-free cloth to remove dust, dirt, moisture, and grease from the front panel surfaces and controls. If necessary, wet the cloth with Cleaning Compound (Federal stock No. 7930-395-9542). Wipe the parts with a dry, clean cloth.
3.	Check the spring-return action of the POWER and SQUELCH DISABLE-PUSH switches.

Warning: Cleaning compound is flammable and its fumes are toxic. Do not use near a flame; provide adequate ventilation.

30. Visual Inspection

a. When the equipment fails to perform

properly, turn off the power and check all the items listed below. *Do not check any item with power on.*

- (1) Incorrect setting of switches and controls.
- (2) Power cable or signal cords disconnected or poorly connected.

b. If the above checks do not locate the trouble, proceed to the operational checklist (para. 31).

31. Operational Checklist

a. *General.* The operational checklist will help the operator locate the trouble quickly. Use the corrective measures listed to correct troubles. If the measures suggested do not restore normal equipment performance, troubleshooting by a higher echelon repairman is required. Note on the repair tag what corrective measures were taken and how the equipment performed at the time of failure.

b. *Procedure* (fig. 14).

- (1) Connect the headset or loudspeaker and the microphone to the AUDIO connectors.
- (2) Set the METER switch to the S-METER position.
- (3) Turn the SQUELCH control to OFF.
- (4) Set the VOLUME control to midrange.
- (5) Perform the steps shown in c below, in the order listed. *All steps refer to both Radio Sets AN/VRC-24 and AN/TRC-68 unless otherwise noted.* They are performed at the receiver-transmitter front panel. If the steps in c below yield normal performance and operation from the remote position is abnormal, the radio set control or connecting cable requires higher echelon repair. Observe equipment operation and perform any corrective measures necessary.

LEGEND for marking conditions: Satisfactory, ✓. Adjustment, Repair or Replacement required, X. Defect corrected, ⊗.						DAILY CONDITION FOR MONTH OF																		
DAILY						1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	20	30	ECH- ELON
NO.	ITEM	17	18	19	20	21	22	23	24	25	26	27	28	29	30	31								
1.	COMPLETENESS AND GENERAL CONDITION OF EQUIPMENT. (Transmitter, receiver, carrying cases, wire, cables, microphones, tubes, spare parts, technical manuals).	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓		
2.	CLEAN DIRT AND MOISTURE FROM ANTENNA, MICROPHONES, HEADSETS, KEYS, JACKS, PLUGS, COMPONENT PANELS.	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓		
3.	INSPECT CONTROLS FOR NORMAL OPERATION. TAP CONTROLS LIGHTLY FOR EVIDENCE OF CUT-OUT FROM LOOSE CONTACTS.	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓		
4.	CHECK FOR NORMAL OPERATION OF EQUIPMENT. BE ALERT FOR UNUSUAL OPERATION OR CONDITION.	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓		
WEEKLY		CONDITION EACH WEEK					2D 3D ECH		ADDITIONAL ITEMS FOR 2D AND 3D ECHELON INSPECTIONS														CONDITION	
		1ST	2D	3D	4TH	5TH																		
5.	CLEAN AND TIGHTEN EXTERIORS OF CASES, RACKS, MOUNTS, TRANSMISSION LINES.	✓	✓						15. INSPECT SEATING OF READILY ACCESSIBLE PLUCK-OUT ITEMS: TUBES, LAMPS, FUSES, CRYSTALS, CONNECTORS, VIBRATORS, PLUG-IN COILS.															
6.	INSPECT CASES, MOUNTS, ANTENNA SOCKETS AND EXPOSED METAL SURFACES FOR RUST, CORROSION.	✓	✓						16. INSPECT RELAYS AND CIRCUIT BREAKERS FOR LOOSE MOUNTINGS, BAD CONTACTS, MIS-ALIGNMENT OF CONTACTS AND SPRINGS, PROPER SPRING TENSION.															
7.	INSPECT CORDS, CABLE, WIRE, SHOCK MOUNTS FOR CUTS, KINKS, BREAKS, FRAYING, UNDUE STRAIN.	⊗	✓						17. INSPECT VARIABLE CAPACITORS FOR DIRT, MIS-ALIGNMENT OF PLATES, LOOSE MOUNTINGS, MOISTURE.															
8.	CHECK ANTENNA CUY WIRES FOR PROPER TENSION OR DAMAGE.								18. INSPECT RESISTORS, BUSHINGS AND INSULATORS FOR CRACKS, CHIPPING, BLISTERING, MOISTURE, DISCOLORATION.															
9.	INSPECT CANVAS AND LEATHER ITEMS FOR MILDEW, TEARS, FRAYING.	✓	✓						19. CLEAN AND TIGHTEN SWITCHES, TERMINAL BLOCKS, BLOWERS, RELAY CASES AND INTERIORS OF CHASSIS AND CABINETS NOT READILY ACCESSIBLE.															
10.	INSPECT ACCESSIBLE ITEMS FOR LOOSENESS: SWITCHES, KNOBS, JACKS, CONNECTORS, RELAYS, TRANSFORMERS, MOTORS, PILOT LIGHTS, BLOWERS, ETC.	✓	✓						20. INSPECT TERMINAL BLOCKS FOR LOOSE CONNECTIONS, CRACKS AND BREAKS.															
11.	CLEAN AND/OR INSPECT AIR FILTERS, BRASS NAME PLATES, DIAL AND METER WINDOWS.	✓	✓						21. INSPECT TERMINALS OF LARGE FIXED CAPACITORS AND RESISTORS FOR DIRT, CORROSION, LOOSE CONTACTS.															
12.	INSPECT STORAGE BATTERIES FOR DIRT, LOOSE TERMINALS, SPECIFIC GRAVITY, DAMAGED CASES, INSPECT DRY BATTERIES FOR LEAKAGE.								22. INSPECT TRANSFORMERS, CHOKES, POTENTIOMETERS AND RHEOSTATS FOR OVERHEATING AND OIL LEAKAGE.															
ADDITIONAL ITEMS FOR 2D AND 3D ECHELON INSPECTIONS							CONDITION		23. INSPECT GENERATORS, AMPLIDYNES, DYNAMOTORS FOR BRUSH WEAR, SPRING TENSION, ARCING AND FITTING OF COMMUTATOR.															
13.	INSPECT SHELTERS AND COVERS FOR ADEQUACY OF WEATHER-PROOFING, TEARS, FRAYING.								24. INSPECT CATHODE RAY TUBES FOR BURNT SCREEN SPOTS.															
14.	CHECK TERMINAL BOX COVERS FOR CRACKS, DIRT, LEAKS, DAMAGED GASKETS, GREASE								25. INSPECT WATERPROOF GASKETS FOR LEAKS, WORN OR LOOSE PARTS.															

CONTINUED ON PAGE 4

Figure 17. DA Form 11-238, as used by operator.

c. Checklist

Step	Action	Normal Indication	Corrective measure
1	Turn POWER switch to ON and release. Caution: Do not hold POWER switch ON to operate set.	CALL LIGHT, POWER lamp (on power supply of AN/TRC-68) and dial lamps light. Blower motor (s) start. Receiver noise heard in headset or loudspeaker after short interval.	Check power cable to power source. Higher echelon repair required. Connect headset or loudspeaker to other AUDIO receptacle. Check headset or loudspeaker by substitution. If set remains inoperative, refer to steps 3 and 4 below.
2	Set METER switch to HIGH B+.	Meter indicates in NORMAL range.	Higher echelon repair required.
3	Set METER switch to LOW B+.	Meter indicates in NORMAL range.	Higher echelon repair required.
4	Operate CHAN SEL switch to several channels. Operate CHAN SEL switch to MANUAL and set MANUAL FREQUENCY controls to several channels.	PRESET CHANNEL and FREQ windows indicate correct channel and frequency.	Turn set off. Check to see whether channels are preset correctly on memory drum (par. 22). If preset channels are set correctly and indications for manual channels are not correct, higher echelon repair is required.
5	Press microphone push-to-talk switch. Set METER switch to DVR I _o , PA I _g , PA I _o , PWR and SWR.	Call LIGHT goes out and meter indications are in NORMAL range, except in SWR. In SWR, meter indicates between 0 and 15 percent of full scale.	Check antenna cable connections in case of PWR and/or SWR abnormal indication (s). Interchange microphone and loudspeaker or headset connections. Higher echelon repair required.
6	Set METER switch to % MOD. Press push-to-talk switch and speak into microphone.	During speech, meter indicates in NORMAL range and sidetone is heard.	Interchange microphone and loudspeaker or headset connections. Higher echelon repair required.
7	Turn SQUELCH control clockwise.	CALL LIGHT goes out and noise in headset or loudspeaker disappears.	Higher echelon repair required.
8	Operate POWER switch to OFF and release.	All lights go out, blower motor(s) stop, and receiver noise disappears.	Remove line plug from power source (AN/TRC-68). Higher echelon repair required.

CHAPTER 4

DEMOLITION OF MATERIEL TO PREVENT ENEMY USE

32. Authority for Demolition

Demolition of the equipment will be accomplished only upon the order of the commander. The destruction procedures outlined in paragraph 33 will be used to prevent further use of the equipment.

33. Methods of Destruction

Any or all of the methods of destruction given below may be used. The time available will be the major determining factor for the methods to be used in most instances when destruction of equipment is undertaken. The tactical situation also will determine in what manner the destruction order will be carried out.

a. Smash. Smash the crystals, controls, tubes, coils, switches, capacitors, transformers, loudspeaker, microphones, and headsets; use sledges, axes, hammers, or crowbars.

b. Cut. Cut cords, cables, headsets, and wiring; use axes, machetes or bayonets.

c. Burn. Burn cords, cables, resistors, capacitors, coils, wiring, and technical manuals; use gasoline, kerosene, oil, flamethrowers, or incendiary grenades,

d. Explode. If explosives are necessary, use firearms, grenades, or TNT.

e. Dispose. Bury or scatter the destroyed parts in slit trenches or foxholes or throw them into streams.

APPENDIX I.

REFERENCES

AR 700-38	Unsatisfactory Equipment Report (Reports Control Symbol CSGLD-247 (R2)).	FM 21-5	Military Training
		FM 21-6	Techniques of Military instruction
AR 700-58	Report of Damaged or Improper Shipment	FM 21-30	Military Symbols
DA PAM 108-1	Index of Army Motion Pictures, Film Strips, Slides, and Phono Recordings	SR 320-5	Dictionary of United States Army Terms
		SR 320-50	Authorized Abbreviations and Brevity Codes
DA PAM 310-4	Index of Technical Manuals, Technical Bulletins, Supply Bulletins	TM 11-284	Radio Sets AN/GRC-3, -4, -5, -6, -7, and -8.
	Lubrication Orders, and Modification		
	Work Orders.	TM 11-5038	Control Group AN/GRA-6

By Order Of The Secretaries Of The Army And The Air Force:

L. L. LEMNITZER,
General, *United States Army,*
Chief of Staff.

OFFICIAL:

R. V. LEE,
Major General, United States Army
The Adjutant General.

THOMAS D. WHITE,
Chief of Staff, United States Air Force.

OFFICIAL:

J. L. TARR,
Colonel, United States Air Force,
Director of Administrative Services.

Distribution:

Active Army:

To be distributed in accordance with DA Form 12-7 requirements for TM 11 Series (Uncl) plus the following additional formula:

USASA (1)	11-16 (2)
CNGB (1)	11-55 (2)
Def Atomic Spt Agcy (5)	11-57 (2)
Tech Stf, DA (1) except	11-95 (2)
CSigO (18)	11-96 (2)
USA Abn & Elct Bd (1)	11-98 (2)
USA ATB (1)	11-99 (2)
US ARADCOM (2)	11-117 (2)
US ARADCOM Rgn (2)	11-155 (2)
MDW (1)	11-500 (Tms AA-AE) (2)
Seventh, US Army (6)	11-557 (2)
EUSA (5)	11-587 (2)
Corps (2)	11-592 (2)
USASCS (25)	11-597 (2)
JBUSMC (2)	17 (2)
Units org under the fol TOE:	
1-7 (2)	17-22 (2)
1-17 (2)	17-25 (2)
1-57 (2)	17-26 (2)
1-107 (2)	17-45 (2)
6-100 (2)	17-46 (2)
6-101 (2)	17-51 (2)
6-300 (2)	17-52 (2)
6-301 (2)	17-55 (2)
6-401 (2)	17-56 (2)
7 (2)	17-65 (2)
7-2 (2)	17-66 (2)
7-11 (2)	17-85 (2)
7-12 (2)	17-86 (2)
7-25 (2)	36-51 (2)
7-26 (2)	39-52 (2)
8-137 (2)	55-57 (2)
11-6 (2)	57 (2)
11-7 (2)	57-5 (2)

NG: State AG (3); Units - Same as Active Army except allowance is one copy to each unit.

USAR: None.

For explanation of abbreviations used see AR 320-50.

TM 11-5820-222-10/TO 31R2-2TRC68-1 RADIO SETS AN/VRC-24 AND AN/TRC-68--1960