

# TM 11-876

WAR DEPARTMENT TECHNICAL MANUAL

## RADIO RECEIVER

R-80-( )/PR

(HALLIDAY'S SKY RANGER MODEL S-39)

CIVILIAN CONTRACTOR, TSS  
FORT MONMOUTH, NEW JERSEY

*Copy 2*

WAR DEPARTMENT

4 MAY 1944

WAR DEPARTMENT,  
WASHINGTON 25, D. C., 4 May 1944.

TM 11-876, Radio Receiver R-80 ( )/PR (Hallicrafters Sky Ranger Model S-39), is published for the information and guidance of all concerned.

[A. G. 300.7 (2 May 44).]

BY ORDER OF THE SECRETARY OF WAR:

G. C. MARSHALL,  
*Chief of Staff.*

OFFICIAL:

J. A. ULIO,  
*Major General,  
The Adjutant General.*

DISTRIBUTION:

IC 11 (5).

(For explanation of symbols see FM 21-6.)

## TABLE OF CONTENTS

Section	Subject	Page
A	Description of Equipment	
A-1	General . . . . .	2
A-2	Receiver. . . . .	2
A-3	Power Supplies. . . . .	2
B	Circuit Functions	
B-1	Receiver Circuit. . . . .	2
B-2	Power Circuits. . . . .	4
C	Installation	
C-1	Unpacking . . . . .	6
C-2	Antenna . . . . .	6
C-3	Portable Use. . . . .	7
C-4	Power Line Use. . . . .	7
D	Adjustment and Operation	
D-1	Controls. . . . .	7
D-2	Standard Broadcast Reception. . . . .	8
D-3	Short Wave Reception. . . . .	8
D-4	C-W Telegraph Reception. . . . .	8
D-5	110 Volt Source Operation . . . . .	9
E	Alignment and Service	
E-1	Receiver Alignment. . . . .	9
E-2	Maintenance . . . . .	12
E-3	Service . . . . .	13
E-4	Caution . . . . .	13
F	Supplementary Data	
F-1	Power Requirements. . . . .	13
F-2	Weight. . . . .	13
F-3	Dimensions. . . . .	13
F-4	Table of Tube Socket Voltages . . . . .	15
F-5	List of Replaceable Parts . . . . .	16
F-6	Index to Parts Manufacturers. . . . .	28
F-7	Maintenance Parts List For Radio Receiver R-80 ( )/PR (Hallcrafters Sky Ranger Model S-39). . . . .	29
F-8	List of Manufacturers . . . . .	41

TABLE OF ILLUSTRATIONS

<u>Figure</u>	<u>Subject</u>	<u>Page</u>
1	Model S-39 Receiver, front view . . . . .	1
2	Model S-39 Receiver, schematic. . . . .	3
3	Recommended antenna installations . . . . .	5
4	Model S-39 Receiver, top view . . . . .	10
5	Model S-39 Receiver, bottom view of chassis . . . . .	11
6	Model S-39 Receiver, rear view, cover removed, showing power cord compartment and battery compartment . . . . .	14

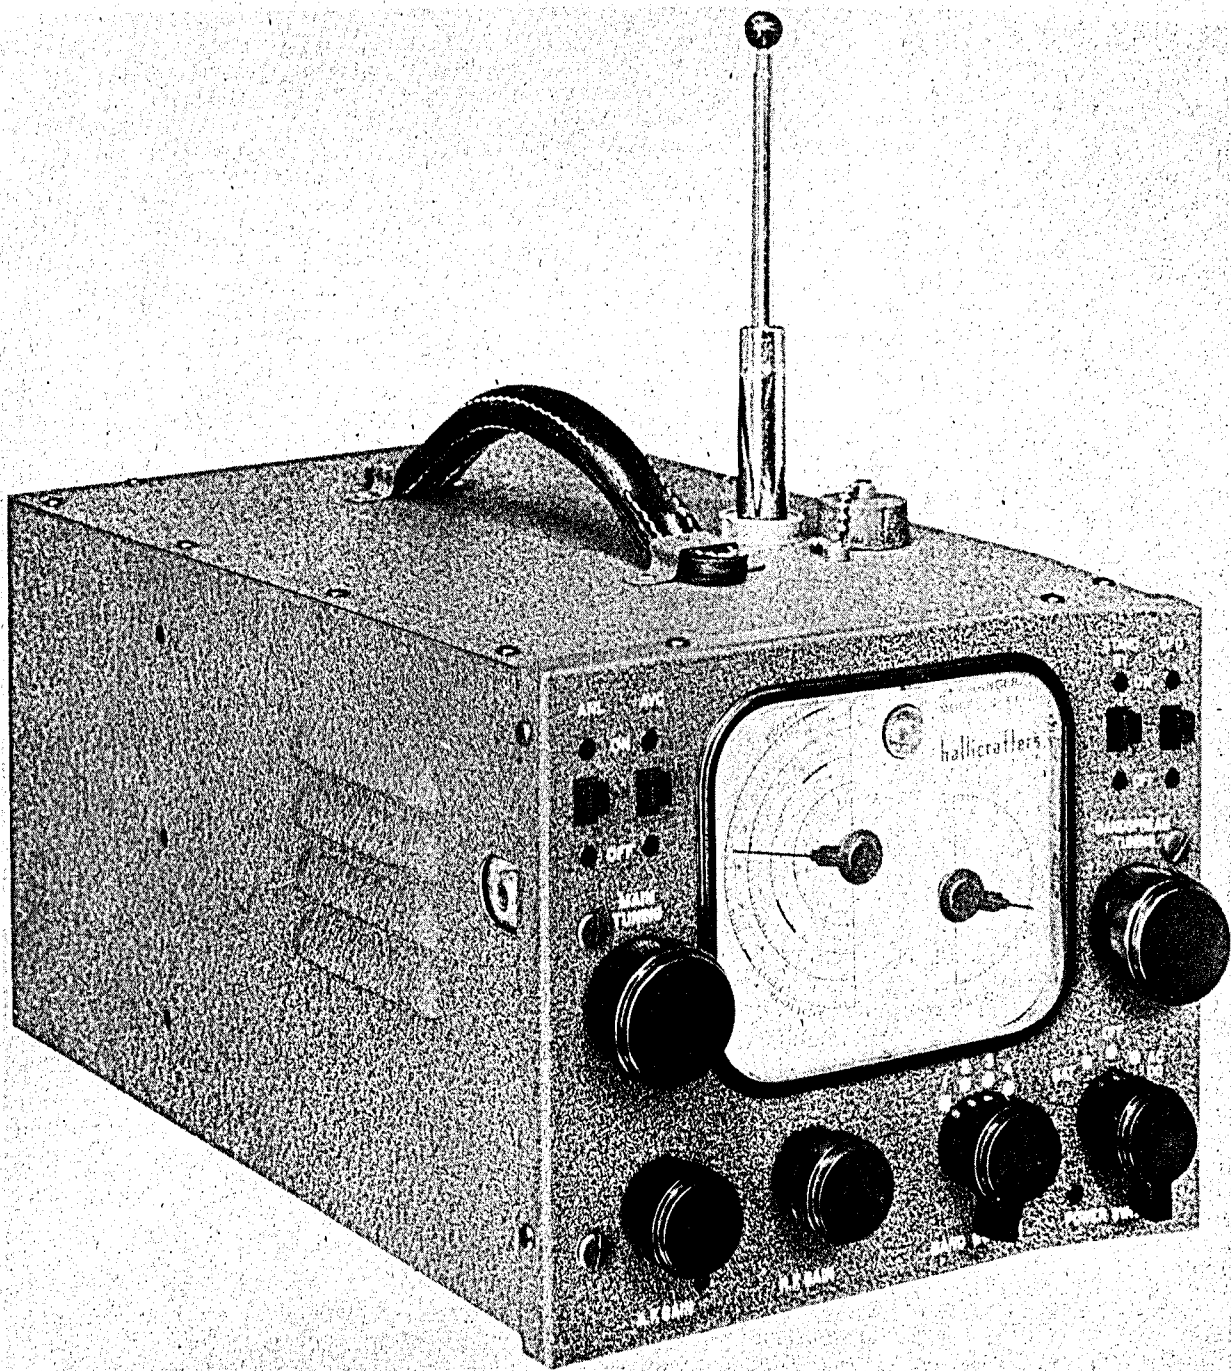


FIG. 1. MODEL S-39 RECEIVER, FRONT VIEW.

## A. DESCRIPTION OF EQUIPMENT

**A-1. GENERAL** - The Model S-39 "Sky Ranger" radio receiving equipment consists of a completely self contained 9-tube superheterodyne communications receiver mounted in a steel cabinet suitable for table operation or portable use. It provides continuous coverage of the broadcast and short-wave bands accepting either c-w telegraph or amplitude modulated telephone signals. Self contained telescoping antenna, speaker and batteries provide the utmost in versatility and convenience. In addition, the receiver may be operated from either a-c or d-c commercial power sources. An external antenna may be used to increase the overall performance. See section C-2 for types of antennas and connection.

**A-2. RECEIVER** - The Model S-39 receiver employs a conventional superheterodyne circuit composed of a single stage of r-f amplification, a combination converter and oscillator stage, two stages of i-f amplification, two stages of a-f amplification, a beat frequency oscillator for code signals, a noise limiter circuit, and automatic volume control circuit. Refer to figure 2 for the schematic diagram.

The tuning range of the receiver provides continuous coverage of the frequencies between .55 and 30 megacycles. The overall range is covered in 4 bands, the desired band being selected by the BAND SWITCH on the front panel. The four dial scales, corresponding to the 4 bands are calibrated to read the frequency of reception directly in megacycles provided the BANDSPREAD pointer is set at "0". Any section of the MAIN TUNING dial scale can be spread out by tuning over the section with the BANDSPREAD control.

In addition to the MAIN TUNING, BANDSPREAD TUNING and BAND SWITCH controls, there are the R.F. GAIN or sensitivity control; the A.F. GAIN or volume control; the

POWER SWITCH; and ANL, AVC, STAND BY, and BFO switches. The use of these controls will be covered in Section D.

The complete tube complement of the Model S-39 receiver is as follows:

TUBE	TYPE	PURPOSE
V <sub>1</sub>	1T4	R-F amplifier
V <sub>2</sub>	1R5	Converter and oscillator
V <sub>3</sub>	1P5GT	First i-f amplifier
V <sub>4</sub>	1P5GT	Second i-f amplifier
V <sub>5</sub>	1H5GT	Detector, A-V-C and first audio amplifier
V <sub>6</sub>	3Q5GT	Audio amplifier
V <sub>7</sub>	35Z5GT	Rectifier
V <sub>8</sub>	1H5GT	Beat frequency oscillator and automatic noise limiter
V <sub>9</sub>	35Z5GT	Rectifier

**A-3. POWER SUPPLIES** - Two separate and independent power supplies are incorporated in the receiver, namely an internal battery supply and a rectifier-filter type of supply for use with an external a-c/d-c source.

The battery supply consists of two 45-volt "B" batteries (BA<sub>2</sub> and BA<sub>3</sub>) connected in series, and one 6-volt "A" battery (BA<sub>1</sub>) all of which are located in the back section of the carrying-case cabinet. See figure 6.

The a-c/d-c supply consists of two type 35Z5GT rectifier tubes (V<sub>7</sub> and V<sub>9</sub>) and the associated filter (L<sub>2</sub>, C<sub>35</sub> and C<sub>27</sub>) and filament voltage dropping resistors (R<sub>32</sub>, R<sub>33</sub>, R<sub>34</sub> and R<sub>35</sub>). This supply may be used whenever commercial power lines, delivering 110-to 117-volts A-C or D-C are accessible. Refer to Section D for operating instructions.

The supply to be used is selected from the front panel by POWER SWITCH, SW<sub>7</sub>. Refer to figure 2 for circuit details.


## B. CIRCUIT FUNCTIONS

**B-1. RECEIVER CIRCUIT** - Figure 2 shows the complete schematic circuit diagram of the S-39 receiver. The signal is picked up on the built-in telescoping antenna or on an external antenna connected to socket SO<sub>1</sub>. The signal current flows through the primaries of the antenna transformers T<sub>5</sub>, T<sub>6</sub>, T<sub>7</sub> and T<sub>8</sub>, depending upon the position of the BAND SWITCH (SW<sub>6A</sub> and B) which serves to connect the proper inductance and capacity in the circuit for the various fre-

quency ranges. Reference to figure 2 will show how this is accomplished.

The signal voltage induced in the secondary winding of antenna transformer T<sub>5</sub>, T<sub>6</sub>, T<sub>7</sub> or T<sub>8</sub>, depending on the setting of the BAND SWITCH, is applied to the grid of the type 1T4 r-f amplifier tube (V<sub>1</sub>). BAND SWITCH SW<sub>6C</sub> determines the proper secondary section to be used for the particular band of frequencies being received. The amplified

FIG. 2. MODEL S-39 RECEIVER, SCHEMATIC

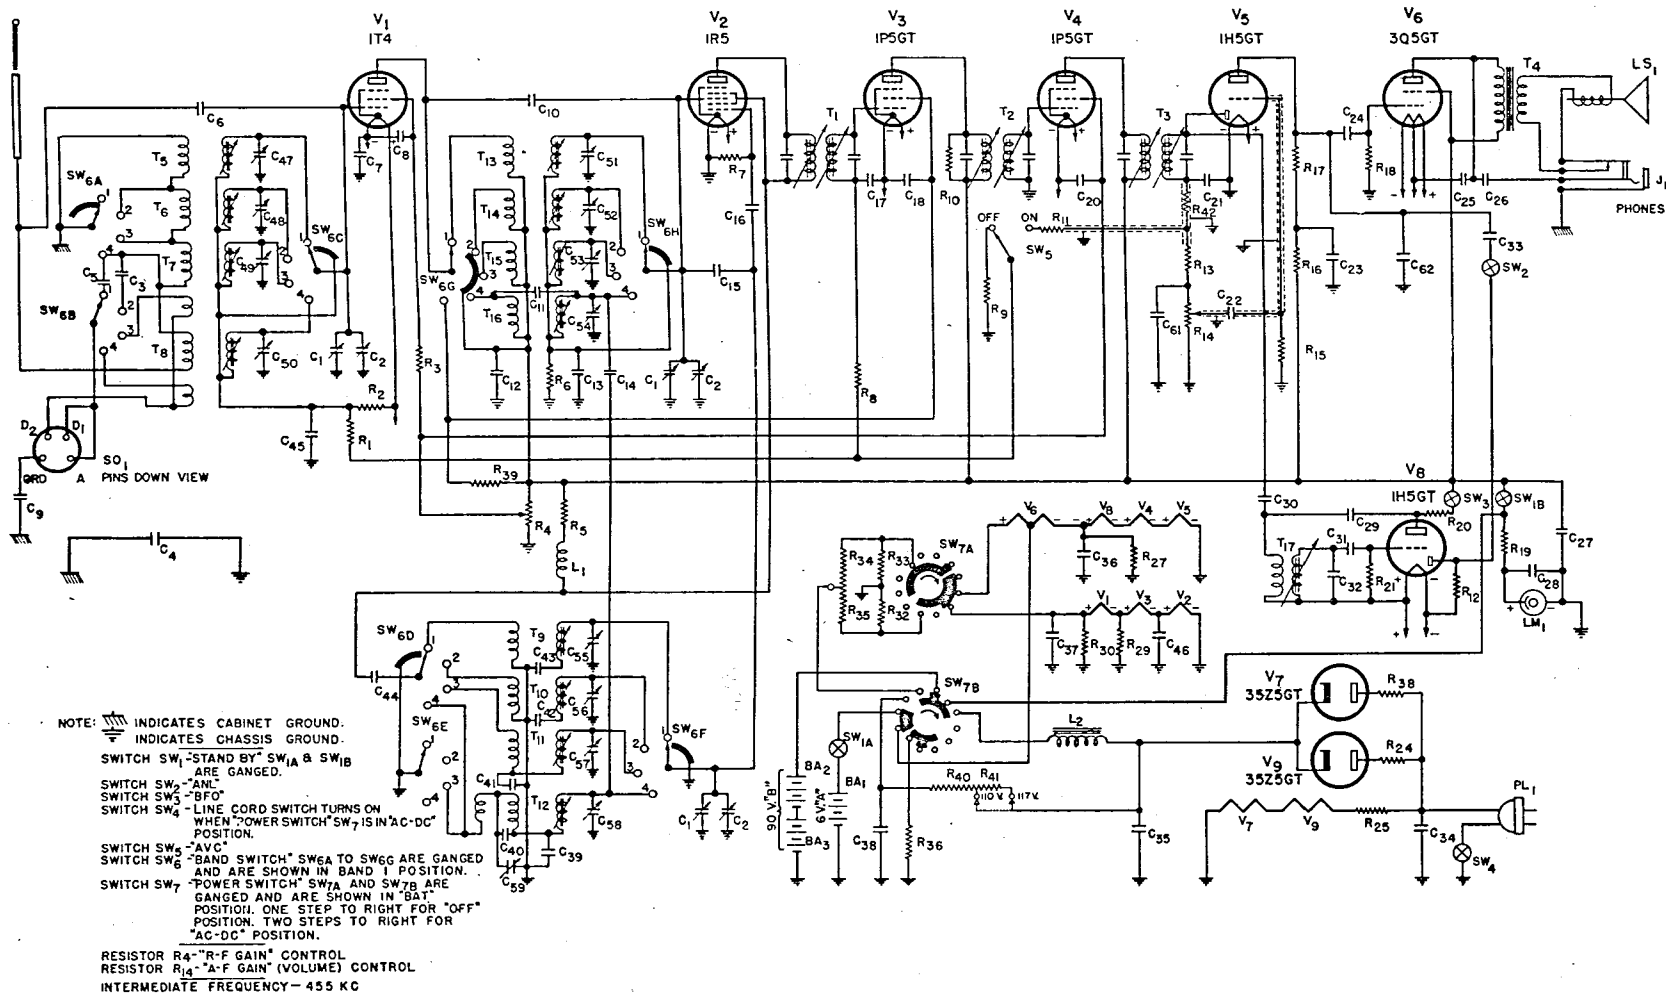

signal voltage from the 1T4 r-f amplifier tube ( $V_1$ ) is coupled to the grid of the converter tube  $V_2$  by transformers  $T_{13}$ ,  $T_{14}$ ,  $T_{15}$  or  $T_{16}$ , switches  $SW_{6G}$  and  $H$  determining the transformer used. Condensers  $C_{10}$  and  $C_{11}$  furnish additional coupling on the high frequency end of the range. Condensers  $C_{51}$ ,  $C_{52}$ ,  $C_{53}$  and  $C_{54}$  trim the respective secondaries of the r-f transformers  $T_{13}$ ,  $T_{14}$ ,  $T_{15}$  and  $T_{16}$  and switch  $SW_{6H}$  selects the proper coil and condenser to tune the incoming signal.

The type 1R5 tube ( $V_2$ ) serves the multiple purpose of converter and high frequency oscillator. The oscillator grid, screen and filament serve as a triode oscillator, tuned by the oscillator transformers  $T_9$ ,  $T_{10}$ ,  $T_{11}$  and  $T_{12}$  and the main tuning condenser to produce the high frequency signal, which, when combined with the received signal in the mixer section of tube  $V_2$  produces the intermediate frequency. Switch  $SW_{6D}$ , E and F select the coil and condenser circuits that will produce the oscillator voltage for the band to be used to give an intermediate frequency of 455 KC. when combined with the incoming signal.

This intermediate frequency is the difference between the incoming signal frequency and the oscillator frequency. On the three lower frequency ranges, Bands 1, 2 and 3, the high frequency oscillator section is tuned 455 KC. higher in frequency than the incoming signal frequency. On the highest frequency range, Band 4, it is tuned 455 KC. lower in frequency than the incoming signal frequency.

The intermediate frequency voltage from the mixer section of tube  $V_2$ , which contains all the characteristics of the incoming signal, is amplified in the two i-f stages composed of transformers  $T_1$ ,  $T_2$  and  $T_3$ , the two 1P5GT intermediate frequency amplifier tubes ( $V_3$  and  $V_4$ ) and associated circuit components.

The amplified i-f signal from the secondary of transformer  $T_3$  is fed into the diode section of the 1H5GT detector tube ( $V_5$ ). The rectified output from this diode section is capacity coupled to the triode section of the same tube ( $V_5$ ) through condenser  $C_{22}$ . The audio signal level is controlled by the A.F. GAIN control ( $R_{14}$ ). The amplified audio frequency output from the triode section of tube  $V_5$  is capacity coupled to the 3Q5GT final audio amplifier tube ( $V_6$ ) which is in turn inductively coupled to the loudspeaker  $LS_1$  through transformer  $T_4$ . When headphones are plugged

into Jack  $J_1$ , the loudspeaker is silenced and the phones are capacitively coupled to the output of tube  $V_6$  through condenser  $C_{26}$ .

A-V-C (automatic volume control) voltage is also supplied from the diode circuit of tube  $V_5$  through resistor  $R_{11}$  and applied to the grids of tubes  $V_1$  and  $V_2$  through switch  $SW_5$  which disconnects the A-V-C voltage when receiving c-w signals.

The 1H5GT beat frequency oscillator and automatic noise limiter tube ( $V_8$ ) serves a dual purpose. Its triode section functions as an oscillator to provide a beat note for the reception of c-w telegraph signals. This triode section of tube  $V_8$  is referred to as the B-F-O (beat frequency oscillator). Transformer  $T_{17}$  and condenser  $C_{32}$  form the oscillatory circuit, which is tuned by the slug in the secondary of transformer  $T_{17}$ , to produce the desired audio pitch in the speaker or phones when combined through capacitor  $C_{30}$  with the 455 KC. intermediate frequency signal in tube  $V_5$ .

The beat frequency oscillator is disconnected by the BFO switch ( $SW_3$ ) for the reception of phone signals.





The diode section of tube  $V_8$  acts as an automatic noise limiter (A-N-L) by clipping off the excessive voltage peaks caused by noise and allowing the normal audio voltage to proceed to the audio amplifier tube  $V_6$  unaltered.

**B-2. POWER CIRCUITS** - Refer to figure 2 for the circuit of the power supplies. The two separate and independant power supplies are controlled by POWER SWITCH  $SW_{7A}$ , B. When the POWER SWITCH is set at OFF neither supply is functioning.

With the POWER SWITCH set at BAT the entire receiver obtains its filament and plate voltages from the 6-volt "A" battery ( $BA_1$ ) and the two 45-volt "B" batteries ( $BA_2$  and  $BA_3$ ) respectively. The filaments of tubes  $V_1$ ,  $V_2$ ,  $V_3$  and half of  $V_6$  are connected in series and the filaments of tubes  $V_4$ ,  $V_5$  and  $V_8$  and the remaining half of  $V_6$  are connected in series. These two series circuits are in turn connected in parallel to the 6-volt "A" battery ( $BA_1$ ) through section A of the STAND BY switch  $SW_1$ . The plate and screen circuits are connected to the "B" batteries through section B of the STAND BY switch  $SW_1$ . Note that both filament and plate voltages are disconnected from the receiver during stand-by periods when operating from the battery supply to conserve battery life. This feature is



FIG. 3. RECOMMENDED ANTENNA INSTALLATIONS.

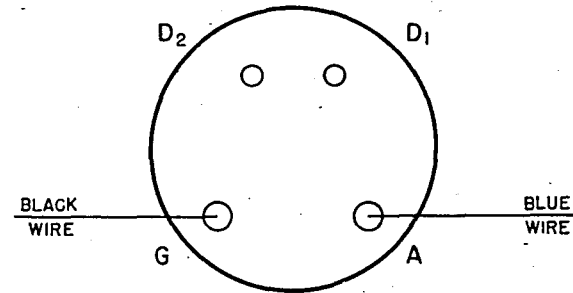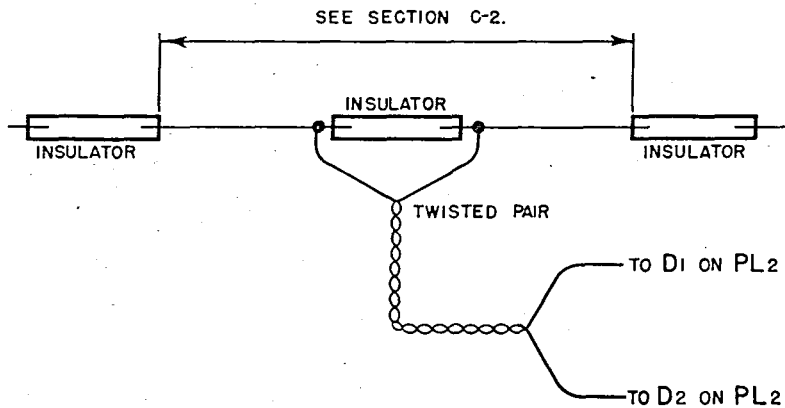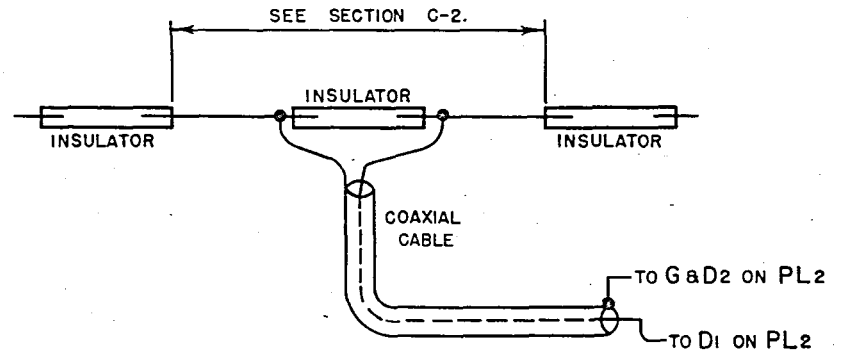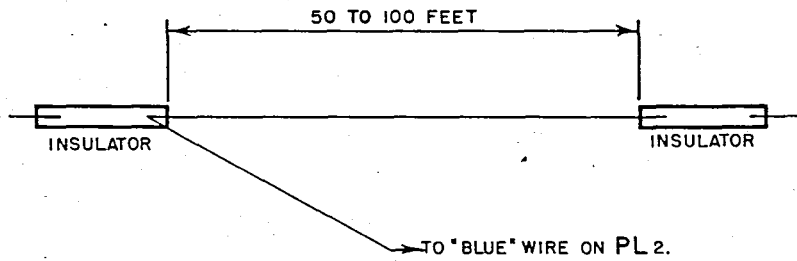

PL2  
PIN VIEW  
NOTE: PL2 IS SUPPLIED  
WIRED AS ABOVE

possible through the use of quick heating filament type tubes.

With the POWER SWITCH set at AC/DC the set will operate from a commercial power line supplying 110-to 117-volts of either alternating current or direct current power. The rectifier tubes  $V_7$  and  $V_9$  (type 35Z5GT) are operated in parallel to furnish a pulsating direct current when operating from an a-c line or pass the direct current when operating from a d-c line.

When operating from a d-c line it may be necessary to turn the line cord plug around to get the positive terminal connected to the plates of the rectifier tubes so that current will flow.

The filaments of the rectifier tubes are connected in series and operate from the line voltage with the voltage dropping resistor  $R_{25}$ .

The D-C from the rectifiers is fed to the filament circuit of the receiver through  $R_{40}$  when operating from a 110-volt line or through  $R_{40}$  and  $R_{41}$  in series when operating from a 117-volt line. The filament network consists of voltage divider resis-

tors  $R_{33}$  and  $R_{34}$  which supply the filaments of tubes  $V_4$ ,  $V_5$ ,  $V_6$  and  $V_8$  in series and voltage divider resistors  $R_{32}$  and  $R_{35}$  which supply the filaments of tubes  $V_1$ ,  $V_2$  and  $V_3$  in series.

The D-C supplied by the rectifier tubes for the plate and screen current requirements of the receiver is filtered by the pi-section network consisting of choke  $L_2$  and capacitors  $C_{35}$  and  $C_{37}$ . Note that the STAND BY switch ( $SW_{1B}$ ) now disconnects only the plate and screen voltage of the receiver leaving the filaments heated since the rectifier tube filaments take a relatively long time to reach their operating temperature.

The neon lamp ( $LM_1$ ) located in the dial escutcheon operates from the high voltage supplied either by the batteries or the AC/DC supply to indicate that either is supplying power. An RC oscillator circuit composed of  $R_{19}$  and  $C_{28}$  excites this lamp, hence very little power is drained from the supply for this indicator. The indicator will always glow as long as the POWER SWITCH is set at either its BAT or AC/DC position.

## C. INSTALLATION

**C-1. UNPACKING** - Remove the receiver and accessories from the carton and inspect them carefully for any damages or shortages. Claims for damage should be made immediately to the transportation company. Claims for shortages should be made immediately to the Hallicrafters Co., Chicago 16, Ill., U.S.A.

**C-2. ANTENNA** - A built-in telescoping antenna that can be extended to approximately 26 inches is permanently installed in the receiver and will generally give good reception over the entire tuning range. When the receiver is to be used in a permanent or semi-permanent location, it is sometimes desirable to install a long wire antenna to provide increased sensitivity. This is especially true if the set is operated in a steel framed or metal lathed building as such construction tends to shield the receiver.

For general all-around use the simplest form of antenna is a piece of copper wire 50 to 100 feet long, erected as high and as free from surrounding objects as possible and well insulated from ground. When using this type of antenna the telescoping antenna should be fully collapsed and covered with the metal cap. This helps to reduce

the noise level from local electrical disturbances. To connect this antenna to the receiver use plug  $PL_2$  supplied as an accessory. Attach the antenna lead to the "Blue" wire of this plug and a ground wire to the "Black" lead and insert it into socket  $SO_1$  located on the right hand side of the cabinet. Refer to figure 3 for additional details.

If maximum sensitivity on one frequency or small band of frequencies is desired full advantage of the inherent possibilities of the S-39 can best be realized by erecting a simple half-wave doublet antenna that is resonate at the desired frequency. The length of an antenna for a particular frequency can be found by using the formula:-

$$\text{Length of a half wave antenna in feet} = \frac{468}{\text{Desired resonate frequency in megacycles.}}$$

For example: The length of a half wave antenna for operation on 23.5 MC. would be,  $\frac{468}{23.5}$  or 19.5 feet. This is the total length between the end insulators, as shown in figure 3. To convert this length of wire to a half wave doublet cut the wire in the middle and insert a insulator. On either side of this insulator, i.e., to each quar-

ter wave section of the antenna, attach one terminal of the lead-in, be it twisted pair or coaxial cable.

Connection from the feeders to the receiver is made by means of plug PL<sub>2</sub>. Figure 3 shows how this plug is to be wired for different types of feed lines.

Every half-wave doublet antenna has directional characteristics broadside of its length - i.e. it receives signals better from the sides than it does from the ends and so should, if at all possible, be erected at right angles to the direction from which reception is desired.

All connections and joints in the antenna system and ground circuit, must be soldered to guard against corrosion and high-resistance joints which will materially reduce the incoming signal strength and give noisy reception generally.

**C-3. PORTABLE USE** - The Model S-39 receiver can generally be operated in any location because of its self-contained power supply and antenna. However, some locations may

require the use of an external wire antenna to overcome shielding effects of surrounding objects and reduce interference from nearby electrical equipment.

Battery life is limited and since the receiver works equally well on battery or power line supply it is highly advisable to make use of the latter whenever possible.

**C-4. POWER LINE USE** - The S-39 receiver will operate from any a-c or d-c power line delivering 110-or 117-volts. NOTE:- As shipped the S-39 is wired for 117-volt operation. For 110-volt operation see Section D-5 for change in wiring.

The power cord with plug PL<sub>1</sub> is located in the rear compartment of the cabinet and is reached by opening the cover plate on the back. (See figure 6). For A-C operation this plug may be connected to the outlet without regard to polarity, but for D-C operation if the receiver refuses to work after a reasonable "warm-up" period reverse the position of plug PL<sub>1</sub> in the outlet socket.

#### D. ADJUSTMENT AND OPERATION

**D-1. CONTROLS** - Reading from left to right the front panel controls and their function are as follows:

- (1) ANL, automatic noise limiter switch SW<sub>2</sub> controls the 1H5GT (V<sub>8</sub>) circuit which is used to minimize "static" and other electrical disturbances by clipping off the peaks of noise pulses that are in excess of the normal audio voltage. It will be found most useful on the short waves (high frequencies) and should be ON only when needed.
- (2) AVC, automatic volume control switch SW<sub>5</sub>, is used to maintain a more nearly constant audio output level. It tends to decrease the effects of fading and limits the overall volume of the receiver automatically. It should be ON when receiving phone signals and OFF when receiving c-w telegraph signals.
- (3) STAND BY switch SW<sub>1</sub> controls both the filament and plate power when operating on batteries and only the plate voltage when operating on AC/DC. It is used to silence the receiver for short intervals, without turning the POWER SWITCH OFF. This switch will be found most useful when the S-39 is used as a communications receiver in conjunction with a transmitter.
- (4) BFO, beat-frequency oscillator, switch SW<sub>3</sub>, provides the beat note of an audio frequency of approximately 1000 cycles. This is made use of in two ways, when receiving c-w telegraph (code) signals and to locate weak phone signals. On weak phone signals it produces a beat note with the carrier for tuning and then the BFO should be turned OFF to eliminate the whistle and allow reception of the phone signal.
- (5) A.F. GAIN, audio frequency gain (volume), control R<sub>14</sub> determines the level of the audio output of both the speaker and phones. This control should be used at all times to increase or decrease volume.
- (6) R.F. GAIN, radio frequency gain control R<sub>4</sub>, controls the sensitivity of the receiver. The control should be kept full on or in the extreme right hand position under ordinary circumstances. The receiver is most sensitive with

this setting and maximum A-V-C action is obtained for phone reception. In some instances when receiving local stations it may be necessary to reduce the sensitivity to prevent overloading the tubes and consequent distortion.

- (7) BAND SWITCH, SW<sub>6</sub> (A to H) selects the correct capacitor and inductance to tune one of the four frequency ranges available.
- (8) POWER SWITCH, SW<sub>7</sub> (A & B) controls both filament and plate power of the receiver. With the switch set at BAT., the receiver power is supplied from the self-contained "A" and "B" batteries. With the switch set at AC/DC the receiver may be operated from either a 110-volt or 117-volt A-C or D-C source. With the switch set at OFF the receiver is inoperative, being disconnected from the battery source and the power line source. CAUTION! Be sure the POWER SWITCH is at OFF when the receiver is not in use - the neon lamp (LM<sub>1</sub>) will glow whenever the POWER SWITCH is set at BAT. or AC/DC.
- (9) MAIN TUNING control which turns the three sections of condenser C<sub>1</sub>, is used for setting the receiver to the desired frequency. The bands marked 1, 2, 3 and 4 on the main tuning dial correspond to the numbered positions of the BAND SWITCH.
- (10) BANDSPREAD TUNING control, which turns the three sections of C<sub>2</sub>, is used for fine adjustment of the received signal and for logging purposes. For accurate frequency reading of the MAIN TUNING dial the BANDSPREAD dial should be set at "0".

**D-2. STANDARD BROADCAST RECEPTION** - For reception of standard broadcast signals the S-39 controls should be set and operated as follows:

ANL	at OFF
AVC	at ON
STAND BY	at ON
BFO	at OFF
BAND SWITCH	at #1 position
POWER SWITCH	at BAT. or AC/DC

Extend the telescoping antenna to full height. If an external antenna is used, collapse the built-in antenna and cover with cap. Connect the external antenna to plug PL<sub>2</sub> (See Section C-2 for wiring details) and insert in socket SO<sub>1</sub>.

Set the BANDSPREAD dial at "0". Turn the R.F. GAIN control full on, i.e. to extreme right. Set the A.F. GAIN control about half on, or to a setting determined by experience. Tune in the station by setting the MAIN TUNING dial at the frequency of the station.

Frequencies being tuned in on Band 1 are read on scale number 1. Adjust the volume to the desired level by use of the AF GAIN control. If a powerful nearby station is being received and the signal is distorted, the RF GAIN control should be reduced by turning the control to the left just enough to clean up the signal.

If static or other electrical disturbances are present with the signal, the ANL switch should be turned ON. This will cut off noise peaks above the normal signal level.

Note: When operating the S-39 on BAT. the set will start to function as soon as the POWER SWITCH is set at BAT. This is possible because of the quick heating of the tubes. On AC/DC however it is necessary to wait a short period before the receiver will start functioning after the POWER SWITCH is set at AC/DC. This is to give the two 35Z5GT rectifier tubes V<sub>7</sub> and V<sub>9</sub> time to heat-up.

**D-3. SHORT WAVE RECEPTION** - For reception of short wave signals set the controls exactly as for Standard Broadcast (See Section D-2) with the exception of the BAND SWITCH. Set the switch to the number corresponding to the frequency range desired.

On the higher frequency bands, it will be found advantageous to set the MAIN TUNING dial near the frequency of the desired station and complete the tuning with the BANDSPREAD TUNING. In tuning the BANDSPREAD for weak short wave stations, extreme care should be exercised to avoid passing over them as the incoming signal is quite sharp.

**D-4. C-W TELEGRAPH RECEPTION** - To receive c-w telegraph signals (code) the controls should be set and operated as follows:

ANL at OFF  
AVC at OFF  
STAND BY at ON  
BFO at ON

BAND SWITCH - On number corresponding to frequency range desired.

POWER SWITCH at either BAT or AC/DC.

R.F. GAIN - To extreme right unless strong nearby stations are being received in which case it will be necessary to reduce the gain to prevent overloading the tubes.

A.F. GAIN - Adjusted to give desired volume.

MAIN TUNING - Dial set on frequency of the desired station.

BANDSPREAD TUNING - Use for precise tuning to the exact frequency of the incoming signal and for logging purposes.

D-5. 110-VOLT SOURCE OPERATION - The receiver, as delivered, is wired for 117-Volt A-C/D-C operation. If the supply voltage is 110-volts, it will be necessary to make one change in the wiring. Resistor  $R_{40}$  -  $R_{41}$  located on the top of the chassis, between the main tuning condenser and the speaker has a wire soldered to the "117" lug. This wire must be unsoldered and soldered to the "110" lug. This is the only change necessary.

Note: It is well to leave the set wired for 117-volt operation unless the power source definitely operates at 110-volts or erratic operation of the receiver due to low line voltage requires that the wiring changes be made.

## E. ALIGNMENT AND SERVICE

### E-1. RECEIVER ALIGNMENT -

- (a) Equipment needed to align the receiver -  
Signal generator to cover 455 KC to 30 MC  
Non-metallic screwdriver  
Output meter with a phone plug connector  
.1 mfd. condenser  
6.5 mmfd. condenser. (Dummy antenna)
- (b) Setting of controls for I-F alignment -  
ANL, AVC and BFO switches at OFF  
STAND BY switch it ON  
A.F. and R.F. GAIN controls set at maximum gain  
BAND SWITCH at #1 Band  
POWER SWITCH at BAT. (power cord removed from wall socket)  
BANDSPREAD TUNING at "0"  
Telescoping antenna completely collapsed.
- (c) I-F alignment (455 KC) -  
Remove top and bottom cover for access to internal components  
Have external antenna plug  $PL_2$  out of socket  $SO_1$   
Connect "hot" lead of signal generator through the .1 mfd condenser to the lug on rear stator section of main tuning condenser ( $C_1$ ).

Connect "ground" lead of signal generator to chassis  
Plug output meter plug in the phone jack ( $J_1$ )  
Set MAIN TUNING dial at 1500 KC - Band #1  
Tune signal generator to 455 KC.  
Adjust slugs  $S_1$  to  $S_6$  inclusive for maximum output. Refer to figure 4 for location of the adjusting screws on transformers  $T_1$ ,  $T_2$  and  $T_3$ .

Repeat adjustments of slugs  $S_1$  to  $S_6$  to peak all the i-f transformers for maximum output.

- (d) B-F-0 adjustment -  
Without disconnecting the signal generator, after completing the i-f transformer alignment, adjust the BFO transformer as follows:

Set BFO switch at ON  
Remove modulation from the signal generator.  
Adjust tuning slug  $S_7$  to desired pitch (Approx. 1000 cycles).  
Slug  $S_7$  is located under the chassis just in back of the coil shield plate.

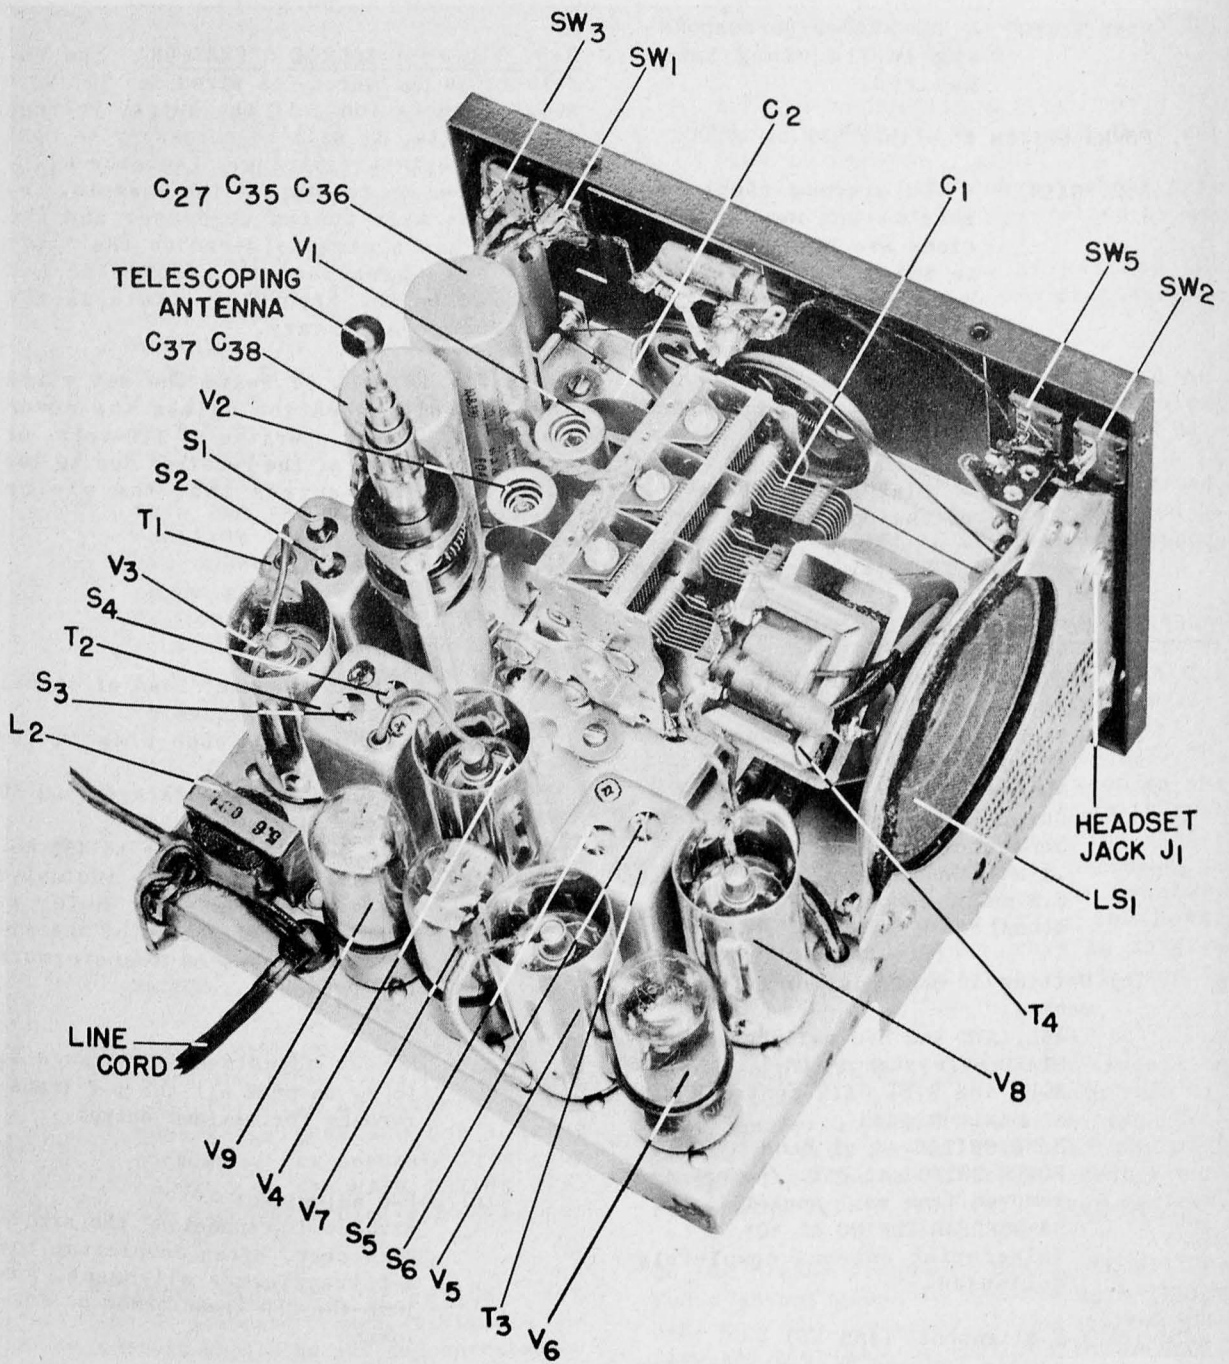


FIG. 4. MODEL S-39 RECEIVER, TOP VIEW.

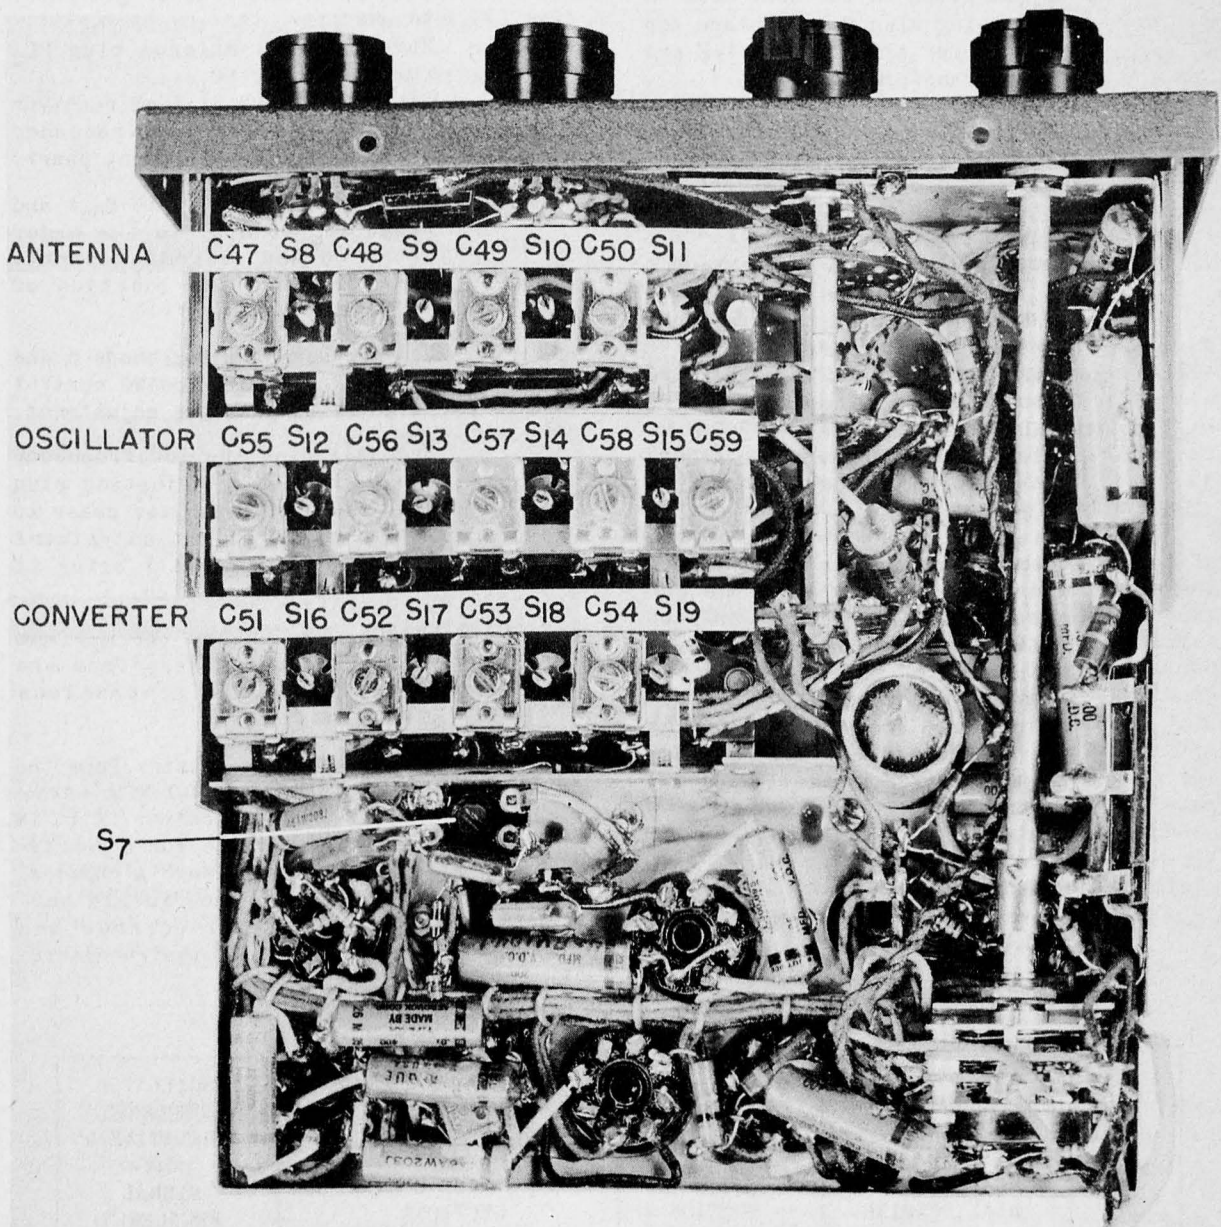


FIG. 5. MODEL S-39 RECEIVER, BOTTOM VIEW OF CHASSIS



Note: It is possible to adjust the B-F-0 pitch without the use of the signal generator. Tune in a c-w signal to exact resonance with the BFO switch set at OFF. Set BFO switch at ON and adjust pitch to the tone desired by turning slug S<sub>7</sub>. Replace top cover after aligning the I-F and B-F-0 transformers.

(e) Setting of controls for R-F alignment -

- ANL, AVC and BFO switches at OFF
- STAND BY switch at ON
- A.F. and R.F. GAIN controls set at maximum gain
- BAND SWITCH at Band to be aligned (See alignment chart)
- POWER SWITCH at BAT. (power cord removed from wall socket)
- BANDSPREAD TUNING at "0"
- Telescoping antenna is collapsed except for bottom section

Note: Only one section of the telescoping antenna shall extend above the top cover of the receiver. (This procedure is necessary to obtain an accurate calibration for the receiver when aligning with the dummy antenna of 6.5 mmfd.) The receiver's top cover must be fastened down for the following adjustments.

(f) R-F alignment -

Leave output meter plug in phone jack (J<sub>1</sub>)

Connect "Hot" lead of signal generator to extended section of the telescoping antenna through the 6.5 mmfd dummy antenna condenser.

Connect ground side of generator to chassis  
Have external antenna plug PL<sub>2</sub> out of socket SO<sub>1</sub>  
Set MAIN TUNING dial of receiver and signal generator frequency as shown in the alignment chart.

Adjust trimmers (C<sub>47</sub> to C<sub>58</sub>) and slugs (S<sub>8</sub> to S<sub>19</sub>) in the order shown on the alignment chart. (See figure 5 for location of adjustment screws).

Note: When aligning bands 3 and 4 "rock" the MAIN TUNING control slightly to peak the adjustment.

When aligning the low frequency end of band 4 by adjusting slug S<sub>15</sub>, the oscillator may cease to function. A slight adjustment of condenser C<sub>59</sub> will bring it back into oscillation.

**E-2. MAINTENANCE** - To ensure the maximum in dependability and usefulness from the Model S-39 receiver a few precautions should be observed.

- (a) Remove run down batteries from the cabinet at once. DO NOT leave batteries in the receiver if it is to be out of service for a considerable period of time. A chemical reaction takes place in old batteries which will corrode the other components of the receiver.

ALIGNMENT CHART

BAND	SIGNAL GENERATOR FREQUENCY AND "MAIN TUNING" DIAL SETTING	ADJUST FOR MAXIMUM OUTPUT		OSCILLATOR FREQUENCY RELATIVE TO SIGNAL FREQUENCY
		OSCILLATOR SECTION	ANTENNA AND CONVERTER SECTIONS	
1	1.4 MC	C <sub>55</sub>	C <sub>47</sub> and C <sub>51</sub>	455 KC Above
	.6 MC	S <sub>12</sub>	S <sub>8</sub> and S <sub>16</sub>	
2	4.0 MC	C <sub>56</sub>	C <sub>48</sub> and C <sub>52</sub>	455 KC Above
	2.0 MC	S <sub>13</sub>	S <sub>9</sub> and S <sub>17</sub>	
3	10.0 MC	C <sub>57</sub>	C <sub>49</sub> and C <sub>53</sub>	455 KC Above
	5.0 MC	S <sub>14</sub>	S <sub>10</sub> and S <sub>18</sub>	
4	28.0 MC	C <sub>58</sub>	C <sub>50</sub> and C <sub>54</sub>	455 KC Below
	14.0 MC	S <sub>15</sub> C <sub>59</sub>	S <sub>11</sub> and S <sub>19</sub>	



- (b) Protect the set from the weather. The loud speaker opening, phone jack, external antenna socket and etc. provide access to the interior of the receiver proper. Excessive moisture can cause serious damage.
- (c) Guard the set against extreme heat and cold. High and low temperatures will affect the life of the batteries.
- (d) Dust and dirt are detrimental to efficient operation. Keep the chassis and parts clean. If dust collects in the condenser plates it should be blown out with dry air.
- (e) When replacing run down "A" and "B" batteries, the middle one must be removed first and the others slide toward the center cabinet "cut-out" in order to remove them. The "A" batteries may be replaced by Burgess #2F4 or Eveready #718. The "B" batteries by Burgess #B-30 or Eveready #762. Any other makes of the same size and voltage may be substituted provided they accommodate the standard battery plugs with which the receiver is equipped.

E-3. SERVICE - The Model S-39 receiver will continue to give satisfactory service over many years if it is given proper attention. It should be checked at least once a year by a competent service man so that failing tubes and other parts can be replaced before they effect associated equipment. The

alignment should be checked at the same time to ensure peak performance.

Whenever tubes are to be removed for testing or replacing, BE SURE the power cord is removed from the wall outlet in addition to having the POWER SWITCH set at OFF.

Extreme care must be used when removing or inserting the small 1T4 and 1R5 tubes as the glass envelope of these tubes are delicate. The metal shields are removed by pressing down and turning in a counterclockwise direction to release the shield's lock.

The neon lamp LM<sub>1</sub>, should operate indefinitely. If it must be replaced it can be removed from the circuit by unsoldering the leads.

Note: As wired in the circuit the neon lamp LM<sub>1</sub> operates as a relaxation oscillator at a frequency determined by the time constant of resistor R<sub>19</sub> and condenser C<sub>28</sub>. Under these conditions it draws far less current from the "B" batteries that it would if operating as a simple glow lamp.

E-4. CAUTION - The carrying-case cabinet is electrically insulated from the chassis and is therefore perfectly safe against shock. Reference to the schematic diagram, figure 2, will show that the chassis is grounded to the power line when operating on A-C or D-C. Serious shocks can be received from various points on and in the chassis therefore be extremely careful when removing the covers or when necessary servicing is being performed. SAFETY FIRST, remove the power cord before working on the receiver whenever possible. Note: The cabinet is electrically grounded to the chassis through condenser C<sub>4</sub>.

## F. SUPPLEMENTARY DATA

F-1. POWER REQUIREMENTS - When operating on 117 Volts A-C or D-C, the power drain is approximately 40 watts.

F-2. WEIGHT - Weight of complete unit with batteries ready for portable operation is 28 pounds.

The two "B" batteries and the one "A" battery should give approximately 100 hours of intermittent service.

F-3. DIMENSIONS - Measurements, overall, including handle, knobs and etc.

Note: To remove the batteries from the rear compartment it is necessary to take out the middle one first, then slide the others toward the middle of the cabinet.

Height - 9 inches.  
Width - 9 inches.  
Depth - 15 inches.

Overall height from table to top of telescoping antenna fully extended is 39.5 inches.

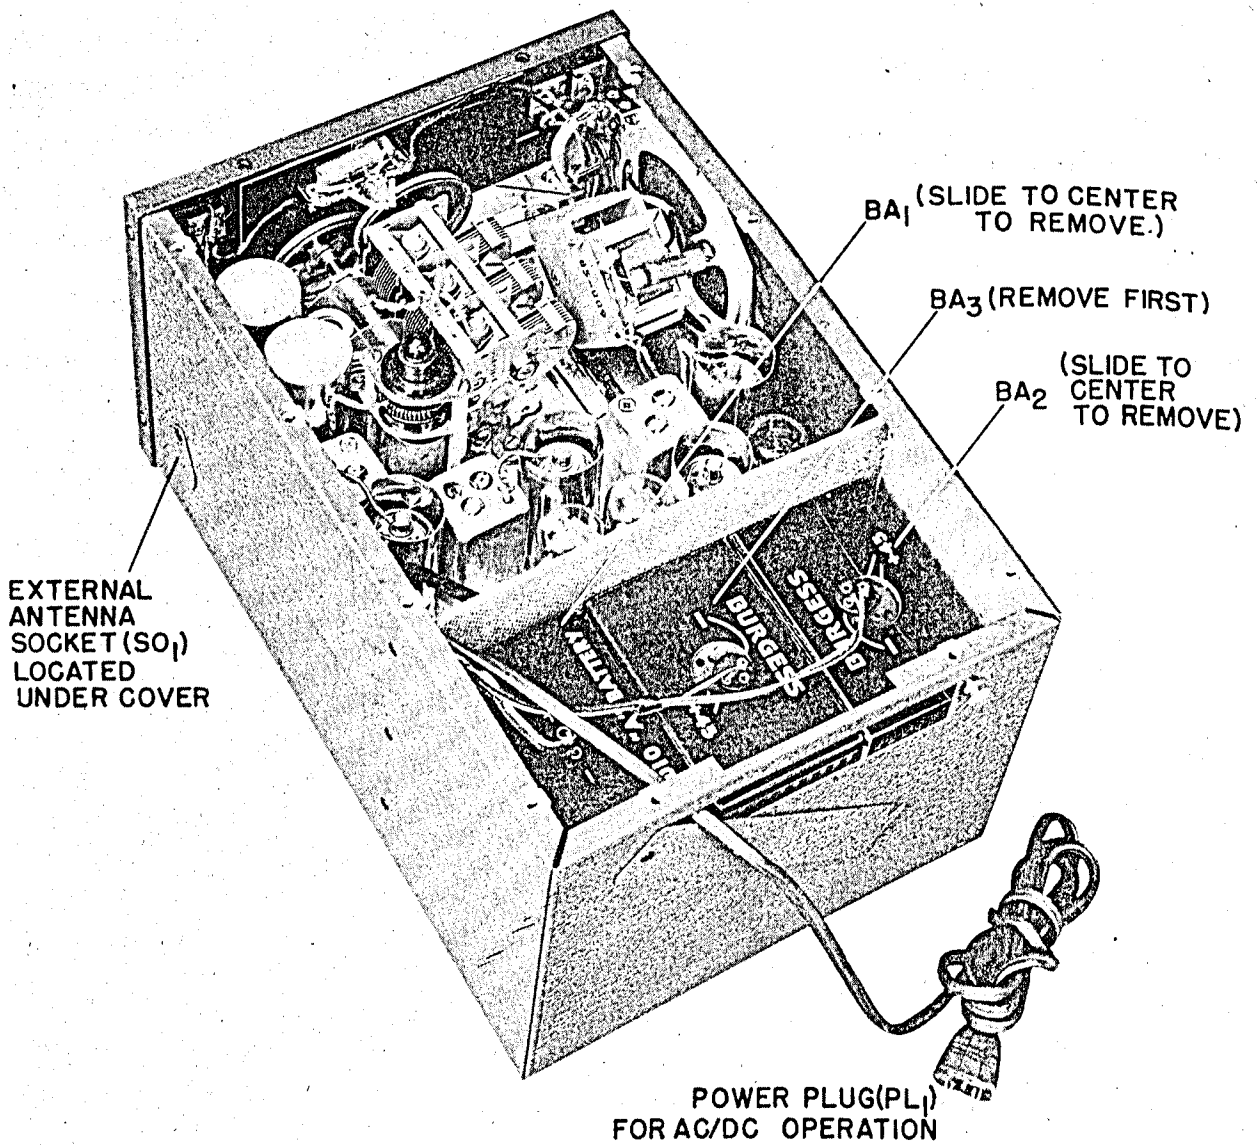


FIG. 6. MODEL S-39 RECEIVER, REAR VIEW, COVER REMOVED, SHOWING POWER CORD COMPARTMENT AND BATTERY COMPARTMENT.

F-4. TABLE OF TUBE SOCKET VOLTAGES  
 Measured from socket pin to ground with 1000 ohm-per-volt meter  
 All voltages are D-C unless otherwise specified.

Tube	Pin Number								Cap.	
	1	2	3	4	5	6	7	8		
Battery Supply										
V <sub>1</sub> 1T4	2.62	87	84	NC	2.62	0	4.1	X	X	
V <sub>2</sub> 1R5	0	65	65	0	0	0	1.5	X	X	
V <sub>3</sub> 1P5GT	0	2.7	87	60	NC	†1.5	1.5	NC	0	
V <sub>4</sub> 1P5GT	0	2.8	88	88	NC	X	1.4	NC	0	
V <sub>5</sub> 1H5GT	0	1.45	62	NC	0	X	0	NC	0	
V <sub>6</sub> 3Q5GT	NC	7.4	84	88	0	X	4.4	5.9	X	
V <sub>7</sub> 35Z5GT	NC	0	NC	X	0	X	0	0	X	
V <sub>8</sub> 1H5GT	0	4.4	*70	NC	0	X	2.8	NC	3.5	
V <sub>9</sub> 35Z5GT	NC	0	NC	X	0	X	0	0	X	
117 Volts AC										
V <sub>1</sub> 1T4	2.6	103	92	NC	2.7	0	4.2	X	X	
V <sub>2</sub> 1R5	0	75	75	0	0	0	1.5	X	X	
V <sub>3</sub> 1P5GT	0	2.5	105	75	NC	†1.45	1.45	NC	0	
V <sub>4</sub> 1P5GT	0	2.95	102	105	NC	X	1.55	NC	0	
V <sub>5</sub> 1H5GT	0	1.5	70	NC	0	X	0	NC	0	
V <sub>6</sub> 3Q5GT	NC	7.6	100	110	0	X	4.6	6.1	X	
V <sub>7</sub> 35Z5GT	NC	0	7.8 A-C	X	114A-C	X	33.5 A-C	110	X	
V <sub>8</sub> 1H5GT	0	4.3	*82.5	NC	0	X	2.95	NC	3.5	
V <sub>9</sub> 35Z5GT	†115 A-C	33.5 A-C	43 A-C	X	114A-C	†115 A-C	65 A-C	110	X	
120 Volts DC										
V <sub>1</sub> 1T4	2.8	103	92	NC	2.8	0	4.2	X	X	
V <sub>2</sub> 1R5	0	72	72	0	0	0	1.5	X	X	
V <sub>3</sub> 1P5GT	0	2.8	103	72	NC	†1.5	1.5	NC	0	
V <sub>4</sub> 1P5GT	0	3.2	102	102	NC	X	1.6	NC	0	
V <sub>5</sub> 1H5GT	0	1.6	87	NC	0	X	0	NC	0	
V <sub>6</sub> 3Q5GT	NC	7.7	100	103	0	X	4.8	6.3	X	
V <sub>7</sub> 35Z5GT	NC	0	7.3	X	118	X	35.	110	X	
V <sub>8</sub> 1H5GT	0	4.8	*85	NC	0	X	3.2	NC	4	
V <sub>9</sub> 35Z5GT	†120	35	43	X	118	120	70	110	X	

NC - No Connection.  
 X - No Pin.  
 \* - With BFO switch at ON.  
 † - Tie Lug.

F-5. LIST OF REPLACEABLE PARTS

REF. SYMBOL	NAME OF PART AND DESCRIPTION	FUNCTION	MFR. CODE	CONTR'S. PART NO.
R <sub>1</sub>	Resistor, 2.2 megohm ± 10%, ¼ watt, carbon	A-V-C decoupling for tube V <sub>1</sub>	ASA	RC10AE225K
R <sub>2</sub>	Same as R <sub>1</sub>	Grid return for tube V <sub>1</sub>		
R <sub>3</sub>	Resistor, 8,200 ohm ± 10%, ½ watt, carbon	Voltage drop for screen of tube V <sub>1</sub>	ASA	RC21AE822K
R <sub>4</sub>	Resistor, variable, ½ megohm ± 20%, carbon	R.F. GAIN control	CT	25C071
R <sub>5</sub>	Resistor, 4700 ohm ± 10%, ¼ watt, carbon	Plate decoupling for oscillator section of tube V <sub>2</sub>	ASA	RC10AE472K
R <sub>6</sub>	Same as R <sub>1</sub>	Grid return for tube V <sub>2</sub>		
R <sub>7</sub>	Resistor, 100,000 ohm ± 10%, ¼ watt, carbon	Grid bias for oscillator section of tube V <sub>2</sub>	ASA	RC10AE104K
R <sub>8</sub>	Resistor, 1.0 megohm ± 10%, ¼ watt, carbon	A-V-C decoupling for tube V <sub>3</sub>	ASA	RC10AE105K
R <sub>9</sub>	Same as R <sub>1</sub>	Grid return for tubes V <sub>1</sub> and V <sub>3</sub> with A-V-C switch set at OFF		
R <sub>10</sub>	Resistor, 51,000 ohm ± 5%, ½ watt, carbon	Primary loading on transformer T <sub>2</sub>	ASA	RC21AE513J
R <sub>11</sub>	Same as R <sub>1</sub>	A-V-C decoupling at diode load of tube V <sub>5</sub>		
R <sub>12</sub>	Same as R <sub>8</sub>	Diode load for A-N-L section of tube V <sub>8</sub>		
R <sub>13</sub>	Same as R <sub>7</sub>	Diode load for tube V <sub>5</sub>		
R <sub>14</sub>	Resistor, variable, ½ megohm ± 20%, carbon	A.F. GAIN control	CT	25C070
R <sub>15</sub>	Resistor, 10 megohm ± 20%, ¼ watt, carbon	Grid return for tube V <sub>5</sub>	ASA	RC10AE106M
R <sub>16</sub>	Same as R <sub>7</sub>	Plate decoupling for tube V <sub>5</sub>		
R <sub>17</sub>	Resistor, 470,000 ohm ± 20%, ¼ watt, carbon	Plate load for tube V <sub>5</sub>	ASA	RC10AE474M
R <sub>18</sub>	Same as R <sub>17</sub>	Grid return for tube V <sub>6</sub>		
R <sub>19</sub>	Same as R <sub>17</sub>	Part of RC oscillator for pilot light LM <sub>1</sub>		
R <sub>20</sub>	Resistor, 47,000 ohm ± 20%, ¼ watt, carbon	Plate load for tube V <sub>8</sub>	ASA	RC10AE473M
R <sub>21</sub>	Same as R <sub>20</sub>	Grid bias for oscillator section of tube V <sub>8</sub>		
R <sub>22</sub>	Not used			
R <sub>23</sub>	Not used			
R <sub>24</sub>	Resistor, 24 ohm ± 5%, 1 watt, carbon	Current limiter for tube V <sub>9</sub>	ASA	RC31AE240J
R <sub>25</sub>	Resistor, 330 ohm ± 5%, 9 watt, wire wound, candohm, type FH	Line voltage drop for filaments of tubes V <sub>7</sub> and V <sub>9</sub>	MT	24A829
R <sub>26</sub>	Not used			

LIST OF REPLACEABLE PARTS - (Cont'd.)

REF. SYMBOL	NAME OF PART AND DESCRIPTION	FUNCTION	MFR. CODE	CONTR'S. PART NO.
R <sub>27</sub>	Resistor, 1000 ohm $\pm$ 10%, $\frac{1}{4}$ watt, carbon	Shunt for filaments of tubes V <sub>4</sub> , V <sub>5</sub> and V <sub>8</sub>	ASA	RC10AE102K
R <sub>28</sub>	Not used.			
R <sub>29</sub>	Resistor, 560 ohm $\pm$ 10%, $\frac{1}{4}$ watt, carbon	Shunt for tubes V <sub>2</sub> and V <sub>3</sub>	ASA	RC10AE561K
R <sub>30</sub>	Same as R <sub>29</sub>	Filament current shunt for tubes V <sub>1</sub> , V <sub>2</sub> and V <sub>3</sub>		
R <sub>31</sub>	Not used			
R <sub>32</sub>	Same as R <sub>27</sub>	Part of filament voltage divider for tubes V <sub>1</sub> , V <sub>2</sub> and V <sub>3</sub>		
R <sub>33</sub>	Resistor, 820 ohm $\pm$ 10%, 1 watt, carbon	Part of filament voltage divider for tubes V <sub>4</sub> , V <sub>5</sub> , V <sub>6</sub> and V <sub>8</sub>	ASA	RC31AE821K
R <sub>34</sub>	Resistor, 1645 ohm $\pm$ 10%, tapped at 800 ohm, 7.4 watt, 2 unit, wire wound, unit #1 800 ohm (R <sub>34</sub> ), unit #2 845 ohm (R <sub>35</sub> ), candohm, type MW-2	Part of filament voltage divider for tubes V <sub>4</sub> , V <sub>5</sub> , V <sub>6</sub> , and V <sub>8</sub>	IRC	24A044
R <sub>35</sub>				
R <sub>36</sub>	Resistor, 820 ohm $\pm$ 10%, $\frac{1}{4}$ watt, carbon	Cathode bias for tube V <sub>6</sub>	ASA	RC10AE821K
R <sub>37</sub>	Not used.			
R <sub>38</sub>	Same as R <sub>24</sub>	Current limiter for tube V <sub>7</sub>		
R <sub>39</sub>	Resistor, 1.5 megohm $\pm$ 20%, $\frac{1}{4}$ watt, carbon	Voltage drop for screen of tube V <sub>3</sub> , in band #1 only.	ASA	RC10AE155M
R <sub>40</sub>	Resistor, 450 ohm tapped at 87 ohm, 7 watt, 2 unit, wire wound, unit #1 363 ohm (R <sub>40</sub> ), unit #2 87 ohm (R <sub>41</sub> ) candohm, special	Adjustable voltage drop for filament of tubes V <sub>1</sub> , V <sub>2</sub> , V <sub>3</sub> , V <sub>4</sub> , V <sub>5</sub> , V <sub>6</sub> , and V <sub>8</sub>	MT	24A819
R <sub>41</sub>				
R <sub>42</sub>	Same as R <sub>7</sub>	Diode load for tube V <sub>5</sub>		
C <sub>1</sub>	Capacitor, variable, 3 section, 2 unit, unit #1-(C <sub>1</sub> ), max. cap. per section 352 mmfd., air dielectric, unit #2-(C <sub>2</sub> ) max. cap. per section 22 mmfd. air dielectric, each unit has separate drive shaft to which pulleys are fixed, type 945-3-20.	Receiver main tuning capacitor	OM	48B055
C <sub>2</sub>				

LIST OF REPLACEABLE PARTS - (Cont'd.)

REF. SYMBOL	NAME OF PART AND DESCRIPTION	FUNCTION	MFR. CODE	CONTR'S. PART NO.
C <sub>3</sub>	Capacitor, 51 mmfd. $\pm 5\%$ , 500 V. D-C working, low loss mica dielectric	External antenna coupling for band #2	ASA	CM20C510J
C <sub>4</sub>	Capacitor, 0.1 mfd. $-10 + 40\%$ , 400 V. D-C working, paper dielectric, type 484	D-C blocking capacitor between electrical ground and cabinet	A	46AV104J
C <sub>5</sub>	Capacitor, 15 mmfd. $\pm 20\%$ , 500 V. D-C working, temp. coeff., $-.00075$ mmfd./mmfd./degree Cent., ceramic dielectric, type 809-047	External antenna coupling for band #1	CRL	47A027
C <sub>6</sub>	Capacitor, 10 mmfd. $\pm 20\%$ , 500 V. D-C working, temp. coeff., $-.00075$ mmfd./mmfd./degree Cent., ceramic dielectric, type 811-013.	Coupling between whip antenna and grid of tube V <sub>1</sub>	CRL	47A028
C <sub>7</sub>	Capacitor, 0.05 mfd. $-10 + 40\%$ , 200 V. D-C working, paper dielectric, type AB	Filament by-pass for tube V <sub>1</sub>	SP	46AU503J
C <sub>8</sub>	Capacitor, 0.01 mfd. $-10 + 40\%$ , 400 V. D-C working, paper dielectric, type AB	Screen grid by-pass for tube V <sub>1</sub>	SP	46AW103J
C <sub>9</sub>	Same as C <sub>8</sub>	D-C blocking capacitor between GND terminal of socket SO <sub>1</sub> and chassis		
C <sub>10</sub>	Capacitor, fixed, cap. 5 to 6.5 mmfd., 500 V. D-C working, temp. coeff. $-.00075$ mmfd./mmfd./degree Cent., ceramic dielectric, type 807-004	Coupling between plate of tube V <sub>1</sub> and grid of tube V <sub>2</sub>	CRL	47A005
C <sub>11</sub>	Same as C <sub>10</sub>	Coupling between plate of tube V <sub>1</sub> and grid of tube V <sub>2</sub> on band #4		
C <sub>12</sub>	Same as C <sub>7</sub>	Plate return by-pass for tube V <sub>1</sub>		

LIST OF REPLACEABLE PARTS - (Cont'd.)

REF. SYMBOL	NAME OF PART AND DESCRIPTION	FUNCTION	MFR. CODE	CONTR'S. PART NO.
C <sub>13</sub>	Same as C <sub>7</sub>	Grid bias by-pass for converter section of tube V <sub>2</sub>		
C <sub>14</sub>	Capacitor, 3 mmfd., twisted wire leads	Additional coupling between oscillator and converter on band #4		
C <sub>15</sub>	Capacitor, 2 mmfd., twisted wire leads	Coupling between oscillator and converter		
C <sub>16</sub>	Same as C <sub>3</sub>	Grid coupling for oscillator section of tube V <sub>2</sub>		
C <sub>17</sub>	Same as C <sub>7</sub>	A-V-C by-pass for tube V <sub>3</sub>		
C <sub>18</sub>	Same as C <sub>8</sub>	Screen by-pass for tube V <sub>3</sub>		
C <sub>19</sub>	Not used			
C <sub>20</sub>	Same as C <sub>7</sub>	Screen by-pass for tube V <sub>4</sub>		
C <sub>21</sub>	Capacitor, 100 mmfd. ± 20%, 500 V. D-C working, mica dielectric	R-F by-pass for diode load of tube V <sub>5</sub>	ASA	CM20A101M
C <sub>22</sub>	Capacitor, 0.004 mfd. -10 + 40%, 600 V. D-C working, paper dielectric, type 684	Audio coupling for triode section of tube V <sub>5</sub>	A	46AZ402J
C <sub>23</sub>	Capacitor, 0.1 mfd. - 10 + 40%, 200 V. D-C working, paper dielectric, type 284	Plate decoupling for tube V <sub>5</sub>	A	46AU104J
C <sub>24</sub>	Same as C <sub>8</sub>	Audio coupling between tube V <sub>5</sub> and tube V <sub>6</sub>		
C <sub>25</sub>	Capacitor, 0.005 mfd. - 10 + 40%, 400 V. D-C working, paper dielectric, type 484	R-F by-pass on plate of tube V <sub>6</sub>	A	46AW502J
C <sub>26</sub>	Capacitor, 0.02 mfd. -10 + 40%, 400 V. D-C working, paper dielectric, type AB	Audio coupling between plate of tube V <sub>6</sub> and the headset	SP	46AW203J
C <sub>27</sub>	Capacitor, 60 mfd. -10 + 50%, 150 V. D-C working, electrolytic, one section of 3 section unit, 6 prong plug-in assembly, type 10B336	Filter by-pass	IC	45A065

LIST OF REPLACEABLE PARTS - (Cont'd.)

REF. SYMBOL	NAME OF PART AND DESCRIPTION	FUNCTION	MFR. CODE	CONTR'S PART NO.
C <sub>28</sub>	Capacitor, 0.02 mfd. -10 + 40%, 400 V. D-C working, paper dielectric, type AB	Part of RC oscillator for pilot light LM <sub>1</sub>	SP	46AW203J
C <sub>29</sub>	Same as C <sub>28</sub>	D-C blocking capacitor for oscillator section of tube V <sub>8</sub>		
C <sub>30</sub>	Capacitor, 3 turn twisted wire leads	B-F-O coupling		
C <sub>31</sub>	Same as C <sub>21</sub>	Grid coupling in oscillator section of tube V <sub>8</sub>		
C <sub>32</sub>	Capacitor, 510 mmfd. ± 5%, 500 V. D-C working, mica dielectric	Resonating capacitor for transformer T <sub>17</sub>	ASA	CM20A511J
C <sub>33</sub>	Same as C <sub>7</sub>	A-N-L coupling between tube V <sub>8</sub> and V <sub>6</sub>		
C <sub>34</sub>	Capacitor, 0.05 mfd. -10 + 40%, 400 V. D-C working, paper dielectric, type 484	Line filter by-pass	A	46AW503J
C <sub>35</sub>	Capacitor, 30 mfd. -10 + 50%, 150 V. D-C working, electrolytic, one part of triple unit - refer to C <sub>27</sub>	Input filter capacitor		
C <sub>36</sub>	Capacitor, 100 mfd. -10 + 65%, 5 V. D-C working, electrolytic, one part of triple unit - refer to C <sub>27</sub>	Filament circuit by-pass		
C <sub>37</sub>	Capacitor, dual, 120 mfd. -10 + 50%, 150 V. D-C working (C <sub>38</sub> ), 60 mfd. -10 ± 65%, 5 V. D-C working (C <sub>37</sub> ), unit hermetically sealed, 4 prong plug-in assembly, type 10B335	Filament circuit by-pass	IC	45A066
C <sub>38</sub>				
C <sub>39</sub>	Capacitor, 4300 mmfd. ± 5%, 500 V. D-C working, mica dielectric	Oscillator pad for band #4	ASA	CM35A432J
C <sub>40</sub>	Capacitor, 240 mmfd. ± 5%, 500 V. D-C working, mica dielectric	Resonating capacitor for high impedance primary section of T <sub>12</sub>	ASA	CM20A241J



LIST OF REPLACEABLE PARTS - (Cont'd.)

REF. SYMBOL	NAME OF PART AND DESCRIPTION	FUNCTION	MFR. CODE	CONTR'S. PART NO.
C <sub>41</sub>	Capacitor, 2000 mmfd. $\pm$ 5%, 500 V. D-C working, mica dielectric	Oscillator pad for band #3	ASA	CM30A202J
C <sub>42</sub>	Capacitor, 910 mmfd. $\pm$ 5%, 500 V. D-C working, mica dielectric	Oscillator pad for band #2	ASA	CM30A911J
C <sub>43</sub>	Capacitor, 390 mmfd. $\pm$ 5%, 500 V. D-C working, mica dielectric	Oscillator pad for band #1	ASA	CM20A391J
C <sub>44</sub>	Same as C <sub>8</sub>	D-C blocking for oscillator section of tube V <sub>2</sub>		
C <sub>45</sub>	Same as C <sub>7</sub>	A-V-C by-pass for tube V <sub>1</sub>		
C <sub>46</sub>	Capacitor, 0.5 mfd. -10 + 40%, 200 V. D-C working, paper dielectric	Filament circuit by-pass		46AT504J
C <sub>47</sub> C <sub>48</sub> C <sub>49</sub> C <sub>50</sub>	Capacitor, 4 unit assembly, mica dielectric, compression type adjustment, trimmers mounted on a single metal strip, 3 units with min. cap. 2.7 mmfd., max. cap. 35 mmfd. (C <sub>47</sub> , C <sub>49</sub> , C <sub>50</sub> ) 1 unit with min. cap. 1.5 mmfd., max. cap. 10 mmfd. (C <sub>48</sub> ) special	Antenna stage trimmer for band #1 Antenna stage trimmer for band #2 Antenna stage trimmer for band #3 Antenna stage trimmer for band #4	UE	44A064
C <sub>51</sub> C <sub>52</sub> C <sub>53</sub> C <sub>54</sub>	Same as C <sub>47</sub> , C <sub>48</sub> , C <sub>49</sub> , C <sub>50</sub> , assembly. C <sub>51</sub> , C <sub>52</sub> , C <sub>53</sub> , C <sub>54</sub> , same as C <sub>47</sub> , C <sub>48</sub> , C <sub>50</sub> ; and C <sub>52</sub> same as C <sub>48</sub> )	Converter stage trimmer for band #1 Converter stage trimmer for band #2 Converter stage trimmer for band #3 Converter stage trimmer for band #4		

LIST OF REPLACEABLE PARTS - (Cont'd.)

REF. SYMBOL	NAME OF PART AND DESCRIPTION	FUNCTION	MFR. CODE	CONT'S. PART NO.		
C <sub>55</sub> C <sub>56</sub> C <sub>57</sub> C <sub>58</sub> C <sub>59</sub>	Capacitor, 5 unit assembly, mica dielectric, compression type adjustment, trimmers mounted on a single metal strip, 2 units with min. cap. 1.5 mmfd., max. cap. 10 mmfd. (C <sub>57</sub> and C <sub>58</sub> ), 2 units with min. cap. 2.7 mmfd., max. cap. 35 mmfd. (C <sub>55</sub> and C <sub>56</sub> ), 1 unit with min. cap. 25 mmfd., MAX. 140 mmfd. (C <sub>59</sub> ), special	Oscillator stage trimmer for band #1 Oscillator stage trimmer for band #2 Oscillator stage trimmer for band #3 Oscillator stage trimmer for band #4 Excitation adjustment for oscillator stage	UE	44A092		
C <sub>60</sub>	Not used					
C <sub>61</sub>	Same as C <sub>40</sub>	R-F by-pass in audio circuit				
C <sub>62</sub>	Same as C <sub>21</sub>	R-F by-pass in A-N-L circuit				
T <sub>1</sub>	Transformer, I-F, 455 KC., fixed primary trimmer 155 mmfd., fixed secondary trimmer 80 mmfd., primary and secondary are tuned by adjustable iron cores, special	Coupling between tubes V <sub>2</sub> and V <sub>3</sub>			SI	50A086
T <sub>2</sub>	Same as T <sub>1</sub> except for length of leads	Coupling between tubes V <sub>3</sub> and V <sub>4</sub>	SI	50B157		
T <sub>3</sub>	Same as T <sub>1</sub> , except for length of leads	Coupling between tubes V <sub>4</sub> and V <sub>5</sub>	SI	50B158		
T <sub>4</sub>	Transformer, A-F, primary to match the output of the type 3Q5GT tube, part of speaker assembly LS <sub>1</sub> . Shown for reference only	Coupling between tube V <sub>6</sub> and speaker LS <sub>1</sub>				
T <sub>5</sub> T <sub>6</sub> T <sub>7</sub> T <sub>8</sub>	Transformer, R-F, 4 unit assembly, tunes from .55 MC. to 30 MC. in 4 bands with condenser C <sub>1</sub> and C <sub>2</sub> , inductance adjusted by movable iron cores.	Couples antenna to tube V <sub>1</sub> on band #1 Couples antenna to tube V <sub>1</sub> on band #2 Couples antenna to tube V <sub>1</sub> on band #3 Couples antenna to tube V <sub>1</sub> on band #4	SWI	51B301		
T <sub>9</sub> T <sub>10</sub> T <sub>11</sub> T <sub>12</sub>	Transformer, R-F, 4 unit assembly, tunes from .55 MC. to 30 MC. in 4 bands with condensers C <sub>1</sub> and C <sub>2</sub> , inductance adjusted by movable iron cores	Oscillator transformer on band #1 Oscillator transformer on band #2 Oscillator transformer on band #3 Oscillator transformer on band #4			SWI	51E303

LIST OF REPLACEABLE PARTS - (Cont'd.)

REF. SYMBOL	NAME OF PART AND DESCRIPTION	FUNCTION	MFR. CODE	CONTR'S. PART NO.
T <sub>13</sub> T <sub>14</sub> T <sub>15</sub> T <sub>16</sub> }	Transformer, R-F, 4 unit assembly, tunes from .55 MC. to 30 MC. in 4 bands with condensers C <sub>1</sub> and C <sub>2</sub> , inductance adjusted by movable iron cores	{ Couples tube V <sub>1</sub> to V <sub>2</sub> on band #1 Couples tube V <sub>1</sub> to V <sub>2</sub> on band #2 Couples tube V <sub>1</sub> to V <sub>2</sub> on band #3 Couples tube V <sub>1</sub> to V <sub>2</sub> on band #4 }	SWI	51B302
T <sub>17</sub>	Transformer, R-F, 455 KC., air core primary winding, secondary winding tuned by adjustable iron core, special	B-F-O transformer	SWI	54A022
L <sub>1</sub>	Reactor, R-F, inductance 165 microhenries, air core, type 790	Plate decoupling for oscillator section of tube V <sub>2</sub>	SWI	53A013
L <sub>2</sub>	Reactor, filter, d-c resistance 225 ohms, max. load current 17 milliamperes, iron core, type S-2882	Plate supply filter	OT	56B031
SW <sub>1A</sub> SW <sub>1B</sub> }	Switch, DPST, slide action, bakelite insulation, steel mtg. plate with 2 holes having 1-1/8" mtg. centers, type 70	STAND-BY switch	OM	60A062
SW <sub>2</sub>	Switch, DPST, slide action, bakelite insulation, steel mtg. plate with 2 holes having 1-1/8" mtg. centers, type 71	ANL switch	OM	60A061
SW <sub>3</sub> SW <sub>4</sub>	Same as SW <sub>2</sub> Switch, SPST, toggle action, refer to SW <sub>7</sub>	BFO switch Controls power for A-C/D-C operation		
SW <sub>5</sub>	Switch, SPDT, slide, bakelite insulation, brass solder lugs, steel mtg. plate with 2 holes having 1-1/8" mtg. centers, type 77	AVC switch	OM	60A130
SW <sub>6</sub>	Switch, rotary selector, 4 position, 3 section, shorting type contacts, bushing 1/4" long, type RM	BAND SWITCH	MA	60B160

25

LIST OF REPLACEABLE PARTS - (Cont'd.)

REF. SYMBOL	NAME OF PART AND DESCRIPTION	FUNCTION	MFR. CODE	CONTR'S. PART NO.
SW <sub>7</sub>	Switch, rotary-selector, 3 position, single section, non-shorting type contacts, has a type 8030-K4 toggle action, SPST A-C switch ganged on rear of assembly "ON" position full clockwise, type H	POWER SWITCH	OM	60A162
SO <sub>1</sub>	Socket, female, 4 contacts, bakelite insulation, wafer type, brass contacts, 2 mtg. holes with $1\frac{1}{4}$ " mtg. centers, type 2642	External antenna connection	CN	10A080
PL <sub>1</sub>	Plug with line cord, 2 conductor, rubber insulation, #18 ga. stranded copper wire, length 6 feet, 2 prong spring type molded on plug, special	Line cord for A-C/D-C operation	E	87A078
BA <sub>1</sub>	Battery, 6 V. D-C, 2 hole socket, 3-7/8" x 2-15/16" x 5 $\frac{1}{2}$ ", type P698A	"A" supply	ROV	27A010
BA <sub>2</sub>	Battery, 45 V. D-C, combination "B" socket, 4-1/8" x 2-9/16" x 5-5/16", type P5303	"B" supply	ROV	27A009
BA <sub>3</sub>	Same as BA <sub>2</sub>	"B" supply		
J <sub>1</sub>	Jack, single circuit, normally closed, brass mechanism, bakelite insulation, type 1J102	Headset connection	U	36A002
LS <sub>1</sub>	Loudspeaker; 4 inch O.D. permanent magnet dynamic, includes transformer T <sub>4</sub> in the assembly, type 4-OM-11A	Loudspeaker	OT	85B009
LM <sub>1</sub>	Lamp, indicator, 1-1/8" leads, clear glass bulb type 4 $\frac{1}{2}$ , type NE-7	Indicates set in operation	GE	39A007

LIST OF REPLACEABLE PARTS - (Cont'd.)

REF. SYMBOL	NAME OF PART AND DESCRIPTION	FUNCTION	MFR. CODE	CONTR'S. PART NO.
V <sub>1</sub>	Tube, pentode, type 1T4	R-F amplifier stage	RCA	90X1T4
V <sub>2</sub>	Tube, pentagrid converter, type 1R5	Converter and oscillator stage	RCA	90X1R5
V <sub>3</sub>	Tube, type, 1P5GT	1st I-F amplifier stage	RCA	90X1P5GT
V <sub>4</sub>	Same as V <sub>3</sub>	2nd I-F amplifier stage		
V <sub>5</sub>	Tube, diode triode, type 1H5GT	2nd detector and 1st audio amplifier stage	RCA	90X1H5GT
V <sub>6</sub>	Tube, beam power amplifier, type 3Q5GT	Audio amplifier stage	RCA	90X3Q5GT
V <sub>7</sub>	Tube, half-wave high-vacuum rectifier, type 35Z5GT	Rectifier	RCA	90X35Z5GT
V <sub>8</sub>	Same as V <sub>5</sub>	B-F-O and A-N-L stage		
V <sub>9</sub>	Same as V <sub>7</sub>	Rectifier		
FOR TROPICAL RECEIVERS USE THE ABOVE PARTS LIST EXCEPT FOR THE FOLLOWING ITEMS:				
T <sub>1</sub>	Transformer, I-F, 455 KC., fixed primary trimmer 155 mmfd., fixed secondary trimmer 85 mmfd., primary and secondary are tuned by adjustable iron cores, vacuum impregnated with zophar #1340 and flash dipped in Hollowax #2012, special (Note: T <sub>1</sub> differs from T <sub>2</sub> and T <sub>3</sub> in the length of the wire leads)	Coupling between tubes V <sub>2</sub> and V <sub>3</sub>	SI	50A150
T <sub>2</sub>	Transformer, I-F, 455 KC., fixed primary trimmer 155 mmfd., fixed secondary trimmer 85 mmfd., primary and secondary are tuned by adjustable iron cores, vacuum impregnated with zophar #1340 and flash dipped in Hollowax #2012, special (Note: T <sub>2</sub> differs from T <sub>1</sub> and T <sub>3</sub> in the length of the wire leads)	Coupling between tubes V <sub>3</sub> and V <sub>4</sub>	SI	50A159

LIST OF REPLACEABLE PARTS - (Cont'd.)

REF. SYMBOL	NAME OF PART AND DESCRIPTION	FUNCTION	MFR. CODE	CONTR'S. PART NO.
T <sub>3</sub>	Transformer, I-F, 455 KC., fixed primary trimmer 155 mmfd., fixed secondary trimmer 85 mmfd., primary and secondary are tuned by adjustable iron cores, vacuum impregnated with zophar #1340 and flash dipped in Hollowax #2012, special, (Note: T <sub>3</sub> differs from T <sub>1</sub> and T <sub>2</sub> in the length of the wire leads)	Coupling between tubes V <sub>4</sub> and V <sub>5</sub>	SI	50A151
T <sub>5</sub> T <sub>6</sub> T <sub>7</sub> T <sub>8</sub>	Transformer, R-F, 4 unit assembly, tunes from 0.55 MC. to 30 MC. in 4 bands with condenser C <sub>1</sub> and C <sub>2</sub> , inductance adjusted by movable iron cores, wax impregnated with Hallowax #2012	Couples antenna to tube V <sub>1</sub> on band #1	SWI	51B648
		Couples antenna to tube V <sub>1</sub> on band #2		
		Couples antenna to tube V <sub>1</sub> on band #3		
		Couples antenna to tube V <sub>1</sub> on band #4		
T <sub>9</sub> T <sub>10</sub> T <sub>11</sub> T <sub>12</sub>	Transformer, R-F, 4 unit assembly, tunes from 0.55 MC. to 30 MC. in 4 bands with condenser C <sub>1</sub> and C <sub>2</sub> , inductance adjusted by movable iron cores, wax impregnated with Hallowax #2012	Oscillator transformer on band #1	SWI	51B650
		Oscillator transformer on band #2		
		Oscillator transformer on band #3		
		Oscillator transformer on band #4		
T <sub>13</sub> T <sub>14</sub> T <sub>15</sub> T <sub>16</sub>	Transformer, R-F, 4 unit assembly, tunes from 0.55 MC. to 30 MC. in 4 bands with condenser C <sub>1</sub> and C <sub>2</sub> , inductance adjusted by movable iron cores, wax impregnated with Hallowax #2012	Couples tube V <sub>1</sub> to tube V <sub>2</sub> on band #1	SWI	51B649
		Couples tube V <sub>1</sub> to tube V <sub>2</sub> on band #2		
		Couples tube V <sub>1</sub> to tube V <sub>2</sub> on band #3		
		Couples tube V <sub>1</sub> to tube V <sub>2</sub> on band #4		

LIST OF REPLACEABLE PARTS - (Cont'd.)

REF. SYMBOL	NAME OF PART AND DESCRIPTION	FUNCTION	MFR. CODE	CONTR'S. PART NO.
L <sub>1</sub>	Reactor, R-F, inductance 170 microhenries, air core, vacuum impregnated with zophar #1340 and flash dipped in Hallowax #2012, type 3485	Plate decoupling for oscillator section of tube V <sub>2</sub>	SWI	53A057
L <sub>2</sub>	Reactor, filter, d-c resistance 250 ohms ± 20%, max. load current 30 milliamperes, inductance 3.6 henrys at 30 milliamperes, vacuum wax impregnated and flash dipped in Hallowax #2012, type 1A1251 modified	Plate supply filter	GT	56B051
SW <sub>6</sub>	Switch, rotary selector, 4 position, 3 section, shorting type contacts, bushing $\frac{1}{4}$ " long, terminal 6 of section 2 front and rear are electrically connected, type RM	BAND SWITCH	MA	60B179

F-6. INDEX TO PARTS MANUFACTURERS

SYMBOL	MANUFACTURER	SYMBOL	MANUFACTURER
A	Aerovox Corp. New Bedford, Mass.	MA	P.R. Mallory & Co. Indianapolis, Indiana
ASA	Any manufacturers meeting American Standard Association specifications	MT	The Muter Co. Chicago, Illinois
CN	Cinch Mfg. Co. Chicago, Illinois	OM	Oak Mfg. Co. Chicago, Illinois
CRL	Centralab Milwaukee, Wis.	OT	Oxford-Tartak Co. Chicago, Illinois
CT	Chicago Telephone Supply Co. Elkhart, Indiana	RCA	R.C.A. Mfg. Co. Inc. Harrison, N.J.
E	Essex Wire Co. Chicago, Illinois.	ROV	Ray-O-Vac Tube Co. Madison, Wis.
GE	General Electric Co. Schenectady, N.Y.	SI	F.W. Sickles Co. Springfield, Mass.
GT	General Transformer Corp. Chicago, Illinois	SP	Sprague Specialties Co. North Adams, Mass.
IC	Industrial Condenser Corp. Chicago, Illinois	SWI	S.W. Inductor Chicago, Illinois
IRC	International Resistance Co. Philadelphia, Penn.	U	Utah Radio Products Co. Chicago, Illinois
		UE	Underwood Electric Co. Chicago, Illinois.



F-7. MAINTENANCE PARTS LIST FOR RADIO RECEIVER R-80 ( )/PR (HALLICRAFTERS SKY RANGER MODEL S-39).

Ref symbol	Signal Corps stock No.	Name of part and description .	Quan per unit	Mfrs part and code No.	†Station stock	†Region stock
	2C4555	RADIO RECEIVER; c-w and modulated signals; super-heterodyne; 4-band; 0.55-30-mc; 100 v AC/DC; or battery-operated.	1	S-39 (H1)		
C1	3D9353VA4-1	CAPACITOR, variable: 3-gang; 2-unit; 2-352-mmF.	1	945-3-20 (01)		
C2		CAPACITOR, variable: same as C1.				
C3	3K2051032	CAPACITOR, mica: 51-mmF; 500 v dc (working).	2	5W (C15)		*
C4	3DA100-185.1	CAPACITOR, fixed: paper; 0.1-mf; 400 v dc (working).	1	484 (A1)	*	*
C5	3D9015-39	CAPACITOR, ceramic: 15-mmF; 500 v dc (working).	1	809-047 (C4)		*
C6	3D9010-67	CAPACITOR, ceramic: 10-mmF; 500 v dc (working).	1	811-013 (C4)		*
C7	3DA50-67.1	CAPACITOR, fixed: paper; 0.05-mf; 200 v dc (working).	6	AB (S8)	*	*
C8	3DA10-191	CAPACITOR, fixed: paper; 0.01-mf; 400 v dc (working).	5	AB (S8)	*	*
C9		CAPACITOR, fixed: same as C8.				

† Parts not stocked in station or region stock are carried in depot stock.

\* Indicates stock available.

F-7. MAINTENANCE PARTS LIST FOR RADIO RECEIVER R-80 ( )/PR (HALLICRAFTERS SKY RANGER MODEL S-39).

Ref symbol	Signal Corps stock No.	Name of part and description	Quan per unit	Mfrs part and code No.	†Station stock	†Region stock
C10	3D9005E75	CAPACITOR, ceramic; 6.5-mmf; 500 v dc (working).	2	807-004 (C1)		*
C11		CAPACITOR, ceramic: same as C10.				
C12		CAPACITOR, fixed: same as C7.				
C13		CAPACITOR, fixed: same as C7.				
C16		CAPACITOR, mica: same as C3.				
C17		CAPACITOR, fixed: same as C7.				
C18		CAPACITOR, fixed; same as C8.				
C20		CAPACITOR, fixed: same as C7.				
C21	3K2010114	CAPACITOR, mica: 0.0001-mf; 500 v dc (working).	3	5W (A1)	*	*
C22	3DA4-48	CAPACITOR, fixed: paper; 0.004-mf; 600 v dc (working).	1	684 (A1)	*	*
C23	3DA100-315	CAPACITOR, fixed: paper; 0.1-mf; 200 v dc (working).	1	284 (A1)	*	*

† Parts not stocked in station or region stock are carried in depot stock.

\* Indicates stock available.

F-7. MAINTENANCE PARTS LIST FOR RADIO RECEIVER R-80 ( )/PR (HALLICRAFTERS SKY RANGER MODEL S-39).

Ref symbol	Signal Corps stock No.	Name of part and description	Quan per unit	Mfrs part and code No.	†Station stock	†Region stock
C24		CAPACITOR, fixed: same as C8.				
C25	3DA5-56	CAPACITOR, fixed: paper; 0.005-mf; 400 v dc (working).	1	484 (A1)	*	*
C26	3DA2-137	CAPACITOR, fixed: paper; 0.02-mf; 400 v dc (working).	3	AB (S8)	*	*
C27) C35) C36)	3DB100-16	CAPACITOR UNIT, electrolytic: 3-section; 30-mf; 150 v dc (working); 60-mf; 150 v dc (working); 100-mf; 5 v dc (working).	1	10B336 (I8)	*	*
C28		CAPACITOR, fixed: same as C26.				
C29		CAPACITOR, fixed: same as C26.				
C31		CAPACITOR, mica: same as C21.				
C32	3K2051112	CAPACITOR, mica: 510-mmf; 500 v dc (working).	1	5W (C15)		*
C33		CAPACITOR, fixed: same as C7.				
C34	3DA50-1.3	CAPACITOR, fixed: paper; 0.05-mf; 400 v dc (working).	1	484 (A1)	*	*
C35		CAPACITOR UNIT, see C27.				

† Parts not stocked in station or region stock are carried in depot stock.  
 \* Indicates stock available.

F-7. MAINTENANCE PARTS LIST FOR RADIO RECEIVER R-80 ( )/PR (HALLICRAFTERS SKY RANGER MODEL S-39).

Ref symbol	Signal Corps stock No.	Name of part and description	Quan per unit	Mfrs part and code No.	†Station stock	†Region stock
C36		CAPACITOR UNIT, see C27.				
C37) C38)	3DB120	CAPACITOR UNIT, 2-section: 120-mf; 150 v dc (working); 60-mf; 5 v dc (working).	1	10B335 (I8)	*	*
C39	3K3543212	CAPACITOR, mica: 0.0043-mf; 500 v dc (working).	1	1W (C15)		*
C40	3K2024112	CAPACITOR, mica: 240-mmf $\pm 5\%$ ; 500 v dc (working); CM20A241J.	1			*
C41	3K3020212	CAPACITOR, mica: 0.002-mf $\pm 5\%$ ; 500 v dc (working); CM30A202J.	1		*	*
C42	3K3091112	CAPACITOR, mica: 910-mmf $\pm 5\%$ ; 500 v dc (working); CM30A911J.	1			*
C43	3K2039112	CAPACITOR, mica: 390-mmf $\pm 5\%$ ; 500 v dc (working); CM20A391J.	1			
C44		CAPACITOR, fixed: same as C8.				
C45		CAPACITOR, fixed: same as C7.				

† Parts not stocked in station or region stock are carried in depot stock.

\* Indicates stock available.

F-7. MAINTENANCE PARTS LIST FOR RADIO RECEIVER R-80 ( )/PR (HALLICRAFTERS SKY RANGER MODEL S-39).

Ref symbol	Signal Corps stock No.	Name of part and description	Quan per unit	Mfrs part and code No.	†Station stock	†Region stock
C46	3DA50-67.1	CAPACITOR, fixed: paper; 0.5-mf; 200 v dc (working).	1	284 (A1)	*	*
C47)	3D9035V-35	CAPACITOR UNIT.	2	44A064 (H1)		
C48)						
C49)						
C50)						
C51)						
C52)		CAPACITOR UNIT: same as C47, C48, C49, and C50.				
C53)						
C54)						
C55)	3D9140V-18	CAPACITOR UNIT.	1	44A092 (H1)		
C56)						
C57)						
C58)						
C59)						
C61	3K2024112	CAPACITOR, mica: 240-mmf; 500 v dc (working).	1	5W (C15)		*
C62		CAPACITOR, mica: same as C21.				
J1	4C4311-1	JACK, telephone: single ckt; nc.	1	1J102 (U4)		*

† Parts not stocked in station or region stock are carried in depot stock.  
 \* Indicates stock available.

F-7. MAINTENANCE PARTS LIST FOR RADIO RECEIVER R-80 ( )/PR (HALLICRAFTERS SKY RANGER MODEL S-39).

Ref symbol	Signal Corps stock No.	Name of part and description	Quan per unit	Mfrs part and code No.	†Station stock	†Region stock
L1	30375-22	COIL, radio, RF: 165 $\mu$ h inductance.	1	790 (S26)		*
L2	305750	COIL, radio, AF: filter; 225-ohm d-c resistance.	1	S-2882 1A1251 (C28)		*
LM1	225946.1	LAMP, glow: pilot; neon.	1	NE-7 (G3)	*	*
R1	3RC10BE225K	RESISTOR, fixed: 2.2-meg; 1/4-watt; carbon.	5	BT-1/4 (I2)	*	*
R2		RESISTOR, fixed: same as R1.				
R3	3Z6582-3	RESISTOR, fixed: 8,200-ohm; 1/2-watt; carbon.	1	BT-1/2 (I2)	*	*
R4	227272-16.3	RESISTOR, variable: potentiometer; 500,000-ohm; 1/2-watt; carbon.	1	**25C071 (H1)	*	*
R5	3RC10AE472K	RESISTOR, fixed: 4,700-ohm; 1/4-watt; carbon.	1	BT-1/4 (I2)		*

† Parts not stocked in station or region stock are carried in depot stock.

\* Indicates stock available.

\*\* Indicates Hallicrafter number.

F-7. MAINTENANCE PARTS LIST FOR RADIO RECEIVER R-80 ( )/PR (HALLICRAFTERS SKY RANGER MODEL S-39).

Ref symbol	Signal Corps stock No.	Name of part and description	Quan per unit	Mfrs part and code No.	†Station stock	†Region stock
R6		RESISTOR, fixed: same as R1.				
R7	3RC10AE104K	RESISTOR, fixed: 100,000-ohm; 1/4-watt; carbon.	4	BT-1/4 (I2)	*	*
R8	3RC10AE105K	RESISTOR, fixed: 1-meg; 1/4-watt; carbon.	2	BT-1/4 (I2)	*	*
R9		RESISTOR, fixed: same as R1.				
R10	3RC21AE513J	RESISTOR, fixed: 51,000-ohm; 1/2-watt; carbon.	1	BT-1/2 (I2)	*	*
R11		RESISTOR, fixed: same as R1.				
R12		RESISTOR, fixed: same as R8.				
R13		RESISTOR, fixed: same as R7.				
R14	2Z7272-162	RESISTOR, variable: potentiometer; 500,000-ohm; 1/4-watt; carbon.	1	35 (028)	*	*
R15	3RC10AE106M	RESISTOR, fixed: 10-meg; 1/4-watt; carbon.	1	BT-1/4 (I2)		*

† Parts not stocked in station or region stock are carried in depot stock.

\* Indicates stock available.

F-7. MAINTENANCE PARTS LIST FOR RADIO RECEIVER R-80 ( )/PR (HALLICRAFTERS SKY RANGER MODEL S-39).

Ref symbol	Signal Corps stock No.	Name of part and description	Quan per unit	Mfrs part and code No.	†Station stock	†Region stock
R16		RESISTOR, fixed: same as R7.				
R17	3RC10AE474M	RESISTOR, fixed: 470,000-ohm; 1/4-watt; carbon.	3	BT-1/4 (I2)	*	*
R18		RESISTOR, fixed: same as R17.				
R19		RESISTOR, fixed: same as R17.				
R20	3RC10AE473M	RESISTOR, fixed: 47,000-ohm; 1/4-watt; carbon.	2	BT-1/4 (I2)	*	*
R21		RESISTOR, fixed: same as R20.				
R24	3Z6002E5-36	RESISTOR, fixed: 24-ohm; 1-watt; carbon.	2	BT-1 (I2)	*	*
R25	3Z6033-27	RESISTOR, fixed: 330-ohm; 9-watt; wire-wound.	1	FH (M12)	*	*
R27	3RC10AE102K	RESISTOR, fixed: 1,000-ohm; 1/4-watt; carbon.	2	BT-1/4 (I2)	*	*
R29	3RC10AE561K	RESISTOR, fixed: 560-ohm; 1/4-watt; carbon.	2	BT-1/4 (I2)	*	*

† Parts not stocked in station or region stock are carried in depot stock.

\* Indicates stock available.



F-7. MAINTENANCE PARTS LIST FOR RADIO RECEIVER R-80 ( )/PR (HALLICRAFTERS SKY RANGER MODEL S-39).

Ref symbol	Signal Corps stock No.	Name of part and description	Quan per unit	Mfrs part and code No.	†Station stock	†Region stock
R30		RESISTOR, fixed: same as R29.				
R32		RESISTOR, fixed: same as R27.				
R33	3RC31AE821K	RESISTOR, fixed: 820-ohm; 1-watt; carbon.	1	BT-1 (I2)	*	*
R34	3Z6616-28	RESISTOR, fixed: 1,645-ohm; tapped at 800 ohms; 7.4-watt; wire-wound.	1	MW-2 (I2)	*	*
R35		RESISTOR, fixed: same as R34.				
R36	3RC10AE821K	RESISTOR, fixed: 820-ohm; 1/4-watt; carbon.	1	BT-1/4 (I2)	*	*
R38		RESISTOR, fixed: same as R24.				
R39	3RC10AE155M	RESISTOR, fixed: 1.5-meg; 1/4-watt; carbon.	1	BT-1/4 (I2)	*	*
R40) R41)	3Z6045-24	RESISTOR, fixed: 450-ohm; tapped at 87 ohms; 7-watt; wire-wound.	1	BT-7 (I2)	*	*
R42		RESISTOR, fixed: same as R7.				

† Parts not stocked in station or region stock are carried in depot stock.

\* Indicates stock available.

F-7. MAINTENANCE PARTS LIST FOR RADIO RECEIVER R-80 ( )/PR (HALLICRAFTERS SKY RANGER MODEL S-39).

Ref symbol	Signal Corps stock No.	Name of part and description	Quan per unit	Mfrs part and code No.	†Station stock	†Region stock
S01	2Z3065-12	CONNECTOR, female contact: 4-contact; wafer.	1	2642 (G6)		
SW1A) SW1B)	3Z9835-4	SWITCH, slide: DPST.	1	70 (01)		*
SW2	3Z9835-4.1	SWITCH, slide: DPST.	2	71 (01)	*	*
SW3		SWITCH, slide: same as SW2.				
SW5	3Z9835-4.2	SWITCH, slide: DPDT.	1	77 (01)		*
SW6	3Z9825-55.45	SWITCH, rotary: band; 4-position; 3-section.	1	RM (M1)		*
SW7	3Z9825-62.129	SWITCH, rotary: 3-position; wafer.	1	H (01)		*
T1	2Z9641.146	TRANSFORMER, IF: 455-kc; assembly, includes 2 capacitors.	1	**50A150 (S3)		*
T2	2Z9641.145	TRANSFORMER, IF: 455-kc; assembly, includes 2 capacitors.	1	**50A159 (S3)		*
T3	2Z9641.144	TRANSFORMER, IF: 455-kc; assembly, includes 2 capacitors.	1	**50A151 (S3)		*

† Parts not stocked in station or region stock are carried in depot stock.

\* Indicates stock available.

\*\* Indicates Hallicrafter number.

F-7. MAINTENANCE PARTS LIST FOR RADIO RECEIVER R-80 ( )/PR (HALLICRAFTERS SKY RANGER MODEL S-39).

Ref symbol	Signal Corps stock No.	Name of part and description	Quan per unit	Mfrs part and code No.	†Station stock	†Region stock
T5) T6) T7) T8)	2C4555/C1	COIL, radio, RF: 4-unit assembly; 0.55-30-mc.	1	**51B301 (S26)		
T9 ) T10) T11) T12)	2C4555/C3	COIL, radio, RF: 4-unit assembly; 0.55-30-mc.	1	**51B303 (S26)		
T13) T14) T15) T16)	2C4555/C2	COIL, radio, RF: 4-unit assembly; 5.5-30-mc.	1	**51B302 (S26)		
T17	2Z9644.25	COIL, radio, RF: 455-kc.	1	**54A022 (G22)		*
V1	2J1T4	TUBE JAN-1T4.	1	1T4 (R2)	*	*
V2	2J1R5	TUBE JAN-1R5.	1	1R5 (R2)	*	*
V3	2J1P5GT	TUBE JAN-1P5GT.	2	1P5GT (R2)	*	*

† Parts not stocked in station or region stock are carried in depot stock.

\* Indicates stock available.

\*\* Indicates Hallicrafter number.

F-7. MAINTENANCE PARTS LIST FOR RADIO RECEIVER R-80 ( )/PR (HALLICRAFTERS SKY RANGER MODEL S-39).

Ref symbol	Signal Corps stock No.	Name of part and description	Quan per unit	Mfrs part and code No.	†Station stock	†Region stock
V4		TUBE JAN-1P5GT: same as V3.				
V5	2J1H5GT	TUBE JAN-1H5GT.	2	1H5GT (R2)	*	*
V6	2J3Q5GT	TUBE JAN-3Q5GT.	1	3Q5GT (R2)	*	*
V7	2J35Z5GT	TUBE JAN-35Z5GT.	2	35Z5GT (R2)	*	*
V8		TUBE JAN-1H5GT: same as V5.				
V9		TUBE JAN-35Z5GT: same as V7.				

† Parts not stocked in station or region stock are carried in depot stock.

\* Indicates stock available.

F-8. LIST OF MANUFACTURERS.

<u>CODE</u>	<u>MANUFACTURER'S NAME</u>
A1	Aerovox Corp.
C1	Carborundum Co.
C4	Centralab.
C6	Cinch Mfg. Corp.
C15	Cornell-Dubilier Electric Corp.
C28	Chicago Telephone Supply Co.
G3	General Electric Co.
G4	Goetz Gasket & Packing Co., Inc.
G22	Guthman, E. I. & Co., Inc.
H1	The Hallicrafters Co.
I2	International Resistance Co.
I8	Industrial Condenser Corp.
M1	Mallory, P. R. & Co.
M12	Muter Co.
O1	Oak Mfg. Co.
R2	RCA Mfg. Co.
S3	Sickles, F. W. Co.
S8	Sprague Products Co.
S26	S. W. Inductor Co.
U4	Utah Radio Products Co.

## GUARANTEE

This receiver is guaranteed to be free from any defect in workmanship and material that may develop within a period of ninety (90) days from date of purchase, under the terms of the standard guarantee, as designated by the Radio Manufacturers Association. Any part or parts that prove defective within this period will be replaced without charge when subjected to examination at our factory, providing such defect, in our opinion, is due to faulty material or workmanship, and not caused by tampering, abuse or normal wear. All such adjustments to be made F.O.B. the factory.

Should this receiver require any adjustments, your dealer or distributor has complete technical service in-

formation, or the factory will be glad to assist you in any problem direct.

Should it be necessary to return any part or parts to the factory, a "Return Material Permit" must be obtained in advance by first writing the Adjustment Department, who will issue due authorization under the terms of the guarantee.

The Hallicrafters Co. reserves the right to make changes in design or add improvements to instruments manufactured by them, without incurring any obligation to install the same in any instrument previously purchased.

All Hallicrafters receivers are built under patents of Radio Corporation of America and Hazeltine Corporation.

## NOTICE

Shipping Weight 31½ lbs.

Carton Dimensions 16½ x 11½ x 10½ inches

THE SIGNAL CORPS MUSEUM  
FORT MONMOUTH, NEW JERSEY  
PROPERTY OF SIGNAL CORPS, U. S. ARMY

Acc 407-1958  
MRS. D. FRAVEL DNI